


# xPrintServer Quick Start Guide


## WHAT'S INSIDE



xPrintServer

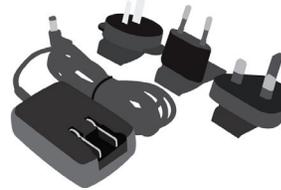

Power Cord with regional adapters

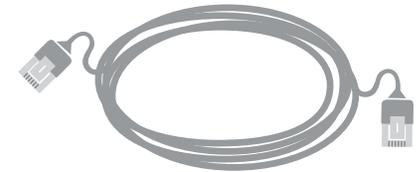

RJ45 CAT5 Ethernet Cable - 3'


## 1 QUICK CONNECT

1. Connect the xPrintServer to the network with the Ethernet cable. The xPrintServer can be connected to a router, switch or hub anywhere on your network.
2. Power up the xPrintServer with the supplied power cord.
3. The xPrintServer will auto-discover and auto-provision all printers on your network. The glowing "X" will pulse slowly to show it's ready for printing.

## 2 HOW TO PRINT

1. Using your iPad, iPhone or other iOS device, **Open** the web page, email, photo, etc. that you wish to print and choose the icon to open the native print menu: 

Select **Print** on your Apple® device.

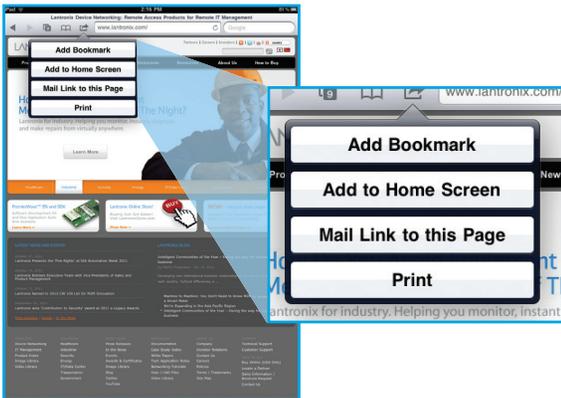

2. From the Printer Options menu, choose **Printer** to display all available networked printers.



3. **Select** the appropriate printer. Then, select the number of copies and choose **Print**.



## Technical Support

For technical support queries, visit <http://www.lantronix.com/support> or call (800) 422-7044 Monday - Friday from 6:00 a.m. - 5:00 p.m. Pacific Time, excluding holidays.

**For Custom Configuration & Product Documentation:** Using a web browser log into the xPrintServer admin interface at **xPrintServer.local** with USER ID = admin and PASSWORD = PASS (both case sensitive)

**Note:** USB connected printers are not supported by the xPrintServer - Network Edition