



Vodafone MachineLink 4G Lite

Important notice

This device, like any wireless device, operates using radio signals which cannot guarantee the transmission and reception of data in all conditions. While the delay or loss of signal is rare, you should not rely solely on any wireless device for emergency communications or otherwise use the device in situations where the interruption of data connectivity could lead to death, personal injury, property damage, data loss, or other loss. Lantronix and Vodafone accept no responsibility for any loss or damage resulting from errors or delays in transmission or reception, or the failure of the Vodafone MachineLink 4G Lite to transmit or receive such data.

Safety and hazards



Warning – Do not connect or disconnect cables or devices to or from the USB port, SIM card tray, Ethernet port or the terminals of the Molex power connector in hazardous locations such as those in which flammable gases or vapours may be present, but normally are confined within closed systems; are prevented from accumulating by adequate ventilation; or the location is adjacent to a location from which ignitable concentrations might occasionally be communicated.

Trademark Notice

This product may reference NetComm. On December 26, 2024, Lantronix, Inc. acquired the Industrial Internet of Things (IIoT) product portfolio from NetComm Wireless Pty Ltd and is authorized to use the NetComm trademark in association with this product.

Copyright

Copyright© 2026 Lantronix, Inc. All rights reserved.

Copyright© 2026 Vodafone Group Plc. All rights reserved.

The information contained herein is proprietary to Lantronix, Inc. and Vodafone. No part of this document may be translated, transcribed, reproduced, in any form, or by any means without prior written consent of Lantronix, Inc. and Vodafone.

Trademarks and registered trademarks are the property of Lantronix, Inc. or Vodafone Group or their respective owners. Specifications are subject to change without notice. Any images shown may vary slightly from the actual product.



Note – This document is subject to change without notice.

Save our environment

When this equipment has reached the end of its useful life, it must be taken to a recycling centre and processed separately from domestic waste.

The cardboard box, the plastic contained in the packaging, and the parts that make up this device can be recycled in accordance with regionally established regulations. Never dispose of this electronic equipment along with domestic waste. You may be subject to penalties or sanctions under the law. Instead, ask for disposal instructions from your municipal government.

Please be responsible and protect our environment.

Document history

This guide covers the following products:

Vodafone MachineLink 4G Lite

Ver.	Document Description	Date
v1.0	First document release	25 October 2018
v1.1	Updated <i>Installing the router</i> section with new images	2 November 2018
v1.2	Added <i>Appendix F: Serial Port Wiring</i> details and cross-referenced the Data Stream Manager section to it.	15 April 2019
v1.3	Updated Data stream manager descriptions	4 June 2019
v1.4	Added notice regarding availability of VPN features on units sold in Russia.	15 July 2019
v1.5	Deleted reference to factory password in QSG	6 September 2019
v1.6	Added PADD mode description	20 September 2019
v1.7	Added new features: • Data connection settings supports IPv4v6 PDP Type • IPS Firewall • Serial data status • Site and location settings	18 January 2021
v1.8	Updated band options under Operator settings to include the NTC-227	10 August 2021
v1.9	Modernized some terminology	6 September 2021
v2.0	Updated Open Source Disclaimer statement	2 December 2021
A	Replaced references to Netcomm with Lantronix Updated for Firmware Release 2.1.24.0 which includes the following: • Added LDAP settings • Added Digital pulse option for pins in IO configuration • Removed HTTP and Telnet protocols from Administration settings	June 2026

Table i. - Document Revision History



Note – Before performing the instructions in this guide, please ensure that you have the latest firmware version installed on your router.

Visit <https://www.lantronix.com/vodafone-resource-center/vodafone-machinelink-4g-lite/> to download the latest firmware.



Note – Some functions described in this document require that the router is assigned with a publicly routable IP address.

Please ensure that your mobile carrier has provided you with a publicly routable IP address before performing the instructions in this document.

Table of contents

Overview	8
Introduction	8
Target audience	8
Prerequisites	8
Notation	8
Product introduction	9
Product overview	9
Product features	9
Package contents	10
Physical dimensions and indicators	11
Physical dimensions	11
LED indicators	12
Signal strength LEDs	13
LED update interval	13
Ethernet port LED indicators	14
Interfaces	14
Placement of the router	15
Mounting options	15
Mounted flat against the wall	15
Perpendicular to the wall	16
C Section DIN Rail mount	16
Mounting bracket	17
Using the mounting bracket for wall mounting	18
Using the mounting bracket for Top hat DIN rail mounting	18
Desk mount	20
Installation and configuration of the Vodafone MachineLink 4G Lite router	21
Powering the router	21
DC power via 6-pin connector	21
DC power via field terminated power source	21
Power consumption	22
Average power consumption figures	22
Viewing power source information	22
Installing the router	23
Advanced configuration	25
Initialisation	25
Configure as a new device	26
Restore configuration from a previous backup file	28
Logging in	29
Status	30
Networking	34
Wireless WAN	34
Data connection	34
Operator settings	42
Roaming settings	46
SIM management	50
Configuring failover based on network and usage factors	50
SIM security settings	61
Connect on demand	64
LAN	69

LAN configuration.....	69
DHCP	70
Ethernet WAN/LAN.....	74
Interface assignment	74
WAN configuration	75
IP-subnet based VLAN	76
PPPoE.....	78
WAN failover	79
Hardware link.....	80
Ping monitor.....	80
Routing	87
Static	87
RIP.....	91
Redundancy (VRRP) configuration	92
Port forwarding.....	94
DMZ.....	95
Router firewall.....	96
MAC / IP / Port filtering	98
Creating a MAC / IP / Port filtering rule.....	98
VPN	101
IPSec.....	101
OpenVPN.....	106
PPTP client.....	113
GRE tunnelling.....	116
SCEP client.....	118
Services	121
Dynamic DNS	121
Network time (NTP).....	122
Data stream manager	123
Endpoints	123
Streams	134
SNMP	136
SNMP configuration	136
Configuring SNMP	137
SNMP traps.....	138
PADD.....	139
Serial data status	143
TR-069	144
TR-069 configuration	145
OMA-Lightweight M2M	146
Timeouts	147
GPS	147
NMEA support.....	147
GPS configuration.....	148
Mobile Station Based Assisted GPS configuration	150
Odometer.....	151
Geofence.....	152
IO configuration.....	156
Low power mode	159
Sleep settings	160
Wake settings.....	161
Event notification	162
Notification configuration	162
Event types.....	164
Destinations	165
Email settings.....	167
SMS messaging	168
Setup	168
SMS forwarding configuration.....	170
Redirect to mobile.....	170
Redirect to TCP / UDP server address.....	170
New message	170

Inbox / Sent Items	171
Diagnostics	172
SMS diagnostics and command execution configuration.....	174
Allow list for diagnostic or execution SMS	176
Sending an SMS Diagnostic Command	177
Types of SMS diagnostic commands	177
SMS acknowledgment replies.....	178
SMS command format.....	178
List of get/set commands	180
List of basic RDB variables	183
Network scan and manual network selection by SMS	184
SMS diagnostics examples	187
Network quality	189
System.....	191
Log	191
System log	191
Diagnostic log	192
IPSec log	193
Event notification log	194
System log settings	195
Ping watchdog	197
System configuration	200
Settings backup and restore	200
Upload.....	201
Software applications manager	204
Signature public keys	205
Administration	205
Administration settings	205
Server certificate	210
SSH key management	214
LED operation mode.....	216
Site settings.....	217
LDAP Settings	217
Hardware reset settings	219
USB-OTG	220
Storage	220
Reboot	223
Logging out.....	223
Help.....	224
Appendix A: Tables	225
Appendix B: Default Settings	227
Appendix C: Recovery mode	229
Accessing recovery mode	229
Status.....	230
Log	231
Application installer	232
Settings	232
Reboot	233
Appendix D: HTTPS - Uploading a self-signed certificate	234
Appendix E: RJ45 connectors	236
Appendix F: Serial port wiring.....	237
Appendix G: Using USB devices.....	239
Windows	239
Mac OS	239
Linux / Smartphones.....	239

Appendix H: Inputs/Outputs.....	240
Overview.....	240
Hardware Interface	240
Wiring Examples.....	241
Open Collector Output driving a relay	241
Logic level Output.....	241
LED Output	243
Digital inputs	243
NAMUR Sensor.....	244
Analogue Sensor with Voltage output	244
Analogue Sensor with 4 to 20mA output.....	245
Analogue Sensor with Thermistor	245
System Example –Solar powered Router with battery backup	246
Open Source Disclaimer.....	248
Safety and product care.....	249

Overview

Introduction

This document provides you all the information you need to set up, configure and use the Vodafone MachineLink 4G Lite router.

Target audience

This document is intended for system integrators or experienced hardware installers who understand telecommunications terminology and concepts.

Prerequisites

Before continuing with the installation of your Vodafone MachineLink 4G Lite, please confirm that you have an electronic computing device with a working Ethernet network adapter and a web browser such as Mozilla Firefox® or Google Chrome™.

Notation

The following symbols are used in this document:



Note – The following note provides useful information.



Important – The following note requires attention.



Warning – The following note provides a warning.

Product introduction

Product overview

- Ruggedized industrial cellular router supporting 4G LTE Cat 1 with failover to 3G/2G.
- An Ethernet port, a configurable RS232/RS422/RS485 Serial port and three multi-purpose I/O ports for flexible local connectivity.
- Integrated GPS support with an active GPS Antenna via an external SMA connector.
- Industrial features, including a rugged enclosure, a wide operating temperature range, a wide input voltage range and multiple wall mounting options.
- Intelligent, Tri-Colour LED display for clear, easy to read modem status information
- Ignition sensing port for graceful shutdown and startup in vehicle applications.
- Configurable power save mode with minimum current draw when not operational.
- VPN support for establishing a secure connection over public cellular network using OpenVPN.
- Embedded Linux based OS with a 1GHz processor and 512MB of flash memory storage allowing for the installation of custom, edge processing applications. Software Development Kit (SDK) is available.
- Web interface for easy centralized configuration and management from any PC and full feature management via secure SMS
- Support for firmware upgrades over the air
- Extensive device fleet management capabilities with support for TR-069, SNMP, LWM2M
- Integration with Vodafone GDSP back end
- Roaming algorithm with prioritisation for cost effective, flawless network connection across the globe

Product features

The Vodafone MachineLink 4G Lite is a feature-packed Industrial IoT device designed to provide real-time wireless connectivity even in harsh environments at an affordable price. Compatible with Vodafone networks worldwide, MachineLink 4G Lite is managed by Vodafone's global IoT platform enabling remote management and out-of-the-box connectivity wherever you are. The Software Development Kit (SDK) allows you to develop your own software applications for large scale compatibility and an easy path to large deployments across a broad range of industries. The Vodafone MachineLink 4G Lite meets the global demand for a reliable and cost-effective Industrial IoT device that successfully caters to mass deployment across businesses.

Package contents

The Vodafone MachineLink 4G Lite router package consists of:

- 1 x Vodafone MachineLink 4G Lite Router
- 2 x Cellular antennas
- 1 x 1.5m Yellow Ethernet cable
- 1 x DIN rail mounting bracket
- 1 x Quick start guide

If any of these items are missing or damaged, please contact your Vodafone sales representative or the support team.

Physical dimensions and indicators

Physical dimensions

Below is a list of the physical dimensions of the Vodafone MachineLink 4G Lite router.

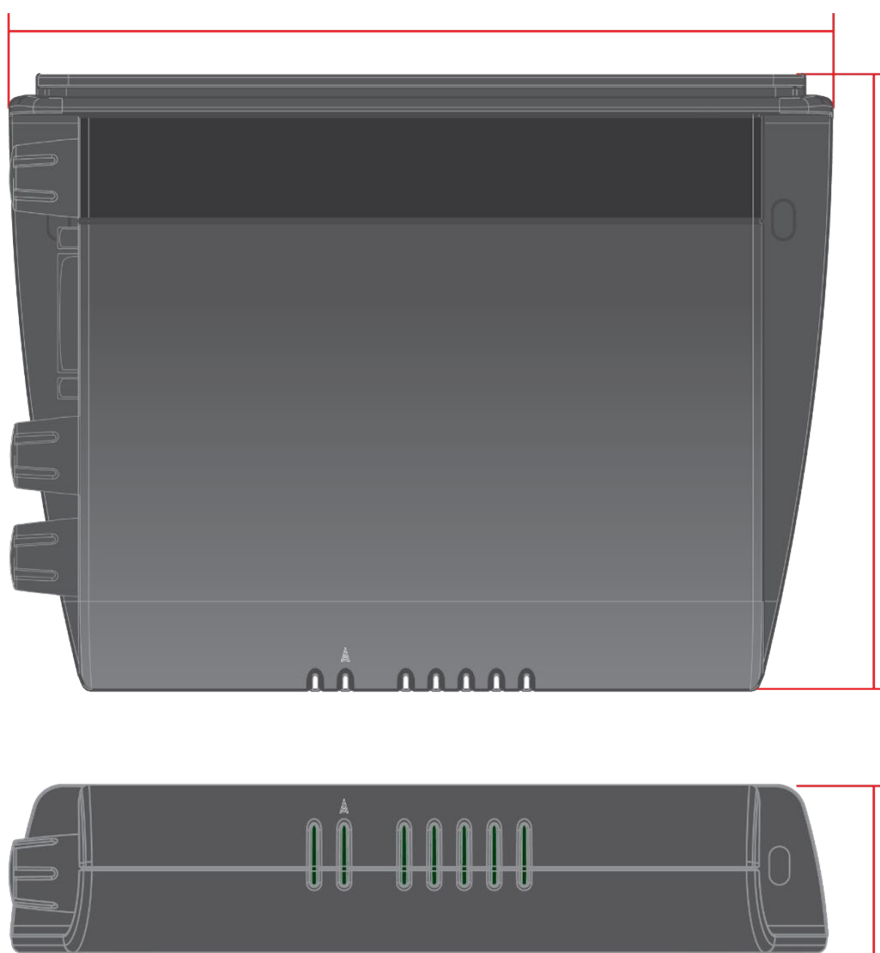


Figure 1 – Vodafone MachineLink 4G Lite router dimensions

Dimensions 1	
Length	140 mm
Depth	103 mm
Height	30 mm
Weight	210 grams

Table 1 – Device Dimensions

¹ Measurements are approximate and do not include external antennas, antenna socket caps, the terminal block connector or the DIN rail mounting bracket.

LED indicators

The Vodafone MachineLink 4G Lite router uses eight LEDs to display the current system and connection status.

LED icon	Name	Colour	State	Description
	Power		Off	Power off
			Double flash	Powering up
			On	Power on
			On	Power on in recovery mode
			Slow flashing	Hardware error, such as SIM not inserted.
	Network		On	Connected via WWAN
			Blinking 2	Traffic via WWAN
			Slow flashing	Connecting PDP/Waiting for demand.
			On	Registered network
			Slow flashing	Registering network
			Slow flashing	SIM PIN locked
			Fast flashing	SIM PUK locked
			On	Can't connect or device is in Configuration mode, see the Initialisation section for more information.
	Signal strength		On	LTE
			On	WCDMA signal
			On	GSM/GPRS signal

Table 2 – LED Indicators

² The term “blinking” means that the LED may pulse, with the intervals that the LED is on and off not being equal. The term “flashing” means that the LED turns on and off at equal intervals.

Signal strength LEDs

The following tables list the signal strength range corresponding with the number of lit signal strength LEDs.

LTE signal mapping (Green)

Number of lit LEDs	Signal Strength
All LEDs unlit	< -120 dBm
1	-119 dBm to -100dBm
2	-99 dBm to -90 dBm
3	-89 dBm to -80 dBm
4	-79 dBm to -70 dBm
5	≥ -69 dBm

Table 3 – Signal strength LED descriptions

WCDMA signal mapping (Amber)

Number of lit LEDs	Signal Strength
All LEDs unlit	< -109 dBm
1	-109 dBm to -102dBm
2	-101 dBm to -92 dBm
3	-91 dBm to -86 dBm
4	-85 dBm to -78 dBm
5	≥ -77 dBm

Table 4 – Signal strength LED descriptions

GSM/GPRS signal mapping (Red)

Number of lit LEDs	Signal Strength
All LEDs unlit	< -109 dBm
1	-109 dBm to -102dBm
2	-101 dBm to -92 dBm
3	-91 dBm to -86 dBm
4	-85 dBm to -78 dBm
5	≥ -77 dBm

Table 5 – Signal strength LED descriptions

LED update interval

The signal strength LEDs update within a few seconds with a rolling average signal strength reading. When selecting a location for the router or connected or positioning an external antenna, please allow up to 20 seconds for the signal strength LEDs to update before repositioning.

Ethernet port LED indicators

Each of the Ethernet ports of the Vodafone MachineLink 4G Lite router have two LED indicators on them. The table below describes the statuses of each light and their meanings.

LED	Status	Description
Green	On	There is a valid network link.
	Blinking	There is activity on the network link.
	Off	No valid network link detected.
Amber	On	The Ethernet port is operating at a speed of 100 Mbps.
	Off	The Ethernet port is operating at a speed of 10 Mbps or no Ethernet cable is connected.

Table 6 – Ethernet port LED indicators description

Interfaces

No.	Item	Description
1	GPS antenna connector	SMA connector for GPS antenna (not included in package).
2	SIM card slot	Insert SIM card here.
3	Reset button	Press and hold for less than 5 seconds to reboot to normal mode. The LEDs are green and extinguish in sequence to indicate that the router will reboot normally if the button is released during this period. Press and hold for 5 to 15 seconds to reboot to recovery mode. The LEDs are amber and extinguish in sequence to indicate that the router will reboot to recovery mode if the button is released during this period. Press and hold for 15 to 20 seconds to reset the router to factory default settings. The LEDs are red and extinguish in sequence to indicate that the router will reset to factory default settings if the button is released during this period.
4	Micro USB 2.0 OTG port	Provides connectivity for optional external storage or a USB Ethernet dongle. Supplies up to 0.5A to connected device.
5	SIM tray eject button	Press to eject the SIM tray
6	Cellular AUX antenna connector	SMA connector for auxiliary cellular antenna.
7	LAN port	LAN port for wired Ethernet clients.
8	Six-way terminal block connector	Connect the provided power supply here. The six-way terminal block connector provides: Power (+) Ground (–) Ignition input detection terminal. 3 x Auxiliary input/output
9	Cellular Main antenna connector	SMA connector for main cellular antenna.

Table 7 – Interfaces

Placement of the router

The external high-performance antennas supplied with the router are designed to provide optimum cellular a signal strength in a wide range of environments. If you find the signal strength is weak, try adjusting the orientation of the antennas. If you are unable to get an acceptable signal, try moving the router to a different place or mounting it differently.



Note – When selecting a location for the router, allow at least 20 seconds for the signal strength LEDs to update before trying a different location.

Mounting options

The Vodafone MachineLink 4G Lite router can be quickly and easily mounted in a variety of locations.

Mounted flat against the wall

When mounted flat against the wall, the Vodafone MachineLink 4G Lite router has a slimline form factor. Use appropriately sized screws in the mounting holes provided on the base of the unit.

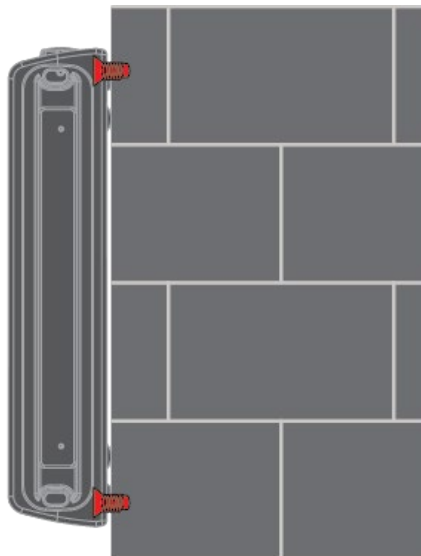


Figure 2 – Wall mount – Flat against the wall

Perpendicular to the wall

If a large surface area is not available, there is the option of mounting the router perpendicular to the wall. This gives the router a small wall footprint while remaining securely attached. Use appropriately sized screws in the mounting holes provided on the back of the unit.

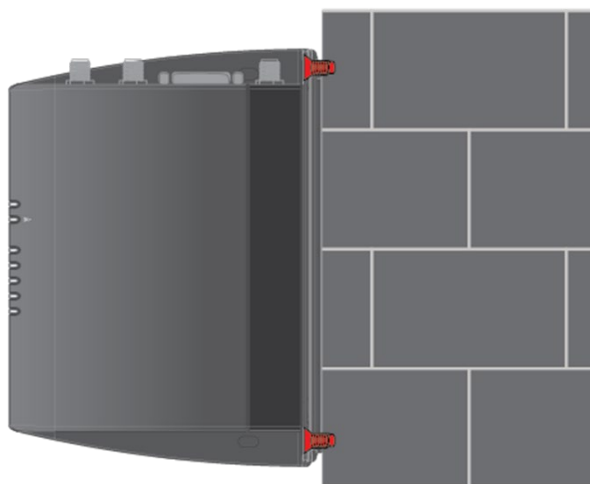


Figure 3 – Wall mount – Perpendicular to the wall

C Section DIN Rail mount

The Vodafone MachineLink 4G Lite router easily slides onto a C Section DIN rail so that it is horizontally mounted. The DIN Rail mounting bracket is not required for C Section DIN rail mounting.

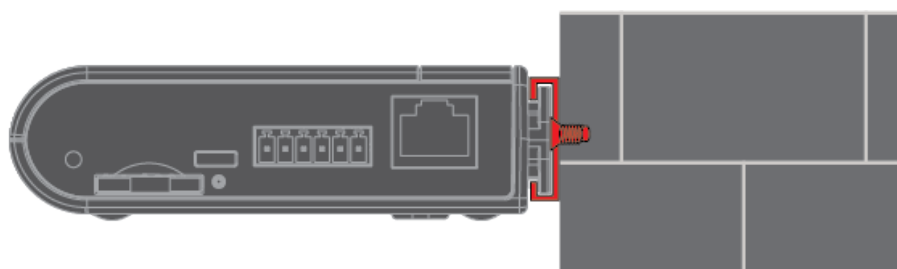


Figure 4 – C Section DIN rail mount

To mount the unit on a C-Section DIN rail, slide it on as illustrated below:

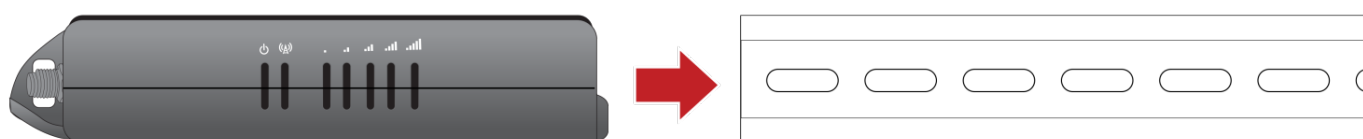


Figure 5 – Mounting the unit on a DIN rail

Mounting bracket

The provided mounting bracket provides additional methods of mounting the Vodafone MachineLink 4G Lite router.

To attach the mounting bracket, slide it onto the rear of the router as shown in the diagram below:



Figure 6 – Sliding on the mounting bracket

To remove the bracket, press the PUSH button and slide the router off the bracket:

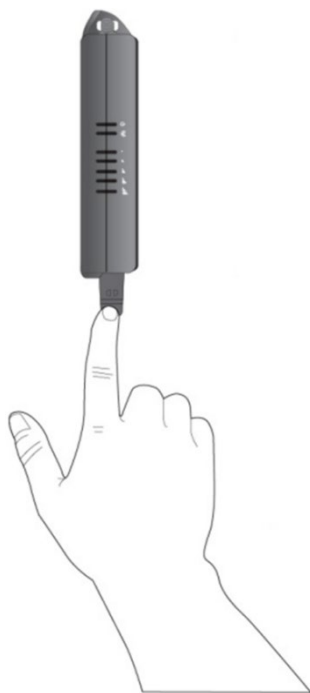


Figure 7 – Removing the mounting bracket

Using the mounting bracket for wall mounting

By first attaching the DIN rail bracket to the wall, the Vodafone MachineLink 4G Lite router can be easily attached and removed from the bracket.

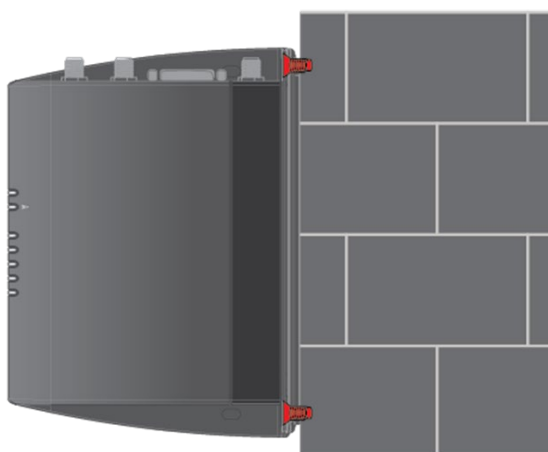


Figure 8 – Wall mount – Mounted via DIN rail bracket

Using the mounting bracket for Top hat DIN rail mounting

The Vodafone MachineLink 4G Lite router may be vertically mounted to the wall with the bracket by sliding the bracket onto a top hat DIN rail

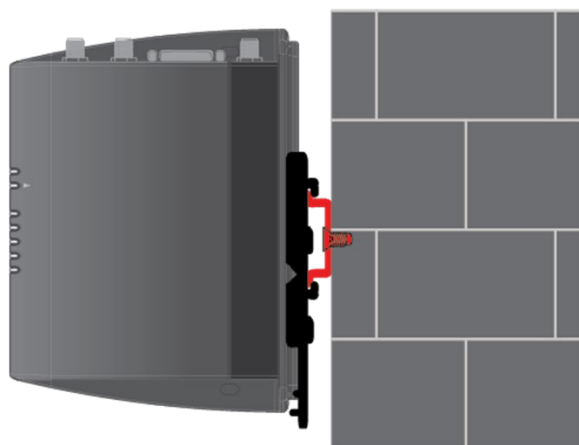


Figure 9 – Top hat DIN rail mount

Alternatively, you can attach it to the DIN Rail by using the V bend in the bracket as illustrated below:

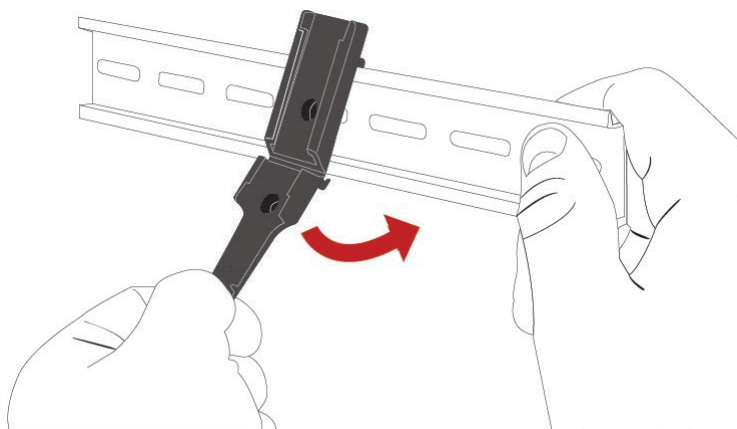


Figure 10 – Attaching the mounting bracket to the DIN rail using the V bend

Desk mount

In situations where wall mounts and DIN rails are not required, you can simply place the Vodafone MachineLink 4G Lite router on a desk using its rubber feet to prevent it from slipping.

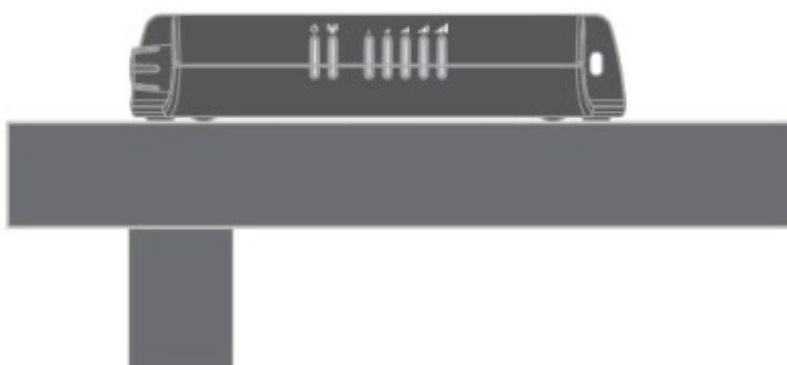


Figure 11 – Desk mount

Installation and configuration of the Vodafone MachineLink 4G Lite router

Powering the router

The Vodafone MachineLink 4G Lite router can be powered in one of two ways:

- 2 DC power input via 4-pin connector (8-40V DC)
- 3 DC power input via field terminated power source (8-40V DC)

The green power LED on the router lights up when a power source is connected. Nominal power input is (12V DC/1.5A).

DC power via 6-pin connector

The positive and ground terminals on the 6-pin connector can accept power from a separately sold DC power supply. Both a standard temperature range DC power supply and an extended temperature range DC power supply are available to purchase as accessories.

If you have purchased an optional DC power supply, first remove the terminal block from the connector. The terminal block connector uses rising cage clamps to secure the wires and ships with the cages lowered and ready for wire insertion. Inspect the cage clamps and use a flathead screwdriver to lower the cage clamps if they have moved during transportation. Insert the wires into the terminal block as shown below, noting the polarity of the wires, then use a flathead screwdriver to raise the cage clamp to secure the wires in the terminal block. Insert the wired terminal block into the terminal block connector of the router and then connect the adapter to a wall socket.

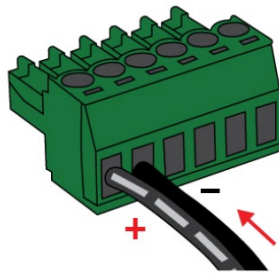


Figure 12 – Terminal block wiring diagram

DC power via field terminated power source

If an existing 8-40V DC power supply is available, you can insert the wires into the supplied terminal block to power your router. Use a flathead screwdriver to tighten the terminal block screws and secure the power wires, making sure the polarity of the wires is correctly matched, as illustrated below. You should avoid using DC cables greater than 2 metres in length.

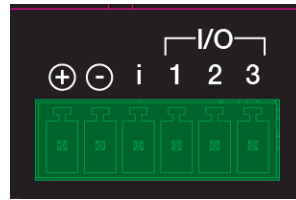


Figure 13 – Locking Power Terminal Block pinout

Terminal	Description
+	Positive wire for power.
–	Ground wire.
i	Dedicated terminal for ignition detection.
I/O 1, 2, 3	Used for general purpose input/output (refer to the IO configuration section for more information).

Table 8 – Locking power block pin outs

Power consumption

To assist with power consumption planning, the following table summarises average power consumption during the various states of the Vodafone MachineLink 4G Lite router under normal usage conditions. It is important to note that this table serves as an indication only as the power consumed by the device is affected by many variables including signal strength, network type, and network activity.

Average power consumption figures

Power input	State	Power consumption
12V	Powered on, all functions disabled	1.38 W
12V	Powered on, connected to LTE and idle	1.92 W
12V	Powered on, connected to packet data with heavy traffic	4.86 W
12V	Peak power draw at maximum 4G module transmission power	5.88 W

Table 9 – Average power consumption figures

Viewing power source information

You can view the current power input mode in the Advanced status section of the device's web user interface. This is useful for remotely monitoring the device. You can also use the Software Development Kit to access this information for advanced purposes (e.g. configuring SMS alerts to inform you of the power status of the router).

To view the router's power source information, log in to the router and expand the Advanced status box on the status page. See the Status section of this manual for more information on the status page.

Installing the router

After you have mounted the router and connected a power source, follow these steps to complete the installation process.

- 1 The Vodafone MachineLink 4G Lite router comes equipped with an internal soldered-down GDSP SIM which is ready for use. If you have an additional SIM card that you would like to use, you can insert it in the SIM card tray. To eject the SIM card tray, use the end of a paper clip to press the SIM Eject button. Place the SIM card in the tray and then insert the loaded tray into the SIM slot with the gold side facing up, as shown below.

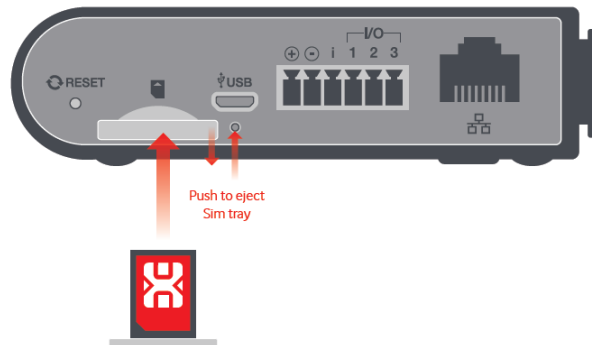


Figure 14 – Inserting the SIM card

- 2 The MachineLink 4G Lite router is shipped with caps on the Main, Auxiliary and GPS antenna sockets. To attach the supplied antennas, antenna sockets by turning them in an anti-clockwise direction.



Figure 15 – Antenna socket – Cap removal and antenna connection

Then screw the antennas onto the sockets, turning them by the collar in a clockwise direction. When the collar has been sufficiently tightened, turn the antenna in a clockwise direction until it has reached the desired orientation.

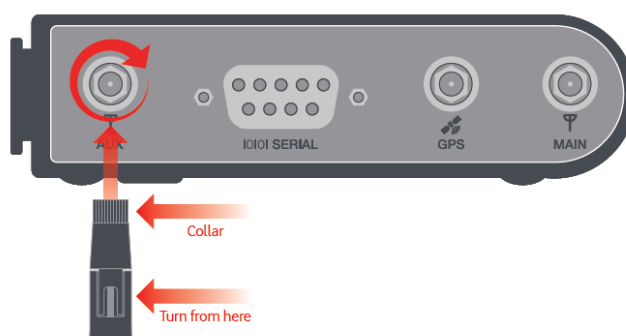


Figure 16 – Tightening the antenna

- 3 Ensure the external power source is switched on and wait 2 minutes for your Vodafone MachineLink 4G Lite to start up and connect to the mobile network. Your router arrives with preconfigured settings that should suit most customers. Your router is now connected. To check the status of your router, compare the LED indicators on the device with those listed in the LED indicators table.

Advanced configuration

The Vodafone MachineLink 4G Lite router comes with pre-configured settings that should suit most customers. For advanced configuration, open the web-based user interface of the router.

To access the web-based user interface, open a web browser (e.g. Mozilla Firefox or Google Chrome), type `https://192.168.1.1` into the address bar and press Enter. The router's web user interface is displayed.



Note – The HTTP protocol is disabled by default, secure HTTP (HTTPS) is the default protocol. HTTP access is available but must be manually enabled.

Initialisation

The first time the device is booted (or booted after it is factory reset), the device enters “Configuration mode”. In Configuration mode, the router runs a setup wizard which must be completed before it will boot into “Live mode”. This is a security feature which enables you to set strong passwords for web root, web user, and Telnet/SSH access or restore a previous configuration from a file.

To complete the setup:

- 1 Click the Next button on the first dialogue box.

Welcome to your new Vodafone router. The router is now in configuration mode and must be either configured with secure passwords or restored to a previous configuration before it is operational.

Next

- 2 Enter the factory default password which is printed on the device label then click the Next button.


To begin using your device, please enter the factory default password. The factory default password is printed on the device label.

Next

- 3 Select whether to configure the router as a new device or to restore a previous configuration backup.

Configure as a new device

- a Select “I want to configure this as a new device” then click the OK button.

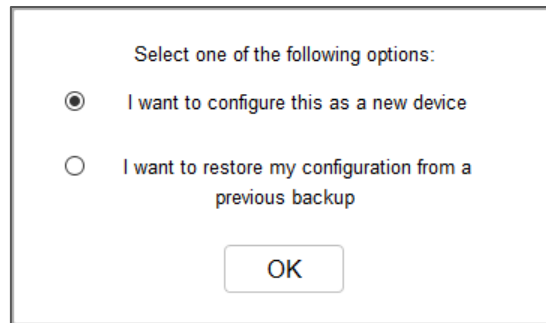


Select one of the following options:

☒ I want to configure this as a new device

☐ I want to restore my configuration from a previous backup

OK

- b In the New Passwords section, enter a strong password in each field. You may configure the same password for all three accounts, but it must meet the security criteria set out below:
- The password must be a minimum of eight characters and no more than 128 characters in length.
 - The password must contain at least one upper case, one lower case character and one number.
 - The password must contain at least one special character, such as: `~ ! @ # \$ % ^ & * () - _ = + [{] } \ | ; : ' " , < > / ?
- c Additionally, the password must also satisfy an algorithm which analyses the characters as you type them, searching for commonly used patterns, passwords, names and surnames according to US census data, popular English words from Wikipedia and US television and movies and other common patterns such as dates, repeated characters (aaa), sequences (abcd), keyboard patterns (qwertyuiop) and substitution of numbers for letters.

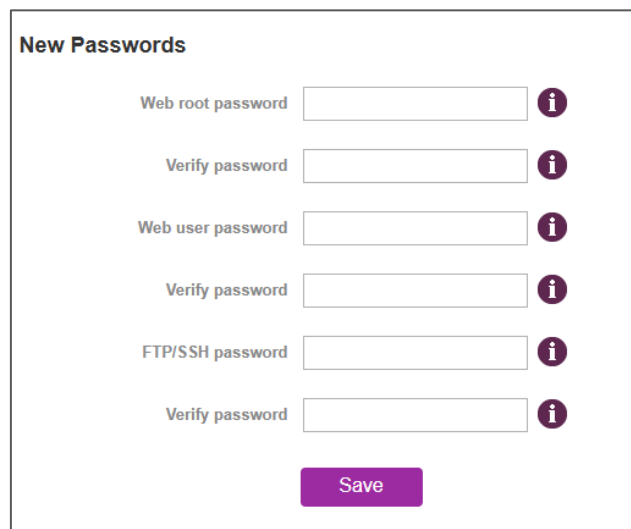

New Passwords

Web root password ⓘ

Verify password ⓘ

Web user password ⓘ


Verify password ⓘ

FTP/SSH password ⓘ

Verify password ⓘ

Save

- d When you have completed all password fields, press the Save button. If the passwords meet the security criteria, they are saved and the below success message displays.

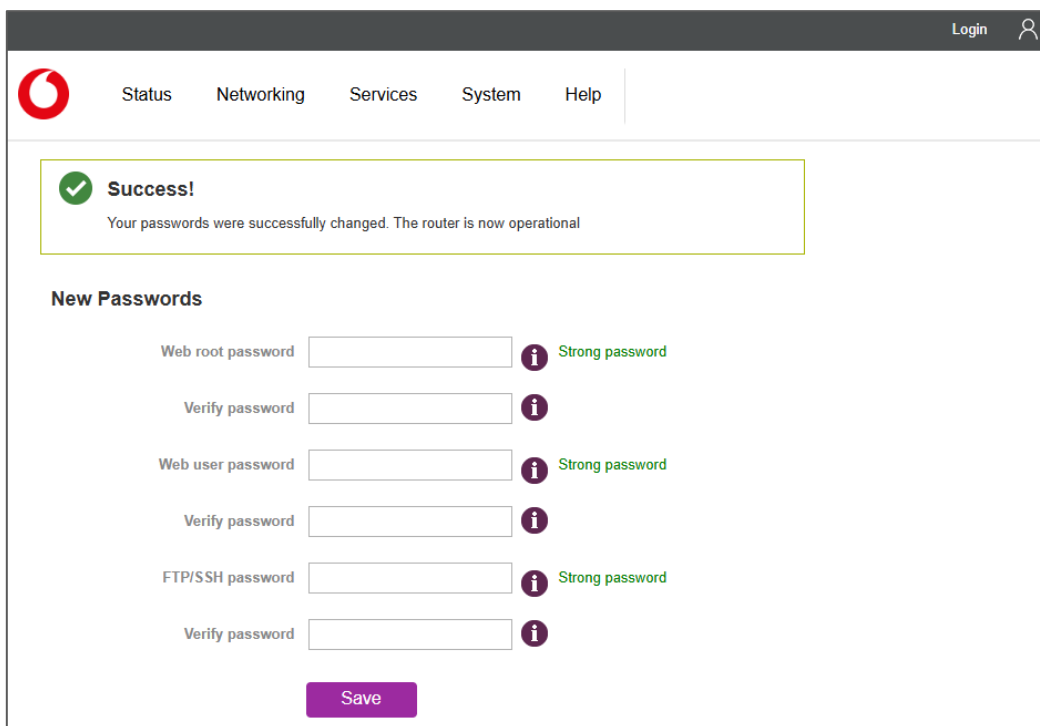

The screenshot shows the LANTRONIX web interface. At the top right, there is a 'Login' link and a user icon. The main navigation bar includes 'Status', 'Networking', 'Services', 'System', and 'Help'. A success message box at the top left states: 'Success! Your passwords were successfully changed. The router is now operational'. Below this, the 'New Passwords' section contains six password fields with their respective verification fields. The fields are: 'Web root password', 'Verify password', 'Web user password', 'Verify password', 'FTP/SSH password', and 'Verify password'. Each field has an information icon and a strength indicator. The 'Web root password', 'Web user password', and 'FTP/SSH password' fields are marked as 'Strong password'. A 'Save' button is located at the bottom of the section.

Success!

Your passwords were successfully changed. The router is now operational

New Passwords

Web root password  Strong password

Verify password 

Web user password  Strong password


Verify password 

FTP/SSH password  Strong password

Verify password 

[Save](#)

e Click **Login**, the login page displays.

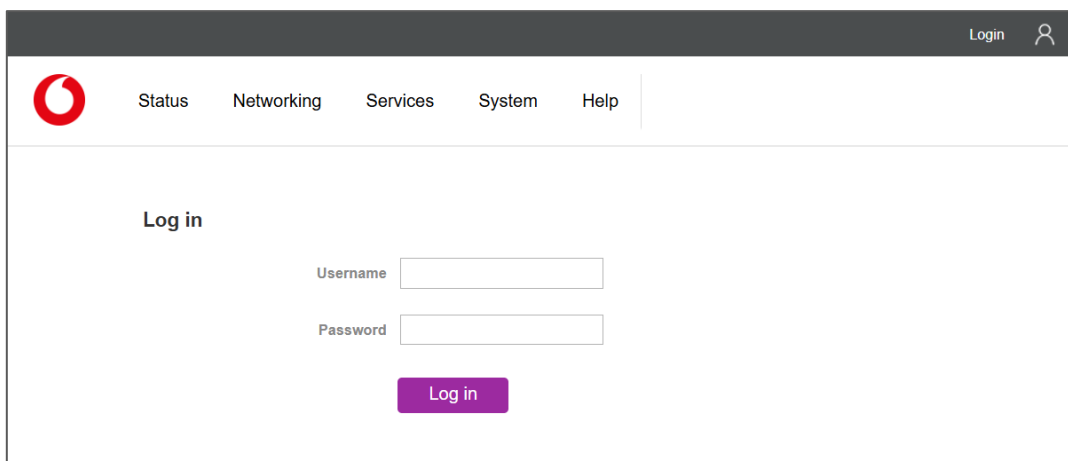

The screenshot shows the LANTRONIX web interface. At the top right, there is a 'Login' link and a user icon. The main navigation bar includes 'Status', 'Networking', 'Services', 'System', and 'Help'. The 'Log in' section contains two input fields: 'Username' and 'Password'. A 'Log in' button is located at the bottom of the section.

Log in


Username

Password

[Log in](#)

Restore configuration from a previous backup file

- a Select “I want to restore my configuration from a previous backup” then click the OK button.

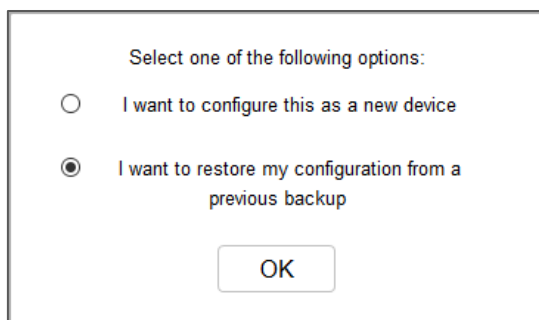


Select one of the following options:

☐ I want to configure this as a new device

☒ I want to restore my configuration from a previous backup

OK

- b Click the Choose a file button and locate the backup file on your computer. If the backup file is encrypted, enter the password, then click the Submit button.

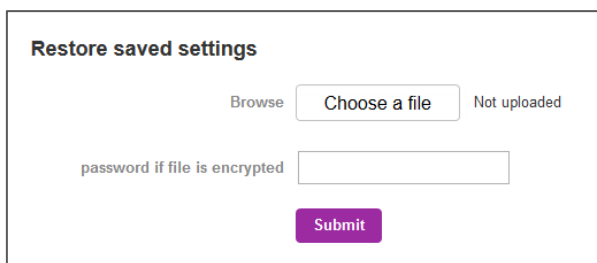

Restore saved settings

Browse Choose a file Not uploaded

password if file is encrypted


Submit

Figure 17 – Configuration mode landing page

- c The router restores the previous configuration and then reboots.

Logging in

To log in to the router, enter the login username (root or user) and the password configured for that user during initialization.

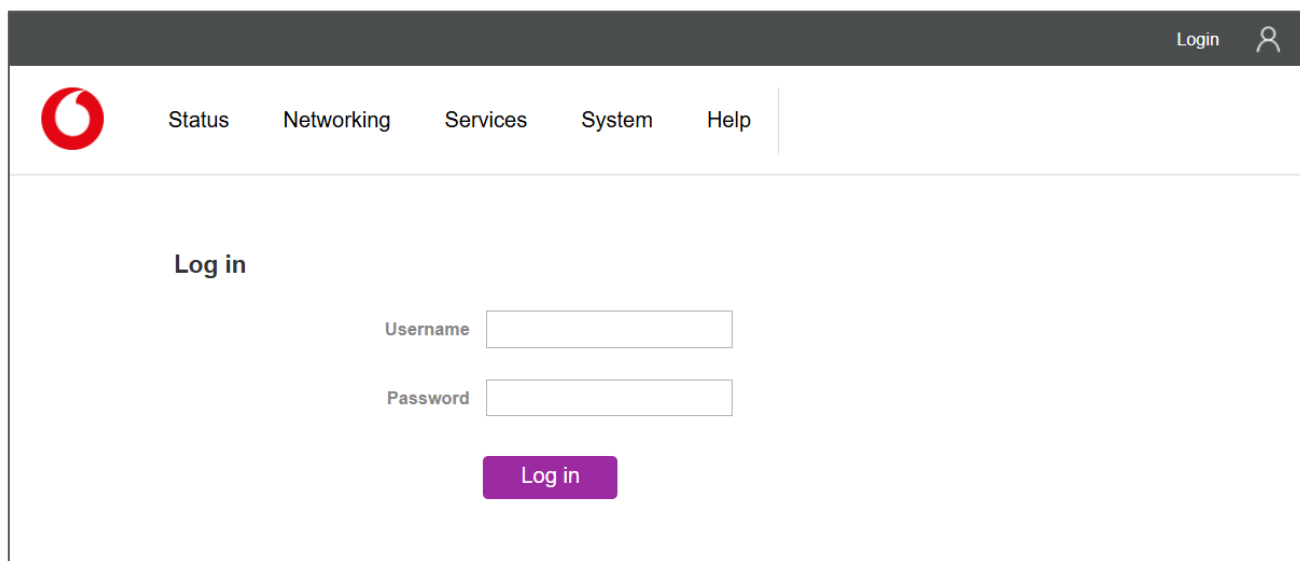

The screenshot shows the web-based user interface of a Lantronix router. At the top, there is a dark grey header bar with the 'Login' text and a user icon on the right. Below this is a white navigation bar containing the Lantronix logo and five menu items: 'Status', 'Networking', 'Services', 'System', and 'Help'. The main content area is white and features the heading 'Log in'. Below the heading, there are two input fields: 'Username' and 'Password'. A purple 'Log in' button is positioned below the password field.

Figure 18 – Log in prompt for the web-based user interface



Note – The user account allows you to manage all settings of the router except functions such as firmware upgrade, device configuration backup and restore and reset to factory default settings, which are privileged only to the root manager account.

The Status page is displayed.

Status

The status page of the web interface provides system related information and is displayed when you log in to the Vodafone MachineLink 4G Lite router management console. The status page shows System information, LAN details, Cellular connection status, Packet data connection status, Wireless LAN status and Advanced status details. You can toggle the sections from view by clicking the  or  buttons to show or hide them. Extra status boxes will appear as additional software features are enabled (e.g. VPN connectivity).

[Status](#)
[Networking](#)
[Services](#)
[System](#)
[Help](#)

[Log out](#)
[root](#)

System information

System up time 00:02:18	Device version Board version 1.0 Serial number 19211183500124 Firmware version V2.0.66.0 Hardware version MachineLink 4G Lite	Cellular module Model EC21 Module firmware EC21AUFAR06A01M4G IMEI 861108034453315
--	--	---

Cellular connection status

Network registration status Registered, home network SIM status SIM OK	Provider xxxxxxx Signal strength (dBm) -104 dBm (Low) Frequency LTE Band 3 - 1800MHz	Coverage LTE Roaming status Not roaming
---	--	--

Packet data connection status

Profile name Profile1 Status Connected Default profile Yes	WWAN IP 10.101.35.102 DNS server 10.4.58.204 10.5.136.242	APN xxxxxxx Connection uptime 00:00:18
--	--	---

WWAN IPv6
N/A

[Show data usage](#)

Advanced status

Country code 505 Network code xx DC input voltage 11.98V Reference Signal Received Quality (RSRQ) -10 dB Reference Signal Received Power (RSRP) -104 dBm	HSUPA category 6 HSDPA category 24 SIM ICCID 89610185000858357041 Power input mode DCJack Location area code (LAC) 20D7 IMSI 505013418292711	Cell ID 133256195 Channel number (UARFCN) 3
--	---	--

LAN

IP
192.168.1.1 / 255.255.255.0
 MAC address
18:F1:45:CB:90:A6
 LAN port status
Up / 100.0 Mbps / FDX

WAN

Priority
wwan.1 [Link]

External storage

No media found

USB OTG

Current status
Device mode

Event notification

Event count [\(log\)](#)
0

Figure 19 – Vodafone MachineLink 4G Lite status page

Item	Definition
System information	
System up time	The current uptime of the router.
Board version	The hardware version of the router.
Serial number	The serial number of the router.
Firmware version	The firmware version of the router

Item	Definition
Hardware version	The commercial product name which helps to identify the available features of the router.
Model	The type of phone module and the firmware version of the module.
Module firmware	The firmware revision of the phone module.
IMEI	The International Mobile Station Equipment Identity number used to uniquely identify a mobile device.
LAN	
IP	The IP address and subnet mask of the router.
MAC address	The MAC address of the router.
LAN Port Status	Displays the current status of the LAN port and its operating speed.
WAN	
WAN/LAN port status	Displays the current status of the WAN/LAN port and its operating speed.
Priority	Displays the priority of the available WAN connections with the interface at the top having the highest priority.
External Storage	Lists the type and size of external storage (onboard/USB), if connected.
USB-OTG	
Current status	Displays the current status of the USB-OTG port (Device or host mode)
Event notification	
Event count	Displays the number of notifications sent using the Event notification feature.
Cellular connection status	
Network registration status	The status of the router's registration for the current network.
SIM Status	Displays the activation status of the SIM in the router.
Provider	The current operator network in use.
Signal strength (dBm)	The current signal strength measured in dBm
Frequency	Displays the band and frequency currently in use.
Coverage	The type of mobile coverage being received by the router.
Roaming status	The roaming status of the router.
Packet data connection status	
Profile name	The name of the active profile.
Status	The connection status of the active profile.
Default profile	Indicates whether the current profile in use is the default profile.
WWAN IP	The IP address assigned by the mobile broadband carrier network.
DNS server	The primary and secondary DNS servers for the WWAN connection.
APN	The Access Point Name currently in use.
Connection uptime	The length of time of the current mobile connection session.
Ethernet WAN connection status	
No.	The index number of the WAN interface.

Item	Definition
Name	The device name as it is known on the system.
Status	Displays whether the interface is up or down.
IP address	The IP address assigned to the Ethernet interface.
Netmask	The Netmask address assigned to the Ethernet interface.
Gateway	The Gateway address assigned to the Ethernet interface.
Advanced status	
Country code	The Mobile Country Code (MCC) of the router.
Network code	The Mobile Network Code (MNC) of the router.
DC input voltage	Displays the current voltage of the power input source provided via the DC Input jack
Reference Signal Received Quality (RSRQ)	RSRQ calculates signal quality taking into consideration the RSSI. It is calculated by $N \times \text{RSRP} / \text{RSSI}$ where N is the number of Physical Resources Blocks (PRBs) over which the RSSI is measured.
Reference Signal Received Power (RSRP)	A cell-specific reference signal used to determine RSRP.
HSUPA category	Displays the HSUPA category which is category 6 for the Vodafone MachineLink 4G. This allows uplink speeds of up to 5.76Mbps.
HSDPA category	Displays the HSDPA category which is category 24 for the Vodafone MachineLink 4G. This allows downlink speeds of up to 42Mbps.
SIM ICCID	The Integrated Circuit Card Identifier of the SIM card used with the router, a unique number up to 19 digits in length.
Power input mode	Displays the power source being used.
Location area code (LAC)	The ID of the cell tower grouping the current signal is broadcasting from.
IMSI	The International mobile subscriber identity is a unique identifier of the user of a cellular network.
Cell ID	A unique code that identifies the base station from within the location area of the current mobile network signal.
Channel number (UARFCN)	The channel number of the current cellular connection.
Module PRIID Revision	Module version used for customization.
Module PRIID PRI part number	The part number of the Module PRIID.
PRI carrier	The carrier network.
PRI config	Configuration file for the current carrier network.

Table 10 – Status page item details

Networking


The Networking section provides configuration options for Wireless WAN, Ethernet WAN/LAN interface assignment, PPPoE, WAN failover priorities, Routing and VPN connectivity.

Wireless WAN

Data connection

The data connection page allows you to configure and enable/disable connection profiles. To access this page, click on the Networking menu, and under the Wireless WAN menu, select the Data connection item.

Each profile refers to a set of configuration items which are used by the router to activate a Packet Data (PDP) context. Under normal scenarios, you may have a single profile enabled. Multiple profiles can be used for simple fast-switching of PDP settings such as APN, or for advanced networking configuration where multiple simultaneous PDP contexts may be required.

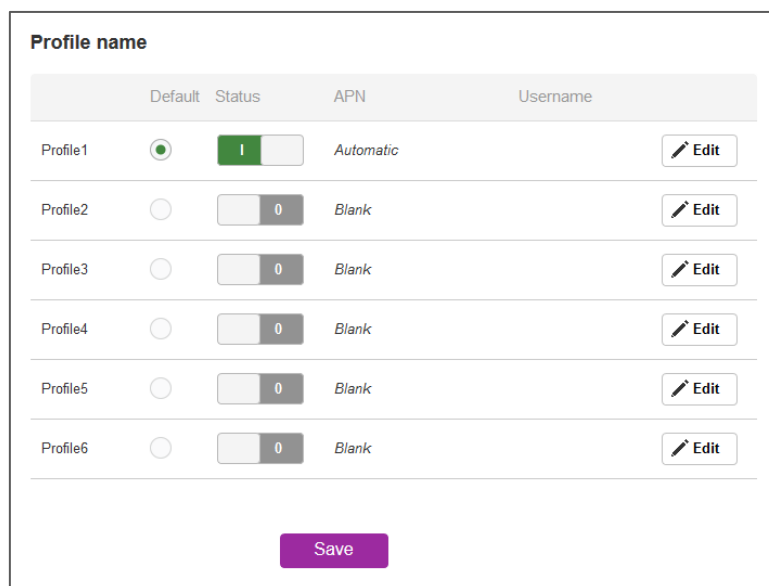

Profile name	Default	Status	APN	Username
Profile1	☒	☒	Automatic	Edit
Profile2	☐	☐	Blank	Edit
Profile3	☐	☐	Blank	Edit
Profile4	☐	☐	Blank	Edit
Profile5	☐	☐	Blank	Edit
Profile6	☐	☐	Blank	Edit

[Save](#)

Figure 20 – Data connection settings

Item	Definition
Profile name	
Default	Sets the corresponding profile to be the default gateway for all outbound traffic except traffic for which there are configured static route rules or profile routing settings.
Status	Toggles the corresponding profile on and off. Only one profile may be turned on at any time.
APN	The APN configured for the corresponding profile.
Username	The username used to log on to the corresponding APN.

Table 11 – Data connection item details

Connecting to the mobile broadband network

The router supports the configuration of up to six APN profiles; these profiles allow you to configure the settings that the router will use to connect to the 4G/3G network and switch easily between different connection settings.

For advanced networking purposes, you may activate a maximum of two profiles simultaneously (dependent on network support). When activating two connection profiles, you should avoid selecting two profiles with the same APN as this can cause only one profile to connect. Similarly, activating two profiles which are both configured to automatically determine an APN can cause a conflict and result in neither profile establishing a connection. We recommend that the two active connection profiles have differing, manually configured APNs to avoid connection issues and ensure smooth operation.

Using a Vodafone Global SIM

When using a Vodafone Global SIM, the router is pre-configured with the APN field blank. A blank APN setting allows the network to determine the correct APN.

Data connection profile settings

Profile

1

Profile name

Profile2

APN

Username

Password

Authentication type

☒ CHAP
☐ PAP

PDP type

☒ IPv4
☐ IPv6
☐ IPv4v6

Reconnect delay

30

(30-65535) seconds

Reconnect retries

0

(0-65535, 0=Unlimited)

Metric

25

(0-65535)

MTU

1340

(1-1500)

NAT masquerading

1

Profile routing settings

You may route only particular traffic via this connection profile by specifying the network address and mask below of the destination network. Blank values will route all traffic via this profile. Please leave these settings blank if you are unsure.

Network address

Network mask

Save

Cancel

Figure 21 – Data connection profile settings – Vodafone Global SIM

Using a non-Vodafone Global SIM

When using a non-Vodafone Global SIM, the MachineLink 4G Lite router gives you the option of turning Automatic APN selection on or off. By default, Profile 1 is configured with Profile1 and Automatic APN set to ON.

When Automatic APN selection is turned on, the router selects an appropriate APN from an internal database of known APNs. If the SIM you have inserted into the router is not of a known carrier, you may need to manually enter an APN to obtain a network connection. See manually configuring a connection profile for details on entering an APN manually.

To see the automatically selected APN, view the Status page.

Data connection profile settings

Profile

☒

Profile name

Profile2

Automatic APN selection

☒

Reconnect delay

30

(30-65535) seconds

Reconnect retries

0

(0-65535, 0=Unlimited)

Metric

25

(0-65535)

MTU

1358

(1358-1460)

NAT masquerading

☒

Profile routing settings

You may route only particular traffic via this connection profile by specifying the network address and mask below of the destination network. Blank values will route all traffic via this profile. Please leave these settings blank if you are unsure.

Network address

. . .

Network mask

. . .

Save


Cancel

Figure 22 – Data connection profile settings –Non-Vodafone Global SIM – Automatic APN settings

Manually configuring a connection profile

To manually configure a connection profile:

- 1 Click the Edit button corresponding to the Profile that you wish to modify. The data connection profile settings page is displayed.

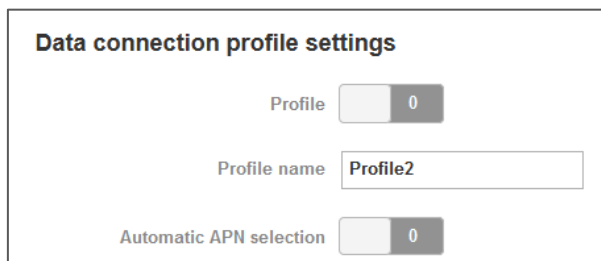

Data connection profile settings

Profile

Profile name

Automatic APN selection

Figure 23 – Data connection profile settings

- 2 Click the Profile toggle key to turn the profile on.

Data connection profile settings

Profile
☒

Profile name

Automatic APN selection
☐ 0

APN

Username

Password

Authentication type
☒ CHAP
☐ PAP

PDP type
☒ IPv4
☐ IPv6
☐ IPv4v6

Reconnect delay
 (30-65535) seconds

Reconnect retries
 (0-65535, 0=Unlimited)

Metric
 (0-65535)

MTU
 (1358-1460)

NAT masquerading
☒

Profile routing settings

You may route only particular traffic via this connection profile by specifying the network address and mask below of the destination network. Blank values will route all traffic via this profile. Please leave these settings blank if you are unsure.

Network address
 . . .

Network mask
 . . .

Figure 24 – Data connection settings – Profile turned on



Note – The Automatic APN toggle key is not available when using a Vodafone Global SIM.

- 3 In the Profile name field, enter a name for the profile. This name is only used to identify the profile on the router.
- 4 When using a SIM other than a Vodafone Global SIM, ensure that the Automatic APN selection toggle key is set to off. If it is not, click it to toggle it to the off position.
- 5 In the APN field, enter the APN Name (Access Point Name) and if required, use the Username and Password fields to enter your login credentials (if required).
- 6 Next to Authentication type, select the either CHAP or PAP depending on the type of authentication used by your provider.
- 7 Select the PDP type:
 - IPv4 – Sets a single stack IPV4 connection through which the router receives only IPV4 network and DNS addresses. This is the default PDP type.

- IPv6 – Sets a single stack IPV6 connection through which the router receives only IPV6 network and DNS addresses.
- IPv4v6 – Sets a dual stack connection allowing simultaneous IPV4 and IPV6 network connectivity. The router receives both IPV4 and IPV6 network and DNS addresses.




Note – Before selecting IPV6, check with your carrier to confirm that single stack IPV6 connectivity is supported.

- The Reconnect delay field specifies the number of seconds to wait between connection attempts. The default setting of 30 seconds is sufficient in most cases but you may modify it to wait up to 65535 seconds if you wish.
- The Reconnect retries field specifies the number of times to attempt to connect to the network if the router fails to establish a connection. It is set to 0 by default which causes the router to attempt to reconnect indefinitely.
- The Metric value is used by router to prioritise routes (if multiple are available) and is set to 25 by default. This value is sufficient in most cases but you may modify it if you are aware of the effect your changes will have on the service.
- Use the NAT masquerading toggle key to turn NAT Masquerading on or off. NAT masquerading, also known simply as NAT is a common routing feature which allows multiple LAN devices to appear as a single WAN IP via network address translation. In this mode, the router modifies network traffic sent and received to inform remote computers on the internet that packets originating from a machine behind the router actually originated from the WAN IP address of the router's internal NAT IP address. This may be disabled if a framed route configuration is required and local devices require WAN IP addresses.
- For advanced networking such as using dual simultaneous PDP contexts, you may wish to configure a particular profile to route only certain traffic via that profile by configuring a custom address and mask of traffic to send via that profile. To do this, in the Profile routing settings section, enter the Network address and Network mask of the remote network. If you do not enter any profile routing settings, the profile will be active but no traffic will be routed through it. For more information on configuring Profile routing settings, see the Setting a default gateway with two active connection profiles example.
- Click the Save button when you have finished entering the profile details.

Confirming a successful connection

After configuring the packet data session, and ensuring that it is enabled, click on the Status menu item at the top of the page to return to the Status page. When there is a mobile broadband connection, the Packet data connection status section is expanded showing the details of the connection and the Status field displays Connected. To see details on the connected session, you can click the Show data usage button.

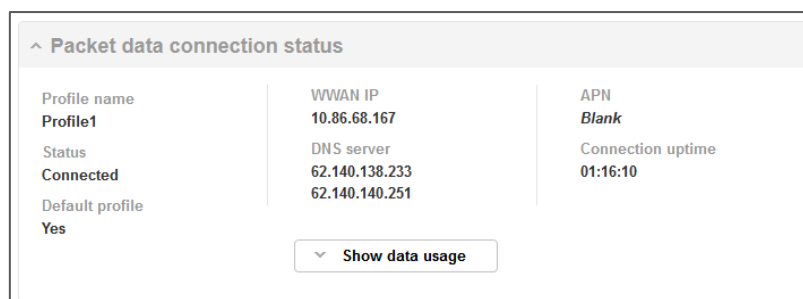

^ Packet data connection status		
Profile name	WWAN IP	APN
Profile1	10.86.68.167	Blank
Status	DNS server	Connection uptime
Connected	62.140.138.233	01:16:10
Default profile	62.140.140.251	
Yes	 Show data usage	

Figure 25 – Packet data connection status section

Checking data usage

On the Status page, each packet data connection profile has a Show data usage button which displays the amount of data received, sent and a total data usage figure.

To show the data use for a connected profile, click the Show data usage button. The data usage for the last 10 sessions is displayed in addition to the current session.

^ Packet data connection status				
Profile name Profile1	WWAN IP 10.97.115.90	APN Blank		
Status Connected	DNS server 62.140.138.233	Connection uptime 00:25:08		
Default profile Yes	62.140.140.251			
			^ Hide data usage	
			Show duration	
Session start	Session end time	Data received (bytes)	Data sent (bytes)	Total data (bytes)
06/07/2015 01:47:09 BST	Current session	1,514,625	874,566	2,389,191
22/06/2015 01:12:57 BST	22/06/2015 04:03:18 BST	67,360,651	24,596,542	91,957,193

Figure 26 – Data usage

Click the Show duration link to toggle the display to show the duration of each session rather than the start and end times.

^ Packet data connection status

Profile name

Profile1

Status

Connected

Default profile

Yes

WWAN IP

10.97.115.90

DNS server

62.140.138.233

62.140.140.251

APN

Blank

Connection uptime

00:23:47

^ Hide data usage


Show end time

Session start	Session duration	Data received (bytes)	Data sent (bytes)	Total data (bytes)
06/07/2015 01:47:09 BST	00:23:47	1,477,079	845,879	2,322,958
22/06/2015 01:12:57 BST	02:50:21	67,360,651	24,596,542	91,957,193

Figure 27 – Data usage with connection duration

Operator settings

The Operator settings page enables you to select which frequency band you will use for your connection and enables you to scan for available network operators in your area.

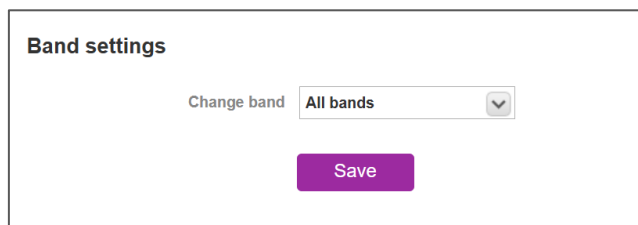

The image shows a web form titled "Band settings". Inside the form, there is a label "Change band" followed by a dropdown menu. The dropdown menu is currently set to "All bands" and has a downward arrow icon. Below the dropdown menu is a purple button labeled "Save".

Figure 28 – Band settings

You may want to do this if you're using the router in a country with multiple frequency networks that may not all support LTE. You can select the router to only connect on the network frequencies that suit your requirements.

Use the Change band drop down list to select the band you wish to use.

The following band settings options are available:

NWL-221	NWL-222	NWL-224	NTC-227
LTE FDD Bands: • Band 1 (2100 MHz) • Band 2 (1900 MHz) • Band 3 (1800 MHz) • Band 4 (1700 MHz) • Band 5 (850 MHz) • Band 7 (2600 MHz) • Band 8 (900 MHz) • Band 28 (700 MHz) LTE TDD Bands: • Band 40 (2300 MHz) WCDMA Bands: • Band 1 (2100 MHz) • Band 2 (1900 MHz) • Band 5 (850 MHz) • Band 8 (900 MHz) GSM Bands: • Band 2 (1900 MHz) • Band 3 (1800 MHz) • Band 5 (850 MHz) • Band 8 (900 MHz)	LTE FDD Bands: • Band 1 (2100 MHz) • Band 3 (1800 MHz) • Band 5 (850 MHz) • Band 7 (2600 MHz) • Band 8 (900 MHz) • Band 20 (800 MHz) WCDMA Bands: • Band 1 (2100 MHz) • Band 5 (850 MHz) • Band 8 (900 MHz) GSM Bands: • Band 3 (1800 MHz) • Band 8 (900 MHz)	LTE FDD Bands: • Band 2 (1900 MHz) • Band 4 (1700 MHz) • Band 12 (700 MHz) WCDMA Bands: • Band 2 (1900 MHz) • Band 4 (1700 MHz) • Band 5 (850 MHz)	LTE FDD Bands: • Band 1 (2100 MHz) • Band 2 (1900 MHz) • Band 3 (1800 MHz) • Band 4 (1700 MHz) • Band 5 (850 MHz) • Band 7 (2600 MHz) • Band 8 (900 MHz) • Band 12 (700 MHz) • Band 13 (700 MHz) • Band 18 (850 MHz) • Band 19 (850 MHz) • Band 20 (800 MHz) • Band 25 (1900 MHz) • Band 26 (850 MHz) • Band 28 (700 MHz) LTE TDD Bands: • Band 38 (2600 MHz) • Band 39 (1900 MHz) • Band 40 (2300 MHz) • Band 41 (2500 MHz) WCDMA Bands: • Band 1 (2100 MHz) • Band 2 (1900 MHz) • Band 4 (1700 MHz) • Band 5 (850 MHz) • Band 6 (800 MHz) • Band 8 (900 MHz) • Band 19 (800 MHz) GSM Bands: • Band 2 (1900 MHz) • Band 3 (1800 MHz) • Band 5 (850 MHz) • Band 8 (900 MHz)

Figure 29 – Available bands

It is not necessary to change the default setting of All bands in most cases. In fact, locking to a particular band can cause connection difficulties if the device is moved to a location where the forced band selection is no longer available.

When All bands is selected, the router attempts to find the most suitable band based on the available networks for the inserted SIM card.

The “GSM all”, “WCDMA all” and “LTE all” options allow you to force the device to lock to those particular network technologies only.


Click the Save button to save and apply your selection.

Operator settings

The operator settings feature allows you to select whether to allow the router to automatically select a network or to manually scan for a network to which the router is locked.

Using a Vodafone GDSP SIM

When a GDSP SIM is inserted and the operator mode is set to Automatic, you are provided with further options to configure cost effective mode and network access technology preference. When Cost effective mode is turned on, the router selects the best carrier's LTE network (according to the PLMN list) and if that fails, it selects the 3G network of the same carrier, if that fails, it selects the 2G network of that carrier. If connection to that all networks of that carrier fails, the router then attempts to connect to the next best carrier's LTE network and so on. Both cost effective mode and network access technology preference require that Advanced Vodafone network (PLMN) selection is set to ON. See the Roaming settings section for details.

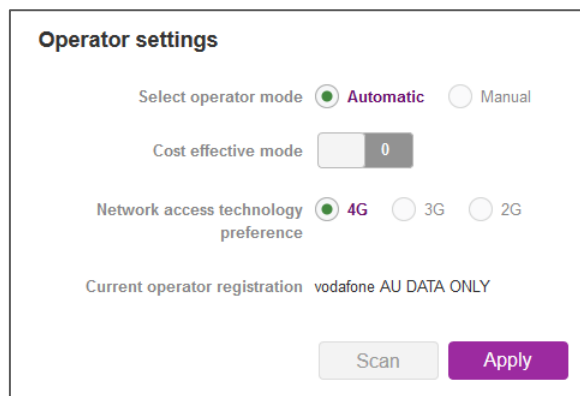


The screenshot shows the 'Operator settings' interface. It includes a 'Select operator mode' section with 'Automatic' selected (indicated by a green dot) and 'Manual' as an option. Below this is a 'Cost effective mode' slider set to '0'. The 'Network access technology preference' section has '4G' selected (green dot), with '3G' and '2G' as other options. The 'Current operator registration' field displays 'vodafone AU DATA ONLY'. At the bottom are 'Scan' and 'Apply' buttons.

Figure 30 – Operator settings (using Vodafone GDSP SIM)

Using a non-Vodafone GDSP SIM

When a non-Vodafone GDSP SIM is inserted and operator mode is set to Automatic, the router attempts to connect to the best network (4G/3G/2G) of the carrier that provided the SIM

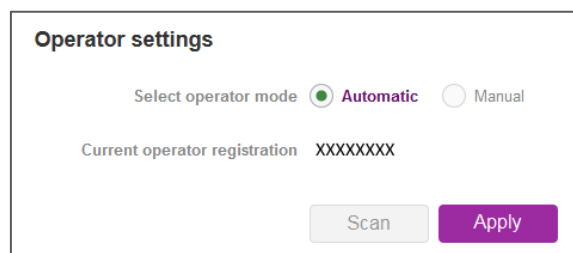

The screenshot shows the 'Operator settings' interface for a non-Vodafone SIM. It features the 'Select operator mode' section with 'Automatic' selected (green dot) and 'Manual' as an option. The 'Current operator registration' field displays 'XXXXXXX'. The 'Scan' and 'Apply' buttons are at the bottom.

Figure 31 – Operator settings (using non-Vodafone GDSP SIM)

To scan for available networks, set the Select operator mode from Automatic to Manual then click the scan button. This operation can take a few minutes and requires that the packet data session be disconnected prior to scanning.

A list of the detected service carriers in your area is displayed.

	Operator name list	MCC	MNC	Operator status	Network type
☐	vodafone AU	505	03	Available	GSM (2G)
Apply Cancel					

Figure 32 – Detected operator list

Select the most appropriate service from the list shown and click Apply.

When Select operator mode is set to Automatic, the router selects the most appropriate operator based on the inserted SIM card. This is the default option and is sufficient for most users.

Roaming settings

When the Allow data roaming toggle key is set to ON, the router will allow local devices to access the Wireless WAN network when it is roaming onto a foreign network. When set to OFF, the router will deny network access to data services when roaming onto a foreign network. This setting is ON by default when the router is used with a Vodafone GDSP SIM.

Roaming settings (Vodafone GDSP SIMs only)

The roaming settings page provides the ability to configure the Advanced Vodafone network (PLMN) selection feature. This feature provides a specialized algorithm which the router uses to select the best network to connect to from a prioritized list of networks which are stored on the router. For example, in Australia, the network priority sequence is:

Vodafone 4G > Optus 4G > Telstra 4G > Vodafone 3G > Optus 3G > Telstra 3G

If registration to all networks in the sequence fails, first the router waits for a period of 30 seconds then reboots the module and attempts network registration again. If registration continues to fail, the router repeats this process at gradually increasing intervals, first waiting for 1 minute, then 2 minutes, 4 minutes, 8 minutes, 16 minutes and finally 20 minutes. If registration still continues to fail, the router repeats the process at 20 minute intervals indefinitely.

Roaming settings

Advanced Vodafone network (PLMN) selection

☒

Validate PDP context activation

☒

Best network retry period

(10-2880, 0=disabled) minutes

Save

Signal assurance watchdog

☐

PRL list

PRL list in use IMSI range [20404], Version [21.01.29.20404]

In Use	IMSI range	Version	Action
✓	20404	21.01.29.20404	Default
	90128	21.01.29.90128	Default

System log filtered for roaming entries

The system log viewer below shows the standard system log messages as per the System tab, except it is filtered on this page to show only entries relating to the device's network selection and roaming using Vodafone GDSP SIM cards.

There are no roaming entries in the log

Figure 33 – Roaming settings

Item	Definition
Advanced Vodafone network (PLMN) selection	Switches the advanced network selection on or off. When on, the router will follow the advanced network selection algorithm designed by Vodafone to connect to the best network according to a priority ranked list stored on the router. If this is switched off, the router will revert to a standard connection methodology following the PLMN list stored on the SIM Card. It is recommended to leave advanced network selection enabled, unless there is a particular reason to disable it.
Validate PDP context activation	When this is turned on, the router verifies the default profile's username and password entered on the Profile settings page by activating a PDP context with each scanned network during advanced network selection process. This helps the router to avoid connecting to networks that are inaccessible by only allowing registration to a network if a PDP context was able to be established successfully. When this option is turned off, the router does not perform any validation of the PDP context activation and will register to a network even if it then cannot establish a PDP context.
Best network retry period	Sets the period for which the router will attempt to establish a connection to the best network listed in the preferred roaming list. This only takes place if the router is not already connected to the best network. By default this is set to 30 minutes. The best network retry period must be a value in minutes between 10 and 2880. Setting this option to 0 disables the router from retrying a connection to the best network.

Table 12 – Roaming settings options

The PRL list displays the Preferred Roaming Lists that are loaded on the router. The PRL lists are labelled according to the first 5 digits of the range of IMSI numbers that they cover. The list also indicates which list is in use, the version number of the list and an option to delete custom lists.



Note – Vodafone in The Netherlands uses IMSI range 20404, therefore regular Vodafone (non-GDSP) SIMs issued by Vodafone Netherlands may be detected as Vodafone GDSP SIMs. If using a Vodafone Netherlands issued SIM, please disable the Advanced Vodafone network (PLMN) selection option to avoid any problems.

When the Signal assurance watchdog option is selected, you are presented with the ability to customise the RSSI, RSCP and RSRP thresholds.

Signal assurance watchdog ☒

RSSI threshold GSM
(-105 to -95) dBm

RSCP threshold UMTS
(-105 to -95) dBm

RSRP threshold LTE
(-120 to -110) dBm

Enter a positive numeric value for each threshold measurement, and that will be processed as a negative figure in dBm

Apply

Figure 34 – Advanced roaming settings

The Received Signal Strength Indicator (RSSI) threshold specifies the value in decibel-milliwatts that the signal strength must fall below for a total of 15 seconds without any traffic passing through before the router attempts to connect to the next network in the PRL list. RSSI values on cellular networks typically range between -113dBm (weak) and -51dBm (strong). As the RSSI approaches

0, the signal strength becomes stronger. The value that you enter into this field should be expressed as a positive integer but the router will process it as a negative value. The default RSSI threshold is -105dBm.

The Received Signal Code Power (RSCP) threshold refers to the power measured by the radio on a particular physical channel. It is generally used as a measure of the signal strength for the downlink in a UMTS communication system.

The Reference Signal Receive Power (RSRP) is the linear average of reference signal power (in Watts) across the specified bandwidth. This is the most important item used to measure for cell selection, reselection and handover. The RSRP is a measurement of the strength of the desired signal but it does not provide any information about the quality of that signal.



Warning – Adjusting the RSSI, RSCP or RSRP roaming thresholds incorrectly or without proper testing and validation may adversely affect network acquisition. Establishing a value different from the default will eliminate network registration attempts with any network observed to have a signal lower than the established threshold. Selecting a higher threshold may also eliminate available low cost networks resulting in higher data costs. It is recommended to consult your Vodafone technical contact prior to adjusting this parameter.

When you have made the desired change, click the Apply button. The router displays the above warning message. If you are sure you wish to proceed, select the “I have read and understand the risk” checkbox then click the OK button. The new signal threshold is applied immediately.

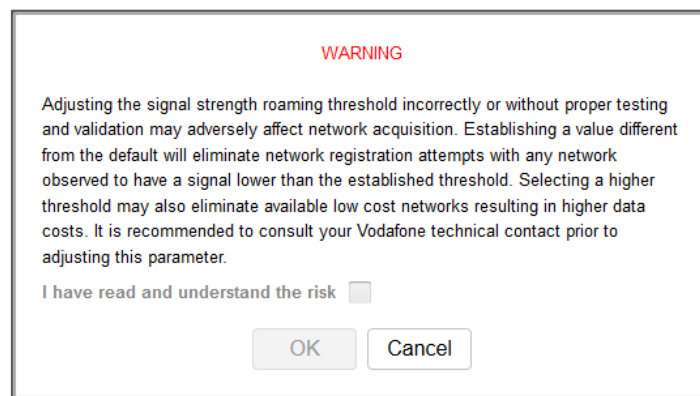


Figure 35 – RSSI threshold warning

The System log filtered for roaming entries section displays system log messages as per the System tab, except they are filtered to show only the entries related to the device’s network selection and roaming using Vodafone GDSP SIM cards. You may use the Download button to download a filtered log file containing only messages related to the advanced network selection algorithm. The Clear button removes all System log records, including those records unrelated to the advanced network selection.


SIM management



Note: SIM management pages are not available in Saudi Arabia (NWL-227-02).

The SIM management page allows you to specify the primary SIM to use in the case where you have a soldered down SIM card and a SIM inserted into the SIM tray. To change the preference of the SIMs, use the Primary SIM drop down menu to select either the Removable SIM or the Internal SIM, then click the Save button.

To automatically switch over to the internal SIM if the external one is removed, click the Switch to internal SIM if external SIM removed toggle key so that it is in the ON position. Note that this option overrides any of the failover based on network and usage factors listed below.

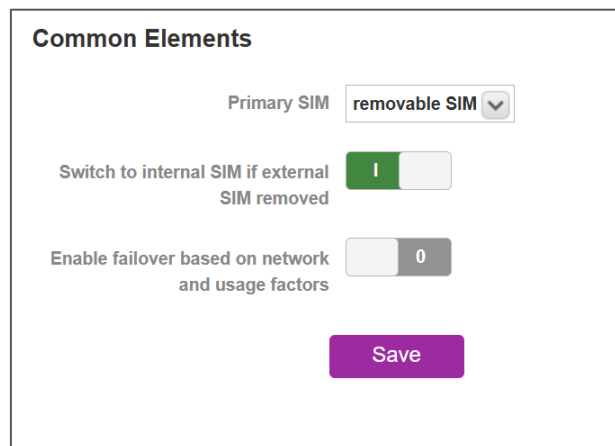

Common Elements

Primary SIM removable SIM ▼

Switch to internal SIM if external SIM removed I

Enable failover based on network and usage factors 0

Save

Figure 36 – SIM Management – Common elements

Configuring failover based on network and usage factors

To configure failover between SIMs based on network and usage factors, click the Enable failover based on network and usage factors toggle key so that it is in the ON position. A list of conditions appears. Multiple conditions may be enabled simultaneously, and the router will evaluate whether it should switch between SIMs based on the settings provided.

Weighting of conditions

Each condition includes a drop-down menu containing a weighting value from 1 (weak) to 5 (critical). As the conditions occur, the router evaluates the weight of the conditions on the active SIM compared to those of the inactive one. If the active SIM has a higher fault weight, the router switches over to the inactive one, if it is lower then it does not. If the weight is the same, the router switches to (or remains with) the Primary SIM.

For example, the router might be configured to switch to the secondary SIM when a maximum permitted number of SMS messages has been sent on the primary SIM, but then switch back when the secondary SIM has poor signal strength. In this case, Switch from Internal SIM on SMS limit reached would be configured to have a condition weight lower than that of Switch from External SIM on weak signal.




Note: The “Recheck condition after (minutes)” option appears on all conditions except those related to data and SMS limits. Some care should be taken when selecting a recheck interval since the check requires the router to switch to the appropriate SIM to perform the check. This means the phone module must be restarted each time the SIM is changed. To reduce the number of phone

module restarts, select the interval carefully based on what you are checking, e.g. when checking for roaming, a longer interval may be acceptable but when checking for poor signal, a shorter interval might be more appropriate.

Switch from External SIM on no network

When enabled, the router switches from the external SIM to the internal SIM when there is no network detected.

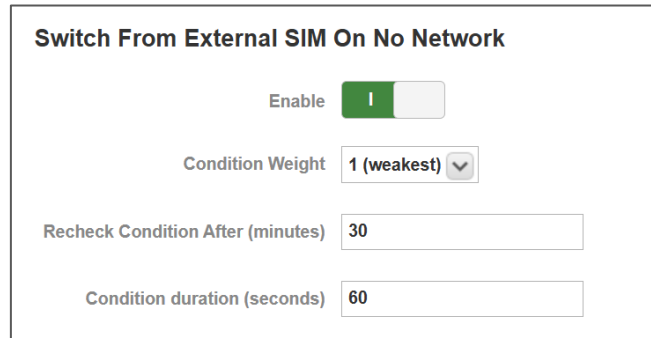

Switch From External SIM On No Network

Enable ☒

Condition Weight 1 (weakest) ▼

Recheck Condition After (minutes)

Condition duration (seconds)


Figure 37 – Switch from External SIM on no network

Item	Definition
Recheck condition after (minutes)	The interval at which the router will check that there is a valid network connection on the External SIM.
Condition duration (seconds)	The duration for which the network must be down on the External SIM before the router switches to the Internal SIM.

Table 13 – Switch from External SIM on no network

Switch from External SIM on network denied

When enabled, the router switches from the External SIM to the Internal SIM when network registration is denied on the External SIM.

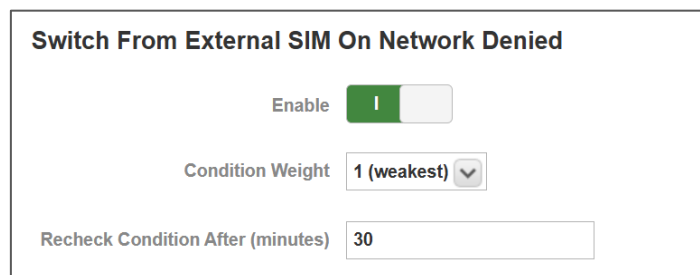

Switch From External SIM On Network Denied

Enable ☒

Condition Weight 1 (weakest) ▼

Recheck Condition After (minutes)

Figure 38 – Switch from External SIM on network denied

Item	Definition
Recheck condition after (minutes)	The interval at which the router will check that the network connection is registered on the External SIM.

Table 14 – Switch from External SIM on network denied

Switch from External SIM on roaming

When enabled, the router switches from the External SIM to the Internal SIM when the External SIM connects to a roaming network.

Switch From External SIM On Roaming

Enable ☒

Condition Weight 1 (weakest) ▼

Recheck Condition After (minutes)

Figure 39 – Switch from External SIM on roaming

Item	Definition
Recheck condition after (minutes)	The interval at which the router will check that the External SIM is not roaming.

Table 15 – Switch from External SIM on roaming

Switch from External SIM on weak signal

When enabled, the router switches from the External SIM to the Internal SIM when the External SIM provides a signal below the specified threshold.

Switch From External SIM On Weak Signal

Enable ☒

Condition Weight 1 (weakest) ▼

Recheck Condition After (minutes)

Threshold (RSRP, dBm)

Threshold (RSSI/RSCP, dBm)

Condition duration (seconds)

Figure 40 – Switch from External SIM on weak signal

Item	Definition
Recheck condition after (minutes)	The interval at which the router will check the signal strength of the External SIM.
Threshold (RSRP, dBm)	Enter the minimum acceptable Reference Signal Received Power (RSRP) level for LTE networks. If the signal strength falls below this threshold, it may trigger a failover depending on other conditions..
Threshold (RSSI/RSCP, dBm)	Enter the minimum acceptable Received Signal Strength Indicator (RSSI) or Received Signal Code Power (RSCP) level for the current network type. A value below this threshold indicates poor signal quality and can contribute to a failover decision.

Item	Definition
Condition duration (seconds)	The duration for which the network must be down on the External SIM before the router switches to the Internal SIM.

Table 16 – Switch from External SIM on weak signal

Switch from External SIM on data connection fail

When enabled, the router switches from the External SIM to the Internal SIM when the External SIM's network connection is deemed unreliable based on a set of ping requests to a specified host address.

Switch From External SIM On Data Connection Fail

Enable ☒

Condition Weight 1 (weakest) ▼

Recheck Condition After (minutes)

Interval between starting checks (seconds)

Attempts To Make Before Failing

Time to wait for each response (seconds)

Ping method ICMP ▼

Host Address

Figure 41 – Switch from External SIM on data connection fail

Item	Definition
Recheck condition after (minutes)	The interval at which the router will test the network connection of the External SIM.
Interval between starting checks (seconds)	The interval in seconds between the time at which the router begins the ping test.
Attempts to make before failing	The number of ping attempts the router will make before considering the network test a failure.
Time to wait for each response (seconds)	The number of seconds to wait for a ping response before the individual ping request is deemed a failure.
Ping method	The ping method to use.
Host address	The host IP address to use for the ping test.

Table 17 – Switch from External SIM on data connection fail

Switch from External SIM on SMS limit reached

When enabled, the router switches from the External SIM to the Internal SIM when a specified number of SMS messages have been sent via the External SIM.

Switch From External SIM On SMS Limit Reached

Enable ☒

Condition Weight 1 (weakest) ▼

Maximum SMS Count

Monitor Period Type week ▼

Day of Week Tuesday ▼

Figure 42 – Switch from External SIM on SMS limit reached

Item	Definition
Maximum SMS count	The maximum number of SMS messages permitted to be sent by the External SIM card.
Monitor period type	The period that the maximum SMS count value should remain valid. You can select “month”, “week” or “day”.
Day of month (Only displayed when Monitor period type is set to “Month”)	The day of the month to start the monitoring period. For example, if you set the Monitor period type to “Month”, and Day of month to “1st”, the router monitors the condition from the first day of the month and resets the maximum SMS count at 00:00hr on the last day of the month. To avoid complexity, a month is specified as 28 days.
Day of week (Only displayed when Monitor period type is set to “Week”).	The day of the week to start the monitoring period. For example, if you set the Monitor period type to “Week”, and Day of week to “Monday”, the router monitors the condition from the 00:00hr on Monday and resets the maximum SMS count at 00:00hr on the following Monday.
Hour of day (Only displayed when Monitor period type is set to “Day”).	The hour of the day to start the monitoring period. For example, if you set the Monitor period type to “Day”, and Hour of day to “13:00”, the router monitors the condition from the 13:00hr each day and resets the maximum SMS count at 13:00hr every day.

Table 18 – Switch from External SIM on SMS limit reached

Switch from External SIM on data usage limit reached

When enabled, the router switches from the External SIM to the Internal SIM when a specified amount of data has been sent and received via the External SIM.

Switch From External SIM On Data Usage Limit Reached

Enable ☒

Condition Weight 1 (weakest) ▼

Maximum Data Transmission (MBytes) 100

Monitor Period Type week ▼

Day of Week Tuesday ▼

Figure 43 – Switch from External SIM on data usage limit reached

Item	Definition
Maximum data transmission (MBytes)	The maximum amount of data in megabytes permitted to be sent by the External SIM card.
Monitor period type	The period that the maximum data transmission value should remain valid. You can select “month”, “week” or “day”.
Day of month (Only displayed when Monitor period type is set to “Month”)	The day of the month to start the monitoring period. For example, if you set the Monitor period type to “Month”, and Day of month to “1st”, the router monitors the condition from the first day of the month and resets the Maximum data transmission value at 00:00hr on the last day of the month. To avoid complexity, a month is specified as 28 days.
Day of week (Only displayed when Monitor period type is set to “Week”).	The day of the week to start the monitoring period. For example, if you set the Monitor period type to “Week”, and Day of week to “Monday”, the router monitors the condition from the 00:00hr on Monday and resets the Maximum data transmission value at 00:00hr on the following Monday.
Hour of day (Only displayed when Monitor period type is set to “Day”).	The hour of the day to start the monitoring period. For example, if you set the Monitor period type to “Day”, and Hour of day to “13:00”, the router monitors the condition from the 13:00hr each day and resets the Maximum data transmission value at 13:00hr every day.

Table 19 – Switch from External SIM on data usage limit reached

Switch from Internal SIM on no network

When enabled, the router switches from the Internal SIM to the External SIM when there is no network detected.

Switch From Internal SIM On No Network

Enable ☒

Condition Weight 1 (weakest) ▼

Recheck Condition After (minutes)

Condition duration (seconds)

Figure 44 – Switch from Internal SIM on no network

Item	Definition
Recheck condition after (minutes)	The interval at which the router will check that there is a valid network connection on the Internal SIM.
Condition duration (seconds)	The duration for which the network must be down on the Internal SIM before the router switches to the External SIM.

Table 20 – Switch from Internal SIM on no network

Switch from Internal SIM on network denied

When enabled, the router switches from the Internal SIM to the External SIM when network registration is denied on the Internal SIM.

Switch From Internal SIM On Network Denied

Enable ☒

Condition Weight 1 (weakest) ▼

Recheck Condition After (minutes)

Figure 45 – Switch from Internal SIM on network denied

Item	Definition
Recheck condition after (minutes)	The interval at which the router will check that the network connection is registered on the Internal SIM.

Table 21 – Switch from Internal SIM on network denied

Switch from Internal SIM on roaming

When enabled, the router switches from the Internal SIM to the External SIM when the Internal SIM connects to a roaming network.

Switch From Internal SIM On Roaming

Enable ☒

Condition Weight 1 (weakest) ▼

Recheck Condition After (minutes)

Figure 46 – Switch from Internal SIM on roaming

Item	Definition
Recheck condition after (minutes)	The interval at which the router will check that the Internal SIM is not roaming.

Table 22 – Switch from Internal SIM on roaming

Switch from Internal SIM on weak signal

When enabled, the router switches from the Internal SIM to the External SIM when the Internal SIM provides a signal below the specified threshold.

Switch From Internal SIM On Weak Signal

Enable ☒

Condition Weight 1 (weakest) ▼

Recheck Condition After (minutes)

Threshold (RSRP, dBm)

Threshold (RSSI/RSCP, dBm)

Condition duration (seconds)

Figure 47 – Switch from Internal SIM on weak signal

Item	Definition
Recheck condition after (minutes)	The interval at which the router will check the signal strength of the Internal SIM.
Threshold (RSRP, dBm)	Enter the minimum acceptable Reference Signal Received Power (RSRP) level for LTE networks. If the signal strength falls below this threshold, it may trigger a failover depending on other conditions.
Threshold (RSSI/RSCP, dBm)	Enter the minimum acceptable Received Signal Strength Indicator (RSSI) or Received Signal Code Power (RSCP) level for the current network type. A value below this threshold indicates poor signal quality and can contribute to a failover decision.

Item	Definition
Condition duration (seconds)	The duration for which the network must be down on the Internal SIM before the router switches to the External SIM.

Table 23 – Switch from External SIM on weak signal

Switch from Internal SIM on data connection fail

When enabled, the router switches from the Internal SIM to the External SIM when the Internal SIM's network connection is deemed unreliable based on a set of ping requests to a specified host address.

Switch From Internal SIM On Data Connection Fail

Enable ☒

Condition Weight 1 (weakest) ▼

Recheck Condition After (minutes)

Interval between starting checks (seconds)

Attempts To Make Before Failing

Time to wait for each response (seconds)

Ping method ICMP ▼

Host Address · · ·

Figure 48 – Switch from Internal SIM on data connection fail

Item	Definition
Recheck condition after (minutes)	The interval at which the router will test the network connection of the Internal SIM.
Interval between starting checks (seconds)	The interval in seconds between the time at which the router begins the ping test.
Attempts to make before failing	The number of ping attempts the router will make before considering the network test a failure.
Time to wait for each response (seconds)	The number of seconds to wait for a ping response before the individual ping request is deemed a failure.
Ping method	The ping method to use.
Host address	The host IP address to use for the ping test.

Table 24 – Switch from Internal SIM on data connection fail

Switch from Internal SIM on SMS limit reached

When enabled, the router switches from the Internal SIM to the External SIM when a specified amount of data has been sent and received via the Internal SIM.

Switch From Internal SIM On SMS Limit Reached

Enable ☒

Condition Weight 1 (weakest) ▼

Maximum SMS Count

Monitor Period Type week ▼

Day of Week Tuesday ▼

Figure 49 – Switch from Internal SIM on SMS limit reached

Item	Definition
Maximum SMS count	The maximum number of SMS messages permitted to be sent by the Internal SIM card.
Monitor period type	The period that the maximum SMS count value should remain valid. You can select “month”, “week” or “day”.
Day of month (Only displayed when Monitor period type is set to “Month”)	The day of the month to start the monitoring period. For example, if you set the Monitor period type to “Month”, and Day of month to “1st”, the router monitors the condition from the first day of the month and resets the maximum SMS count at 00:00hr on the last day of the month. To avoid complexity, a month is specified as 28 days.
Day of week (Only displayed when Monitor period type is set to “Week”).	The day of the week to start the monitoring period. For example, if you set the Monitor period type to “Week”, and Day of week to “Monday”, the router monitors the condition from the 00:00hr on Monday and resets the maximum SMS count at 00:00hr on the following Monday.
Hour of day (Only displayed when Monitor period type is set to “Day”).	The hour of the day to start the monitoring period. For example, if you set the Monitor period type to “Day”, and Hour of day to “13:00”, the router monitors the condition from the 13:00hr each day and resets the maximum SMS count at 13:00hr every day.

Table 25 – Switch from Internal SIM on SMS limit reached

Switch from Internal SIM on data usage limit reached

When enabled, the router switches from the Internal SIM to the External SIM when a specified amount of data has been sent and received via the Internal SIM.

Switch From Internal SIM On Data Usage Limit Reached

Enable
☒

Condition Weight

1 (weakest) ▼

Maximum Data Transmission (MBytes)

100

Monitor Period Type

week ▼

Day of Week

Tuesday ▼

Figure 50 – Switch from Internal SIM on data usage limit reached

Item	Definition
Maximum data transmission (MBytes)	The maximum amount of data in megabytes permitted to be sent by the Internal SIM card.
Monitor period type	The period that the maximum data transmission value should remain valid. You can select “month”, “week” or “day”.
Day of month (Only displayed when Monitor period type is set to “Month”)	The day of the month to start the monitoring period. For example, if you set the Monitor period type to “Month”, and Day of month to “1st”, the router monitors the condition from the first day of the month and resets the Maximum data transmission value at 00:00hr on the last day of the month. To avoid complexity, a month is specified as 28 days.
Day of week (Only displayed when Monitor period type is set to “Week”).	The day of the week to start the monitoring period. For example, if you set the Monitor period type to “Week”, and Day of week to “Monday”, the router monitors the condition from the 00:00hr on Monday and resets the Maximum data transmission value at 00:00hr on the following Monday.
Hour of day (Only displayed when Monitor period type is set to “Day”).	The hour of the day to start the monitoring period. For example, if you set the Monitor period type to “Day”, and Hour of day to “13:00”, the router monitors the condition from the 13:00hr each day and resets the Maximum data transmission value at 13:00hr every day.

Table 26 – Switch from Internal SIM on data usage limit reached

SIM security settings


The SIM security settings page can be used for authenticating SIM cards that have been configured with a security PIN.

Unlocking a PIN locked SIM

If the SIM card is locked, you will receive a notice when you access the Status page after which you will be directed to the PIN settings page to enter the PIN. The PIN settings page lists the status of the SIM at the top of the page.

If you are not redirected to the PIN settings page, to unlock the SIM:

- 1 Click on the Networking menu from the top menu bar, and then click SIM security settings.

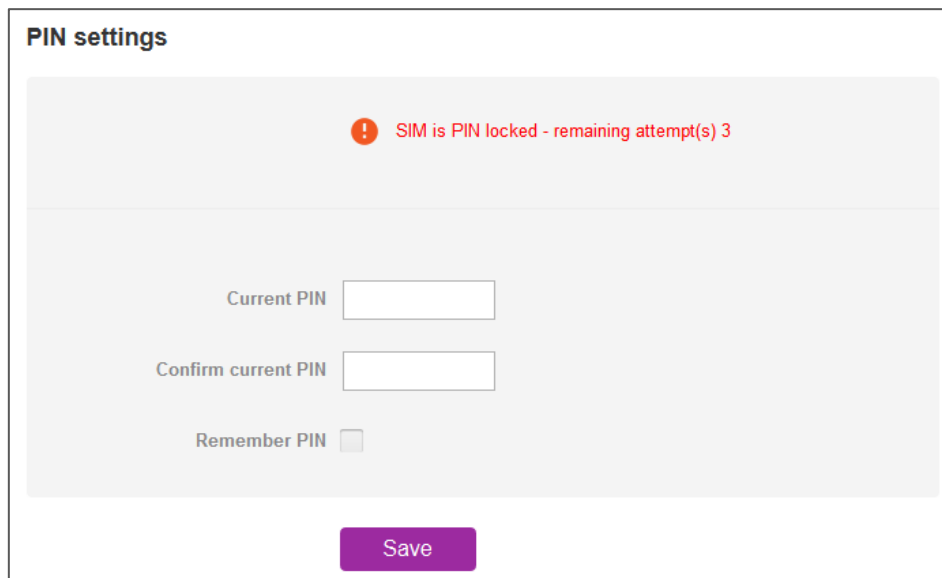

The screenshot shows the 'PIN settings' page. At the top, there is a red warning icon and the text 'SIM is PIN locked - remaining attempt(s) 3'. Below this, there are three input fields: 'Current PIN', 'Confirm current PIN', and 'Remember PIN' (which is a checkbox). At the bottom of the form is a purple 'Save' button.

Figure 51 – SIM security settings – SIM PIN locked

- 2 Enter the PIN in the Current PIN field (enter numbers only) and then enter it again in the Confirm current PIN field to confirm the PIN.
- 3 If you are placing the router in a remote, unattended location, you may wish to check the Remember PIN option. This feature allows the router to automatically send the PIN to the SIM each time the SIM asks for it (usually at power up). This enables the SIM to be PIN locked (to prevent unauthorised re-use of the SIM elsewhere), while still allowing the router to connect to the cellular service.


When this feature is enabled, the PIN you enter when setting the Remember PIN feature is encrypted and stored locally on the router. The next time the SIM asks the router for the PIN, the router decrypts the PIN and automatically sends it to the SIM without user intervention.

When this feature is disabled and the SIM is PIN locked, the PIN must be manually entered via the router's configuration interface. In situations where the router will be unattended, this is not desirable.



Note – Select Remember PIN if you do not want to enter the PIN code each time the SIM is inserted.

- 4 Click the Save button. If successful, the router displays the following screen:

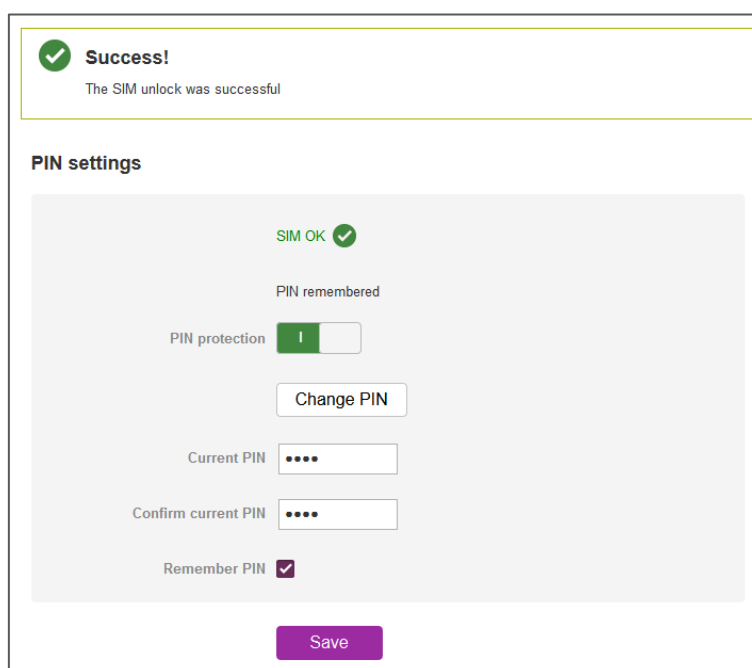

The screenshot shows a web interface for SIM security settings. At the top, a green checkmark icon and the text "Success! The SIM unlock was successful" are displayed. Below this, the "PIN settings" section is visible. It includes a "SIM OK" status with a green checkmark, a "PIN remembered" label, and a "PIN protection" toggle switch that is currently turned on (green). A "Change PIN" button is located below the toggle. Further down, there are input fields for "Current PIN" and "Confirm current PIN", both masked with dots. At the bottom of the settings section, the "Remember PIN" checkbox is checked. A purple "Save" button is positioned at the bottom center of the form.

Figure 52 – SIM security settings – SIM unlock successful

Enabling/Disabling SIM PIN protection

The security PIN protection can be turned on or off using the PIN protection toggle key.

 


Figure 53 – PIN protection toggle key

Changing the SIM PIN code

If you would like to change the PIN, click the Change PIN button and enter the current PIN into the Current PIN and Confirm current PIN fields, then enter the desired PIN into the New PIN and Confirm new PIN fields and click the Save button.

PIN settings

SIM OK 

PIN remembered

PIN protection ☒

[Change PIN](#)

Current PIN

Confirm current PIN

New PIN

Confirm new PIN

Remember PIN ☒

[Save](#)

Figure 54 – PIN settings – Change PIN

When the PIN has been changed successfully, the following screen is displayed:

 **Success!**
Your settings have been changed successfully

PIN settings

SIM OK 

PIN remembered

PIN protection ☒

[Change PIN](#)

Current PIN

Confirm current PIN

Remember PIN ☒

[Save](#)

Figure 55 – SIM security settings – PIN change successful

Unlocking a PUK locked SIM

After three incorrect attempts at entering the PIN, the SIM card becomes PUK (Personal Unblocking Key) locked and you are requested to enter a PUK code to unlock it.



Note – To obtain the PUK unlock code, you must contact your service provider.

You will be issued a PUK to enable you to unlock the SIM and enter a new PIN. Enter the new PIN and PUK codes.

Click the Save button when you have finished entering the new PIN and PUK codes.

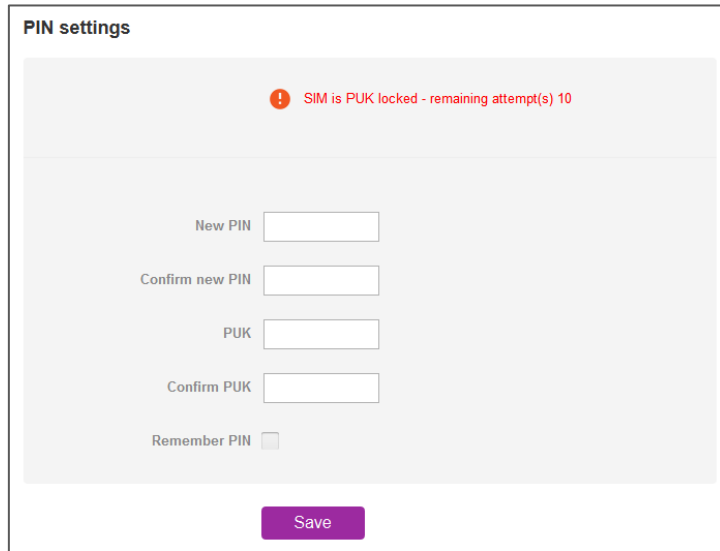


Figure 56 – SIM security – SIM PUK locked

Connect on demand

The connect on demand feature keeps the Packet Data Protocol (PDP) context deactivated by default while making it appear to locally connected devices that the router has a permanent connection to the mobile broadband network. When a packet of interest arrives or an SMS wake-up command is received, the router attempts to establish a mobile broadband data connection. When the data connection is established, the router monitors traffic and terminates the link when it is idle.




Note – When interesting packets arrive, the recovery time for the wireless WAN connection is approximately 20-30 seconds.

Configuring Connect on demand

To configure Connect on demand:

- 1 Click the Networking menu item from the top menu bar.
- 2 On the Connect on demand page, click the Connect on demand toggle key so that it is ON. Extra options appear. Note that the selected profile drop-down list is greyed out and is used to display the currently selected default profile for which the Connect on demand configuration will apply. See the following sub-sections for further instructions.

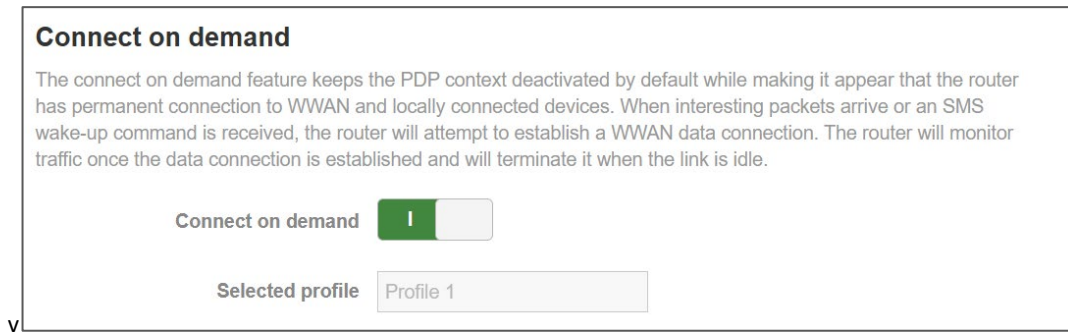

Connect on demand

The connect on demand feature keeps the PDP context deactivated by default while making it appear that the router has permanent connection to WWAN and locally connected devices. When interesting packets arrive or an SMS wake-up command is received, the router will attempt to establish a WWAN data connection. The router will monitor traffic once the data connection is established and will terminate it when the link is idle.


Connect on demand ☒

Selected profile

Figure 57 – Connect on demand configuration options

Setting the router to dial a connection when traffic is detected on specific ports

In some situations, you may wish to have the internet connection disabled except at times when outbound traffic to a particular external host's port or group of ports is sent to the router. To use this feature, click Enable dial port filter and enter the port number or list of port numbers separated by commas. When you select this option, all outbound TCP/UDP packets to any remote host on the specified port(s) will trigger the connection to dial. Note that when this feature is enabled, the options to ignore specific packet types are not available.

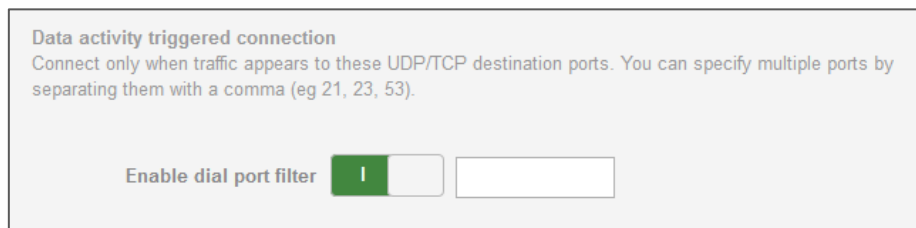

Data activity triggered connection

Connect only when traffic appears to these UDP/TCP destination ports. You can specify multiple ports by separating them with a comma (eg 21, 23, 53).

Enable dial port filter ☒

Figure 58 – Connect on demand – Data activity triggered connection

You can allow Microsoft network awareness (NCSI) traffic through but if you prefer that they do not trigger the connection, click the Ignore Microsoft network awareness (NCSI) traffic toggle key to set it to ON.



Connect on data activity except when activity matches these applications

Ignore Microsoft network awareness (NCSI) traffic ☒

Figure 59 – Connect on demand – Ignore NCSI traffic

Excluding certain packet types from triggering the connection to dial

Depending on your environment, you might prefer to exclude certain types of traffic passing through the router from triggering the data connection. You can tell the router to ignore outbound TCP, UDP or ICMP packets. When any of these options are checked the router will not dial a connection when that type of outbound destined data packet reaches the router from a locally connected device.

Connect on data activity except when activity matches these IP protocols

Ignore ICMP ☒

Ignore TCP ☐

Ignore UDP ☐

Figure 60 – Connect on demand – Excluding IP protocols

Excluding certain application types from triggering the connection to dial

Some devices may generate general traffic as a part of normal operation which you may not want to trigger the data connection. You can set the router to ignore Domain Name System (DNS), Network Time Protocol (NTP) or Microsoft network awareness (NCSI) traffic from devices behind the router. When you check the box for these options, it tells the router to ignore the request from that application type and will not dial a connection when this data type is received. Note that enabling Ignore Microsoft network awareness (NCSI) traffic also enables Ignore DNS and Ignore NTP.

Connect on data activity except when activity matches these applications

Ignore DNS ☒

Ignore NTP ☒

Ignore Microsoft network awareness (NCSI) traffic ☒

Figure 61 – Connect on demand – Excluding application types

Setting timers for connection and disconnection

The router has several timer settings which let you determine when a connection is dialled and when it is disconnected.

Connect and disconnect timers	Periodic connect schedule
On data activity, stay online for at least	20 minutes
After connecting, stay online for at least	20 minutes
After hanging up, don't redial for	5 seconds
Disconnect regardless of traffic after	never
Connect regularly, every	never
Randomize connect frequency by up to	never

Figure 62 – Connect on demand – Connect and disconnect timers

Option	Description
On data activity, stay online for at least	When traffic as per the configured settings above appear, the router will either continue to stay online, or dial a connection and will not disconnect it for the specified time period (min. 1 minute, max. 1 hour). This timer is continuously reset throughout the duration of a dial-up session, whenever data activity is detected matching the rules above.
After connecting, stay online for at least	This timer configures the router to not hang-up the connection for the specified time period after initially dialling the connection. This setting cannot be less than the keep online period above. This timer affects the connection only once per dial up session, at the beginning of the session.
After hanging up, don't redial for	After a connection has been disconnected, you can tell the router to rest for a period of time before re-dialling.
Disconnect regardless of traffic after	Forces the router to disconnect the connection regardless of the traffic passing through it. The default setting is never.
Connect regularly, every / Randomise connect frequency by up to	If you want to have the router dial a connection at regular intervals, use Connect regularly, every to specify the interval between dials. Setting this to never effectively disables this option. The router also features the ability to randomise the time at which the first dial action is performed. This is useful in situations such as where you have numerous routers in an area where a power outage has occurred. Setting a random dial time helps to reduce network congestion when all the routers are powered on so they do not all try to connect simultaneously. When Connect regularly, every is set to at least 2 minutes, you are able to configure the router to randomise the time it begins to dial. The randomised dial timer only affects the initial dial after the unit powers on or after the settings are saved. For example, if you configure the router to dial every 2 minutes with a randomised dial starting time of 1 minute, the router waits for the Connect regularly, every time (2 minutes) and then randomly selects a time less than or equal to the Randomise connect frequency by up to time (1 minute). After the randomly selected time has elapsed, the router dials the connection. After the first dial, the router dials the connection every 2 minutes, ignoring the Randomise connect frequency by up to time.

Table 27 – Connect on demand – Connect and disconnect timers descriptions

Verbose mode

The router provides the option of logging all the data activity which matches the settings for the Connect on demand feature for advanced troubleshooting purposes. To enable the recording of detailed logs, click the Enable verbose mode toggle key to switch it ON. See the System log section for more information.

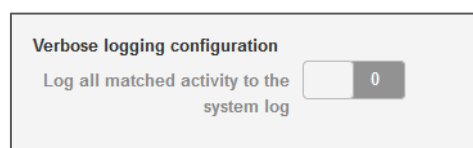


Figure 63 – Connect on demand – Verbose logging configuration

Manually connecting/disconnecting

There may be times when you need to either force a connection to be made or force a disconnection manually. You can use the Manual connect and Manual disconnect buttons to do this whenever necessary. The online status of the connection is displayed above the buttons.

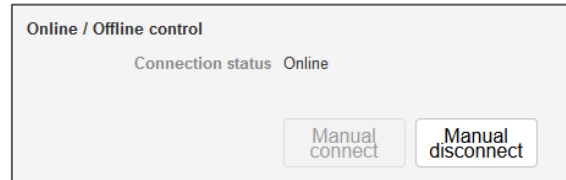


Figure 64 – Connect on demand – Online/Offline control

When you have finished configuring the options for the Connect on demand feature, click the Save button at the bottom to save your changes.

SMS Wake up

The router can also be woken up by means of an SMS message using the SMS diagnostics feature by sending a zero byte class 1 flash SMS. See the Diagnostics section for details on using the SMS Wake up function.

LAN

LAN configuration

The LAN configuration page is used to configure the LAN settings of the router and to enable or disable DNS Masquerading. To access the LAN configuration page, click on the Networking menu at the top of the screen, then click on the LAN menu on the left.

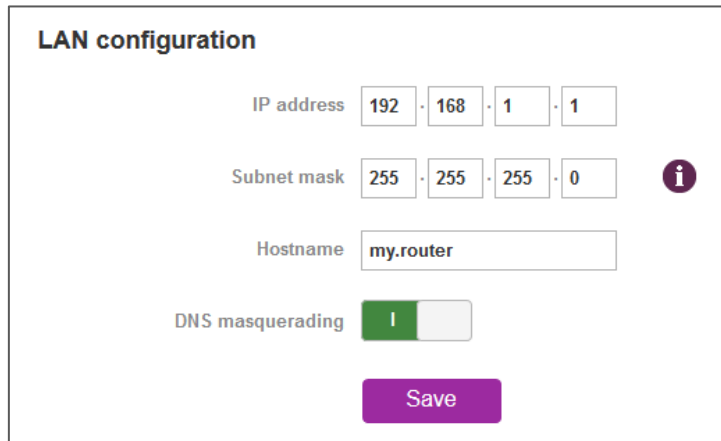


Figure 65 – LAN configuration settings

The default IP of the LAN port is 192.168.1.1 with subnet mask 255.255.255.0. To change the IP address or Subnet mask, enter the new IP Address and/or Subnet mask and click the Save button.



Note – If you change the IP address, remember to refresh the Ethernet interface of your device or set an appropriate IP address range, then enter the new IP address into your browser address bar to access the router.

DNS masquerading

DNS masquerading allows the router to proxy DNS requests from LAN clients to dynamically assigned DNS servers. When enabled, clients on the router's LAN can then use the router as a DNS server without needing to know the dynamically assigned cellular network DNS servers.

With DNS masquerading ON, the DHCP server embedded in the Vodafone MachineLink 4G Lite router hands out its own IP address (e.g. 192.168.1.1) as the DNS server address to LAN clients. The downstream clients then send DNS requests to the Vodafone MachineLink 4G Lite router which proxies them to the upstream DNS servers.

With DNS masquerading OFF, the DHCP server hands out the upstream DNS server IP addresses to downstream clients directly, so that downstream clients send DNS requests directly to the upstream DNS servers without being proxied by the Vodafone MachineLink 4G Lite router.

You may also override the DNS Masquerading option by specifying custom DNS Server IP addresses in the DHCP Server configuration mentioned in the next section of this guide. In this case the DHCP server assigns downstream devices the manually configured addresses and the DNS Masquerading option is ignored.

In most cases, it is not necessary to disable DNS masquerading but if you need to, click the DNS masquerading toggle key to turn it OFF and then click the Save button. DHCP


DHCP

The DHCP page is used to adjust the settings used by the router's built in DHCP Server which assigns IP addresses to locally connected devices. To access the DHCP configuration page, click on the Networking menu at the top of the screen, click on the LAN menu on the left then select the DHCP menu item.

DHCP relay configuration

In advanced networks configurations where the Vodafone MachineLink 4G Lite router should not be responsible for DHCP assignment, but instead an existing DHCP server is located on the Wireless WAN or LAN connections, the clients behind the Vodafone MachineLink 4G Lite router are able to communicate with the DHCP server when DHCP relay is enabled. This enables the Vodafone MachineLink 4G Lite router to accept client broadcast messages and to forward them onto another subnet.

To configure the router to act as a DHCP relay agent click the DHCP relay toggle key to turn it ON and enter the DHCP server address into the DHCP server address field. DHCP relay is disabled by default.

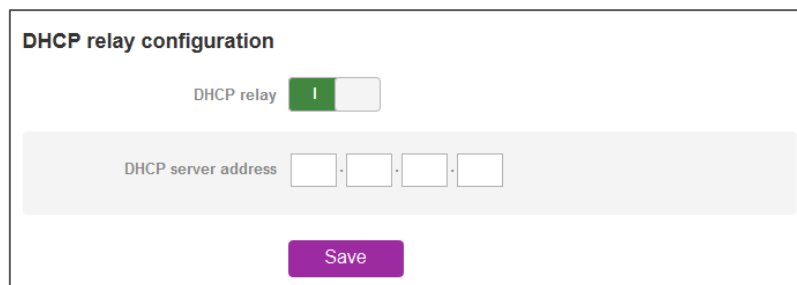

DHCP relay configuration

DHCP relay ☒

DHCP server address . . .

Save

Figure 66 – DHCP relay configuration

DHCP configuration

You can manually set the start and end address range to be used to automatically assign addresses within, the lease time of the assigned address, the default domain name suffix, primary and secondary DNS server, the primary and secondary WINS server, as well as the advanced DHCP settings such as NTP, TFTP and Option 150/Option 160 (VoIP options).

DHCP configuration

DHCP ☒

DHCP start range

192

168

1

100

DHCP end range

192

168

1

199

DHCP lease time(seconds)

86400

Default domain name suffix

DNS server 1 IP address

DNS server 2 IP address

WINS server 1 IP address

WINS server 2 IP address

NTP server (Option 42)

TFTP server (Option 66)

DHCP option 150

DHCP option 160

Save

Figure 67 – DHCP configuration

Option	Description
DHCP start range	Sets the first IP address of the DHCP range
DHCP end range	Sets the last IP address of the DHCP range
DHCP lease time (seconds)	The length of time in seconds that DHCP allocated IP addresses are valid
Default domain name suffix	Specifies the default domain name suffix for the DHCP clients. A domain name suffix enables users to access a local server, for example, server1, without typing the full domain name server1.domain.com
DNS server 1 IP address	Specifies the primary DNS (Domain Name System) server's IP address.
DNS server 2 IP address	Specifies the secondary DNS (Domain Name System) server's IP address.
WINS server 1 IP address	Specifies the primary WINS (Windows Internet Name Service) server IP address
WINS server 2 IP address	Specifies the secondary WINS (Windows Internet Name Service) server IP address
NTP server (Option 42)	Specifies the IP address of the NTP (Network Time Protocol) server
TFTP Server (Option 66)	Specifies the TFTP (Trivial File Transfer Protocol) server
DHCP option 150	This is used to configure Cisco IP phones. When a Cisco IP phone starts, if it is not pre-configured with the IP address and TFTP address, it sends a request to the DHCP server to obtain this information. Specify the string which will be sent as a reply to the option 150 request.
DHCP option 160	This is used to configure Polycom IP phones. When a Polycom IP phone starts, if it is not pre-configured with the IP address and TFTP address, it sends a request to the DHCP server to obtain this information. Specify the string which will be sent as a reply to the option 160 request.

Table 28 – DHCP configuration descriptions

Enter the desired DHCP options and click the Save button.

Address reservation list

DHCP clients are dynamically assigned an IP address as they connect, but you can reserve an address for a particular device using the address reservation list.

Address reservation list

+ Add

Computer name	MAC address	IP address	Enable
		0 0 0 0	☒ x

Save

Figure 68 – DHCP – Address reservation list

To add a device to the address reservation list:

- 1 Click the +Add button.
- 2 In the Computer Name field enter a name for the device.
- 3 In the MAC Address field, enter the device's MAC address.
- 4 In the IP Address fields, enter the IP address that you wish to reserve for the device.
- 5 If the Enable toggle key is not set to ON, click it to switch it to the ON position.
- 6 Click the Save button to save the settings.

Dynamic DHCP client list

The Dynamic DHCP client list displays a list of the DHCP clients. If you want to reserve the current IP address for future use, click the Clone button and the details will be copied to the address reservation list fields. Remember to click the Save button under the Address reservation list section to confirm the configuration.

Dynamic DHCP client list			
Computer name	MAC address	IP address	Expiry time
computer	00:02:19:0e:3a:19	192.168.1.129	15/8/2014 2:08:07 pm
			 Clone

Figure 69 – Dynamic DHCP client list

Ethernet WAN/LAN

The Ethernet WAN/LAN pages provide configuration options for the two built-in Ethernet ports and any USB-to-Ethernet ports you may connect.

Interface assignment

The **Interface assignment** page displays the Ethernet interfaces and allows you to configure whether they operate in LAN or WAN mode.

To access the Ethernet group page, click on the Networking menu at the top of the screen, click on the Ethernet WAN/LAN menu on the left then select the Interface assignment menu item.

The default failover sequence is as follows:

- 1 Ethernet WAN
- 2 USB to Ethernet adapter (if configured)
- 3 WWAN

Ethernet interface assignment						
No.	Description	Name	Link status	MAC	Port	Configuration
1	System Ethernet port	eth.0	Up	18:F1:45:EF:11:DF	platform	LAN 
2	USB	eth.1	Down	2A:B7:06:4A:9E:3E	gadget	LAN 


Figure 70 – Interface assignment page

Option	Definition
No.	A number identifying the interface on the router.
Description	A description of the type of interface.
Name	The name used to identify the interface on the router.
Link status	Displays whether the interface is inserted
MAC	The MAC address of the interface.
Port	The type of port.
Configuration	Use the drop-down list to select whether the port operates in LAN mode, WAN mode or is disabled.

Table 29 – Interface assignment page items

WAN configuration

The **WAN configuration** page allows you to configure the connection type and metric of the available WAN connections. To access the Ethernet WAN page, click on the Networking menu at the top of the screen, click on the Ethernet WAN/LAN menu on the left then select the WAN configuration menu item.

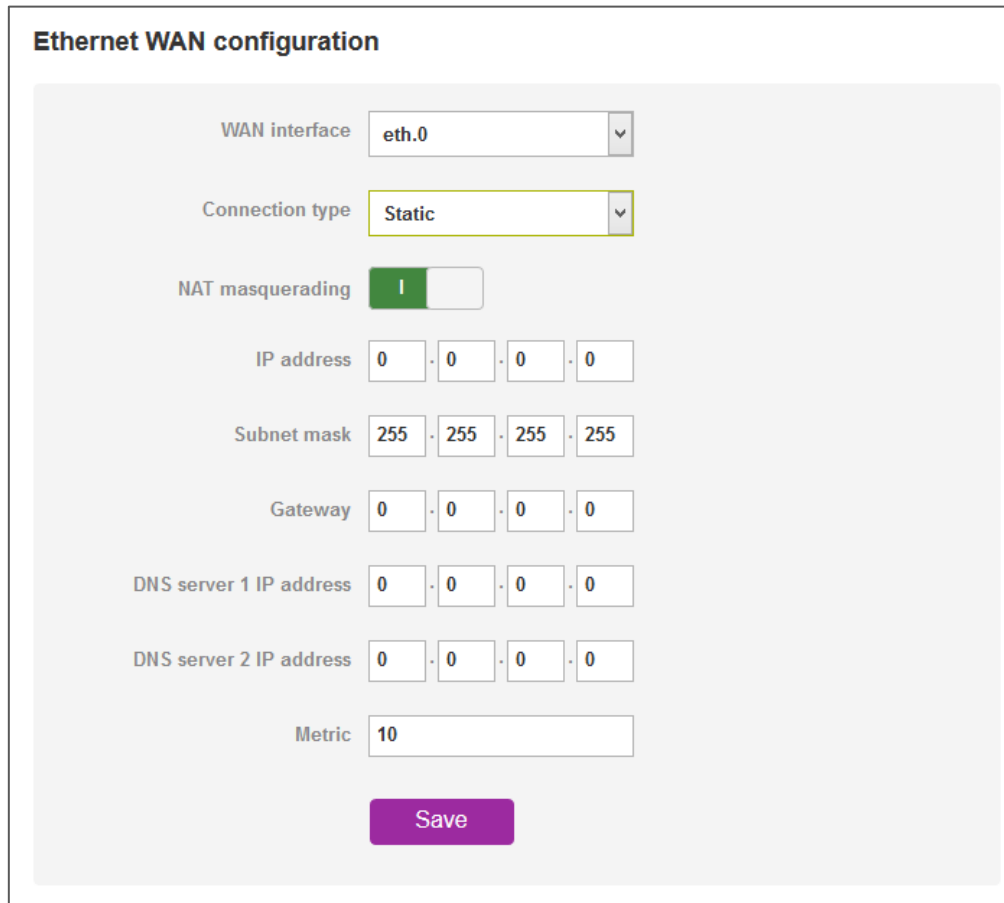

Ethernet WAN configuration

WAN interface: eth.0

Connection type: Static

NAT masquerading: ☒

IP address: 0 . 0 . 0 . 0

Subnet mask: 255 . 255 . 255 . 255

Gateway: 0 . 0 . 0 . 0

DNS server 1 IP address: 0 . 0 . 0 . 0

DNS server 2 IP address: 0 . 0 . 0 . 0

Metric: 10

Save

Figure 71 – Ethernet WAN configuration

Option	Definition
WAN Ethernet	Use this field to select the WAN interface to configure.
Connection Type	Selects whether the WAN interface has static IP settings or DHCP.
IP address	The IP address to assign to the selected WAN interface.
Subnet mask	The Subnet mask of the IP address above.
Gateway	The gateway to assign this WAN interface.
DNS server 1 IP address	The first DNS server for the WAN interface.
DNS server 2 IP address	The second DNS server for the WAN interface.
Metric	The metric value is used to define the priority of the interface. Lower metric values indicate higher priority.

Table 30 – Ethernet WAN configuration options

IP-subnet based VLAN

The MachineLink 4G Lite router supports an IP subnet-based VLAN configuration whereby layer 2 VLAN headers are tagged depending on the layer 3 source/destination address and subnet information. Each Ethernet port verifies and tags the packets just before the port transmits on layer 1. In this IP subnet-based VLAN implementation, only outgoing packets may be tagged according to the source and destination subnet.

To configure IP-subnet based VLAN operation:

- 1 Click the IP-subnet based VLAN operation toggle key so that it is in the ON position.

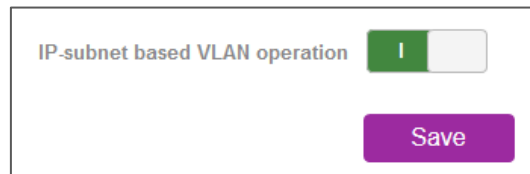


Figure 72 – IP-subnet based VLAN operation toggle key

- 2 Under the VLAN list section, click the +Add button.

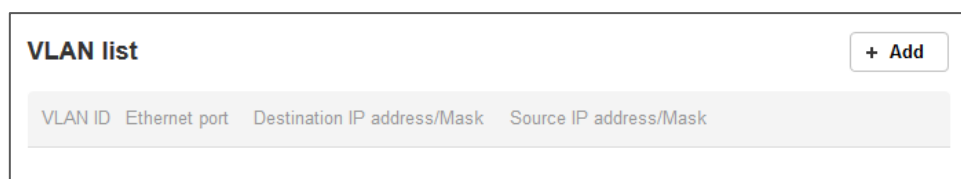


Figure 73 – VLAN list

- 3 Enter the VLAN ID, Ethernet port, Destination IP address/Mask and Source IP address/Mask in the appropriate fields.

Figure 74 – IP-subnet based VLAN setting

Option	Definition
VLAN ID	This is an ID which is inserted into a packet header to identify which VLAN the packet belongs to. The valid range is 1-4095.

Option	Definition
Ethernet port	Defines the Ethernet port that the VLAN is connected to.
Destination IP address/Mask	This is the destination of VLAN packets on your network expressed in CIDR notation.
Source IP address/Mask	The source of the VLAN packets expressed in CIDR notation.

Table 31 – IP-subnet base VLAN

- 4 Click the Save button. For additional VLANs, repeat steps 2 to 4.

PPPoE

If desired, you can have a client device connected to the Ethernet port initiate the mobile broadband connection using a PPPoE session. This is particularly useful in situations where you wish to provide Wireless WAN data access to an existing router which you want to have full public WAN IP access and have control over routing functionality. The PPPoE connection is established over the highest priority interface.

To configure PPPoE:

- 1 Select the Networking menu item from the top menu bar, then select the PPPoE menu on the left side of the screen. The PPPoE configuration screen is displayed.

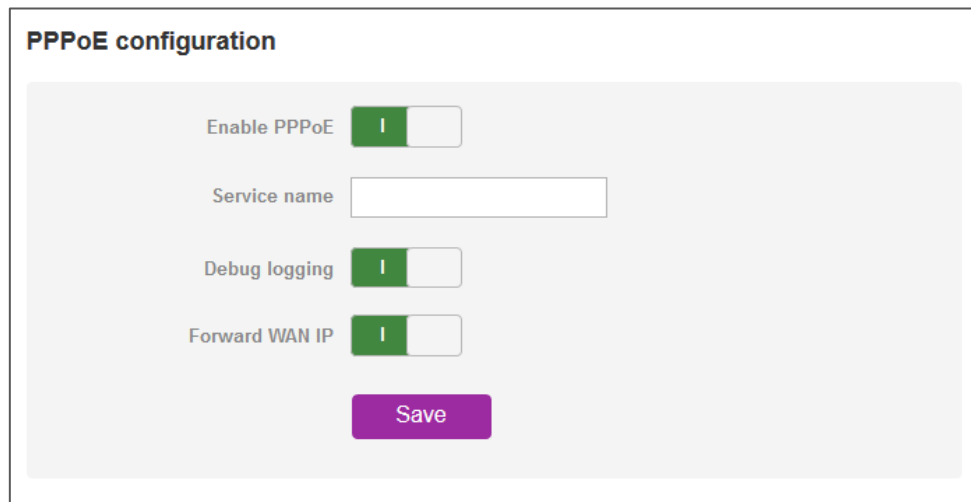


Figure 75 – PPPoE configuration

- 2 Click the Enable PPPoE toggle key so that it is ON.
- 3 (Optional) In the Service name field, enter a name to use for the connection. This name is displayed on the Status page to identify the PPPoE connection. Any name you enter here must also be entered in the PPPoE connection profile in order for it to work.
- 4 If you require additional logging to be made available, click the Debug logging toggle key so that it is in the ON position. This displays PPPoE negotiation details in the System log.
- 5 The Forward WAN IP option determines whether the router passes the WAN IP address on to the PPPoE client. When this option is set to ON the first PPPoE client to connect will receive the WAN IP address and no further clients will be able to make a connection. In this mode, the router transparently bridges the connection and many of the router's features are disabled. When this option is set to OFF, the router retains the WAN IP address and performs Network Address Translation (NAT) for connected clients. In this mode, you are able to connect multiple PPPoE clients and all of the router's features are available.
- 6 Click the Save button to confirm the settings.
- 7 Click the Status menu item from the top menu bar. When Forward WAN IP is enabled, the status page shows a Transparent bridge mode section and displays the WAN IP.

^ Transparent bridge mode

Status
ENABLED

IP
10.86.68.219 / 255.255.255.255

Service name
Blank

Figure 76 – Transparent bridge mode status

- 8 Configure the properties of the interface that the PPPoE connection will use (determined by WAN priority) in order to provide authentication credentials. Each interface uses the authentication credentials configured on the router for that particular interface, not those entered in the PPPoE client. For example, when using WWAN as the PPPoE interface, enter the username and password on the Data connection profile settings before connecting. See the Manually configuring a connection profile section for more detail.
- 9 Use your downstream device to initiate a network connection using a PPPoE client.

WAN failover

The WAN failover page displays a summary of the configured WAN interfaces and their priorities (Metric). Lower metric values determine higher priority. The priority of the interfaces can be adjusted using the up and down arrows in the Priority column. When the interface with the highest priority goes down, the router fails over to the next highest priority interface. The method used to determine whether an interface is “up” or “down” is defined by the Monitor setting. By default, an interface is monitored by its link status, but it may be configured to be monitored by pings instead.

To access the WAN failover page, click on the Networking menu at the top of the screen then click on the WAN failover menu item on the left.

Active WAN interfaces

No.	Name	Metric	Monitor type	Priority	
1	wwan.1	25	Link		Edit

Save

WAN configurations

WAN interfaces can be activated or reconfigured in the following configuration pages.


[WWAN data connection](#)
[Ethernet WAN](#)

Figure 77 – WAN summary

To edit an interface, select the edit icon for the interface you wish to edit. The Failover configuration page is displayed.

Hardware link

When Monitoring method is set to Hardware link the failover mechanism is controlled by the physical detection of the link. When the physical link to eth.0 is broken (i.e. the cable is disconnected or some other hardware fault causes the physical connection to fail), the router fails over to the WAN interface with the next highest priority (metric).

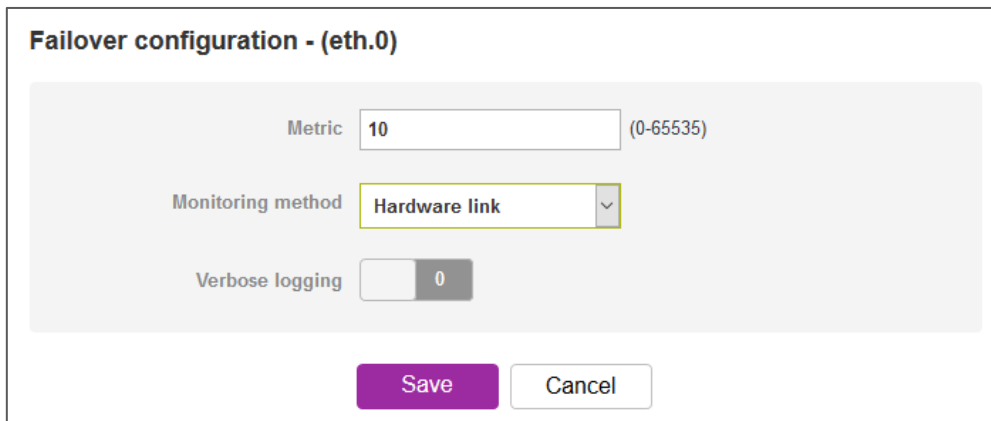

Failover configuration - (eth.0)

Metric (0-65535)

Monitoring method

Verbose logging ☐ 0

Figure 78 – Failover configuration – hardware link

Option	Description
Priority	The priority (metric) is a numeric value which determines which interface has priority. Lower priority values mean higher priority.
Monitoring method	Specifies the means used to determine whether the link is up or down.
Verbose logging	When enabled, this logs verbose comments in the system log related to the failover monitoring.

Table 32 – Failover configuration – Hardware link monitoring

Ping monitor

When Monitoring method is set to Ping, controlled ping packets can be used to determine the status of the link. These are small packets of data that the router sends to a remote address and if the connection is up, a reply is received. They are sent indefinitely at regular intervals that you specify. At each interval, 3 pings are sent to the first destination address and 3 pings are sent to the second destination address configured for each WAN interface to test the availability of the interface. The pings sent at each interval are from here on referred to as an “instance” of pings.

Ping timers

The Periodic ping timer setting sets a regular interval at which an instance of pings is sent to test the availability of an interface.

The Retry timer setting is activated only when all pings in an instance sent at the Periodic ping timer interval fail and is used to set a different, usually shorter, interval to speed up the router’s response to an interface failure.

Methods of evaluating ping responses

For simplicity, we recommend using only one of the two methods of evaluating the ping responses. The available methods are:

- Consecutive errors - using this method, the router will determine the availability of an interface based on a set number of consecutive ping instance responses.
- Periodic ratio monitor - using this method, the router will determine the availability of an interface based on a set ratio of ping instance successes or failures to the number of attempts.


It should be noted that the Periodic ratio monitor evaluates an interface over a series of ping instances (defined by the Total monitor count) and when the series has completed, the success and fail counts are reset. For example, with the default Total monitor count value set to 10 and Failover fail count set to 5, the router sends 10 ping instances and if 4 of those instances fail and the first instance of the next series of 10 fails, the router will not fail over because the 5 failed instances occurred across a different series.

Failing over to a lower priority interface


Each WAN interface is independently monitored according to its own distinct settings, following the processes outlined below.

- At a regular interval stipulated by the Periodic ping timer setting, the router sends 3 ping requests via the interface to both the first and second destination addresses simultaneously. If it receives a reply to any of those pings on the interface, it is considered to be up and the router continues pinging on the interface at the Periodic ping timer interval.
- If the router does not receive a response to all six pings on the interface by the start of the next Periodic ping timer interval, it registers this failure as a Fail count and continues to send pings to both destination addresses at the Retry timer interval (typically set at a shorter interval than the Periodic ping timer since there may be a problem). If a response is received to any of those pings, the router returns to sending pings according to the Periodic ping timer setting.
- However, if after another period defined by the Retry timer setting the router again does not receive a response to any of the pings, it registers another Fail count.
- The router repeats the retry process until one of the following conditions is met:
 - it receives a ping response and returns to testing the interface according to the Periodic ping timer;
 - the number configured in the Failover fail count field (under Consecutive error monitor) is reached, in which case the interface is marked as unavailable and the router automatically reroutes packets according to the configured priorities of the remaining interfaces;
 - the number of Failover fail count pings (under Periodic ratio monitor) is reached within a particular series of the Monitor total count, in which case the interface is marked as unavailable and the router automatically reroutes packets according to the configured priorities of the remaining interfaces.

Consecutive error monitor failover example

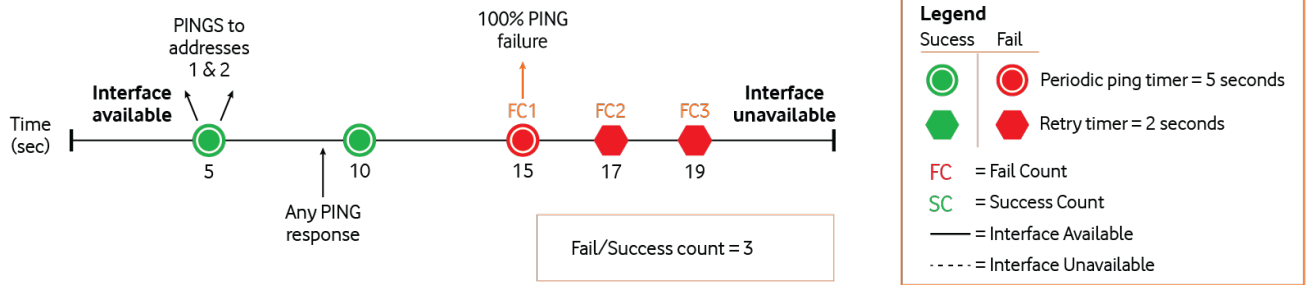

Periodic ratio monitor failover example

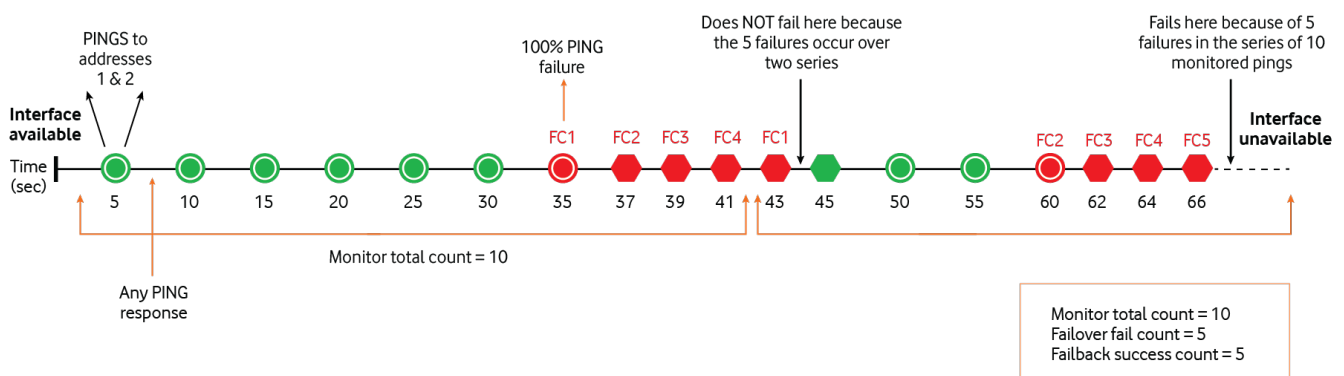


Failing back to a higher priority interface


The process for returning an unavailable interface to an available state is similar to the above process. When an interface is marked unavailable by the ping monitor, the router continues to retry pings to the two destination addresses via that interface according to the Periodic ping timer setting until one of the following conditions is met:

- it receives a 100% successful response to the six pings for a number of consecutive periods that equal the configured Failback success count setting
- the number of Failback success count pings (under Periodic ratio monitor) is reached within a particular series of the Monitor total count, in which case the router continues pinging at the Periodic ping timer interval and marks the interface as available. The router automatically reroutes packets according to the configured priorities of the available interfaces.

Consecutive error monitor failback example

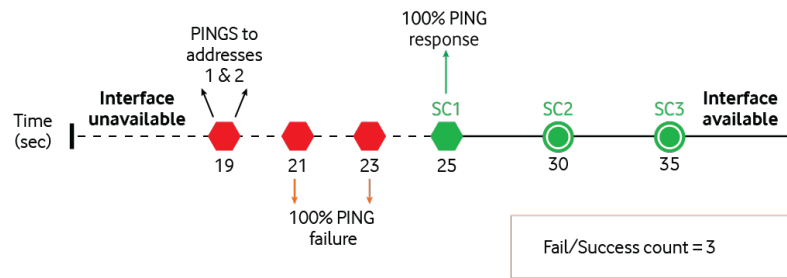

Periodic ratio monitor failback example

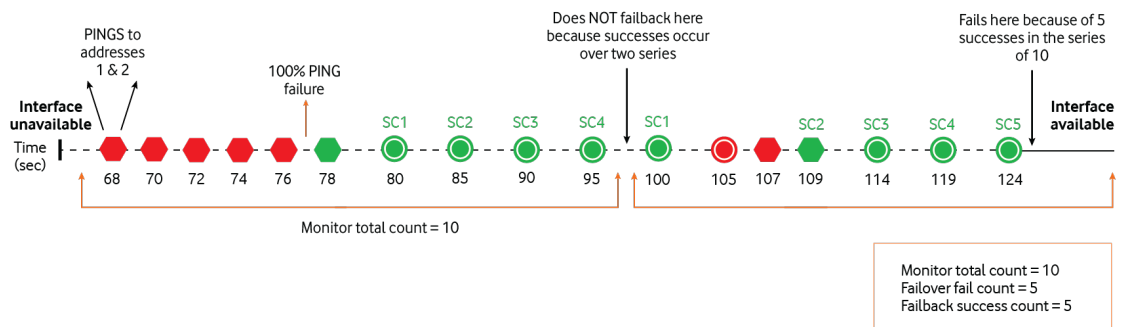

To configure the ping monitoring method:

- 1 Select the Edit button corresponding to the interface with the lowest metric (highest priority).

1	eth.0	10	Link		Edit
---	-------	----	------	--	------

- 2 Use the Monitoring method drop down list to select Ping.

Failover configuration - (eth.0)

Metric (0-65535)

Monitoring method

Verbose logging ☐ 0

First destination address

Second destination address

Periodic Ping timer (3-65535) secs

Retry timer (2-65535) secs

Consecutive error monitor

Consecutive error monitor ☒ 1

Failover fail count (3-65535) times

Failback success count (3-65535) times

Periodic ratio monitor

Periodic ratio monitor ☒ 1

Monitor total count (3-65535) times

Failover fail count (3-65535) times

Failback success count (3-65535) times

- 3 In the First destination address field, enter a website address or IP address to which the router should send the first round of ping requests.
- 4 In the Second destination address field, enter a website address or IP address to which the router should send the second round of ping requests.
- 5 In the Periodic Ping timer field, enter an integer between 3 and 65535 for the number of seconds the router should wait between ping attempts.
- 6 In the Retry timer field, enter an integer between 2 and 65535 for the number of seconds the router should wait between retry ping attempts, i.e. pings to the second destination address.

- 7 To simplify configuration, we recommend using only one of the monitor types at any point in time i.e. either the Consecutive error monitor or the Periodic ratio monitor.

Consecutive error monitor

- To use the Consecutive error monitor type, click the Consecutive error monitor toggle key so that it is in the ON position.
- In the Failover fail count field, enter an integer between 3 and 65535 for the number of times a retry ping should fail before the router fails over to the next WAN interface.
- In the Failback success count field, enter an integer between 3 and 65535 for the number of times a periodic ping should succeed before the router fails back to the higher priority interface.
- Click the Save button when you have finished entering your settings.

Periodic ratio monitor

- To use the Periodic ratio monitor, set the Fail/success count field to 0.
- In the Monitor total count field, enter an integer between 3 and 65535 for the number of previous pings to consider for failover and failback.
- If you do not wish to use the periodic ratio monitor, set this to 0. In the Failover fail count field, enter the number of pings out of the total count that must fail before the router fails over to the next highest priority WAN interface.
- In the Failback success count field, enter the number of pings out of the total count that must succeed before the router fails back to the higher priority WAN interface.

The Active WAN interfaces are displayed once again, this time showing that the Ping monitor type is in use for the interface.

Active WAN interfaces

No.	Name	Metric	Monitor type	Priority	
1	wwan.1	25	Ping	 	 Edit

Save

Click the Save button to save the settings. The WAN failover configuration is complete.

The table below describes each field on the Failover configuration screen.

Option	Description
Metric	The metric is a numeric value which determines which interface has priority. Lower priority values mean higher priority.
Monitoring method	Specifies the means used to determine whether the link is up or down.
Verbose logging	When enabled, this logs verbose comments in the system log related to the failover monitoring.
First destination address	The first address the router that the router should ping in order to confirm the connection is up. This may be an IP address or a domain name.
Second destination address	The second address the router that the router should ping in order to confirm the connection is up. This may be an IP address or a domain name.
Periodic Ping timer	The time in seconds between ping attempts.
Retry timer	The time in seconds between attempts when a ping failure occurs.
Consecutive error monitor	
Failover fail count	The number of failed pings that must occur before the monitor fails the connection over to the next interface.
Failback success count	The number of successful pings that must occur before the monitor fails the connection back to the higher priority interface.
Periodic ratio monitor	
Monitor total count	This field specifies a series of pings to consider when calculating whether to fail over or fail back. When the series is completed, the router repeats the ping test and resets the Failover fail count/Failback success count, therefore, in order for the failover or failback ratio to be met, the number of Failover fail counts/Failback success counts must occur within a particular series.
Failover fail count	This field specifies the number of failed ping results that must occur within a series of pings configured in the Monitor total count before the router fails over to the next highest priority interface. For example, at the default setting of 5, the router fails over to the next interface when 5 out of 10 ping attempts in a particular series have failed. The failures need not be consecutive to meet the failover criteria. If any 5 of the 10 pings in a series have failed, the router deems the interface connection to be down and fails over.
Failback success count	Like the Failover fail count field, this field specifies the number of ping successes that must be registered on a higher priority interface within a series of pings configured in the Monitor total count before the router fails back to that interface.

Table 33 – Failover configuration – Ping monitoring

Routing

Static

Static routing is the alternative to dynamic routing used in more complex network scenarios and is used to facilitate communication between devices on different networks. Static routing involves configuring the routers in your network with all the information necessary to allow the packets to be forwarded to the correct destination. If you change the IP address of one of the devices in the static route, the route will be broken.

To access the Static routing page, click on the Networking menu at the top of the screen, click on the Routing menu on the left, then click on the Static menu item.

Static routing list						+ Add	
Route name	Destination IP address	Subnet mask	Gateway IP address	Network interface	Metric		
MyRoute	192.168.20.0	255.255.255.0	192.168.1.101	Auto	0	Edit	x

Active routing list							
Destination	Gateway	Netmask	Flags	Metric	Ref	Use	Interface
0.0.0.0	10.101.35.101	0.0.0.0	UG	25	0	0	wwan0.1
10.101.35.100	0.0.0.0	255.255.255.252	U	0	0	0	wwan0.1
192.168.1.0	0.0.0.0	255.255.255.0	U	0	0	0	br0
192.168.20.0	192.168.1.101	255.255.255.0	UG	0	0	0	br0

Figure 79 – Static routing list

Some routes are added by default by the router on initialization such as the Ethernet subnet route for routing to a device on the Ethernet subnet.

Adding Static Routes

To add a new route to the static routing list, click the +Add button. The Static routes page appears.

- 1 In the Route name field, type a name for the route so that it can be identified in the static routing list.
- 2 In the Destination IP address field, enter the IP address of the destination of the route.
- 3 In the Subnet mask field, enter the subnet mask of the route.
- 4 In the Gateway IP address field, enter the IP address of the gateway that will facilitate the route.

- 5 From the Network interface drop down list, select the interface for which you would like to create a static route.
- 6 In the Metric field enter the metric for the route. The metric value is used by the router to prioritise routes. The lower the value, the higher the priority. To give the route the highest priority, set it to 0.
- 7 Click the Save button to save your settings.

Static routes

Route name

Destination IP address . . .

Subnet mask . . .

Gateway IP address . . .

Network interface **Auto**

Metric 0-32766

Figure 80 – Adding a static route

Setting a default gateway with two active connection profiles

When two connection profiles are active, all outbound traffic will be sent via the profile configured as the default gateway (See Data connection). If you wish to configure traffic to a network to go through a particular gateway, there are two methods available:

- Use the static routing method described above.
- Add the details of the remote network to the connection profile configuration.

For example:

Profile name

	Default	Status	APN	Username	
Profile1	☒	☒	xxxxxxx		Edit
Profile2	☐	☒	xxxxxxx		Edit

Figure 81 – Routing – edit connection profile

Packet data connection status

Profile name Profile1	WWAN IP 10.100.42.172	APN xxxxxxx
Status Connected	DNS server 10.4.81.103	Connection uptime 00:05:15
Default profile Yes	10.4.182.20	
Show data usage		
Profile name Profile2	WWAN IP 120.157.85.128	APN xxxxxxx
Status Connected	DNS server 10.4.182.20	Connection uptime 00:00:00
Default profile No	10.4.81.103	
Show data usage		

Figure 82 – Routing – Default gateway with two active connection profiles

In the example configuration above, Profile 1 and Profile 2 are both active and Profile 1 is configured as the default gateway. All outbound traffic is sent via Profile 1.

To specify that outbound traffic to remote network 123.121.120.X (as an example) goes via Profile 2:

- 1 Click the Networking menu at the top of the screen and then click the Edit button next to Profile 2.

Profile name

	Default	Status	APN	Username	
Profile1	☒	☒	xxxxxxx		Edit
Profile2	☐	☒	xxxxxxx		Edit

Figure 83 – Routing – Edit Profile 2

- 2 Scroll to the bottom of the window and in the Profile routing settings section, enter the address of the remote network and the subnet mask. A subnet is an identifiably separate part of a network and a subnet mask is the notation used to denote the subnet. Take care when configuring the subnet mask that the internal IP address of the router is in a different subnet than the remote network.

Profile routing settings

You may route only particular traffic via this connection profile by specifying the network address and mask below of the destination network. Blank values will route all traffic via this profile. Please leave these settings blank if you are unsure.

Network address · · ·

Network mask · · ·

Figure 84 – Routing – adding remote network address and mask

- Click the Save button to save the settings. All outbound traffic to 123.121.120.X addresses are now routed through Profile 2.

Active routing list

Static routes are displayed in the Active routing list.

Destination	Gateway	Netmask	Flags	Metric	Ref	Use	Interface
0.0.0.0	10.86.68.141	0.0.0.0	UG	25	0	0	wwan0
10.86.68.140	0.0.0.0	255.255.255.252	U	0	0	0	wwan0
192.168.1.0	0.0.0.0	255.255.255.0	U	0	0	0	br0
192.168.20.0	192.168.1.101	255.255.255.0	UG	0	0	0	br0

Figure 85 – Active routing list

Deleting static routes

From the static routing list, click the icon to the right of the entry you wish to delete.

Route name	Destination IP address	Subnet mask	Gateway IP address	Network interface	Metric	
MyRoute	192.168.20.0	255.255.255.0	192.168.1.101	Auto	0	Edit X

Figure 86 – Deleting a static route


RIP

RIP (Routing Information Protocol) is used for advertising routes to other routers. Thus all the routes in the router's routing table will be advertised to other nearby routers. For example, the route for the router's Ethernet subnet could be advertised to a router on the PPP interface side so that a router on this network will know how to route to a device on the router's Ethernet subnet. Static routes must be added manually according to your requirements. See Adding Static Routes.

To access the RIP configuration page, click on the Networking menu at the top of the screen, click on the Routing menu on the left, then click on the RIP menu item.



Note – Some routers will ignore RIP.

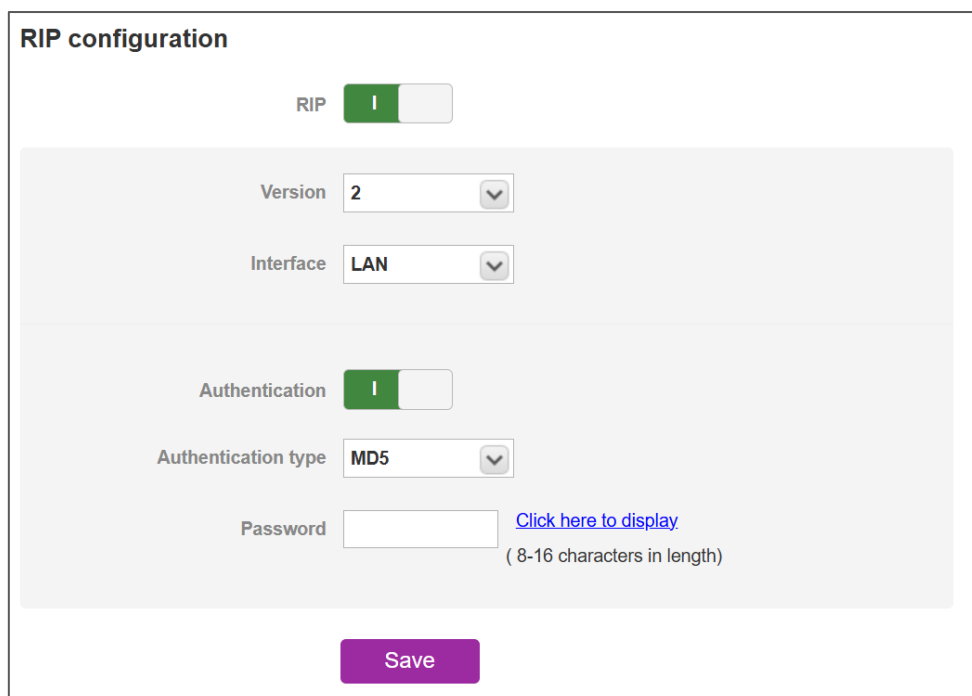

The image shows a web-based configuration page titled "RIP configuration". At the top, there is a toggle switch for "RIP" which is currently turned on (indicated by a green bar). Below this, there are two main sections. The first section contains a "Version" dropdown menu set to "2" and an "Interface" dropdown menu set to "LAN". The second section contains an "Authentication" toggle switch which is also turned on, an "Authentication type" dropdown menu set to "MD5", and a "Password" text field. To the right of the password field is a link that says "Click here to display" and a note "(8-16 characters in length)". At the bottom of the form is a purple "Save" button.

Figure 87 – RIP configuration

To enable Routing Information Protocol (RIP)

- 1 Click the RIP toggle key to switch it to the ON position.
- 2 Using the Version drop down list, select the version of RIP that you would like to use.
- 3 Select the interface for which you want RIP to apply. You can choose the LAN interface, the WWAN interface or Both.
- 4 If you wish to turn on authentication, toggle the Authentication toggle key to the ON position, use the Authentication type drop down list to select the method of authentication then enter password in the Password field.
- 5 Click the Save button to confirm your settings.

Redundancy (VRRP) configuration

Virtual Router Redundancy Protocol (VRRP) is a non-proprietary redundancy protocol designed to increase the availability of the default gateway servicing hosts on the same subnet. This increased reliability is achieved by advertising a “virtual router” (an abstract representation of primary and backup routers acting as a group) as a default gateway to the host(s) instead of one physical router. Two or more physical routers are then configured to stand for the virtual router, with only one doing the actual routing at any given time. If the current physical router that is routing the data on behalf of the virtual router fails, an arrangement is made for another physical router to automatically replace it. The physical router that is currently forwarding data on behalf of the virtual router is called the primary router. Routers are given a priority of between 1 and 255 and the router with the highest priority is assigned as the primary.

A virtual router must use 00-00-5E-00-01-XX as its (MAC) address. The last byte of the address (XX) is the Virtual Router Identifier (VRID), which is different for each virtual router in the network. This address is used by only one physical router at a time and is the only way that other physical routers can identify the primary router within a virtual router.

To access the Redundancy (VRRP) page, click on the Networking menu at the top of the screen, click on the Routing menu on the left, then click on the Redundancy (VRRP) menu item.

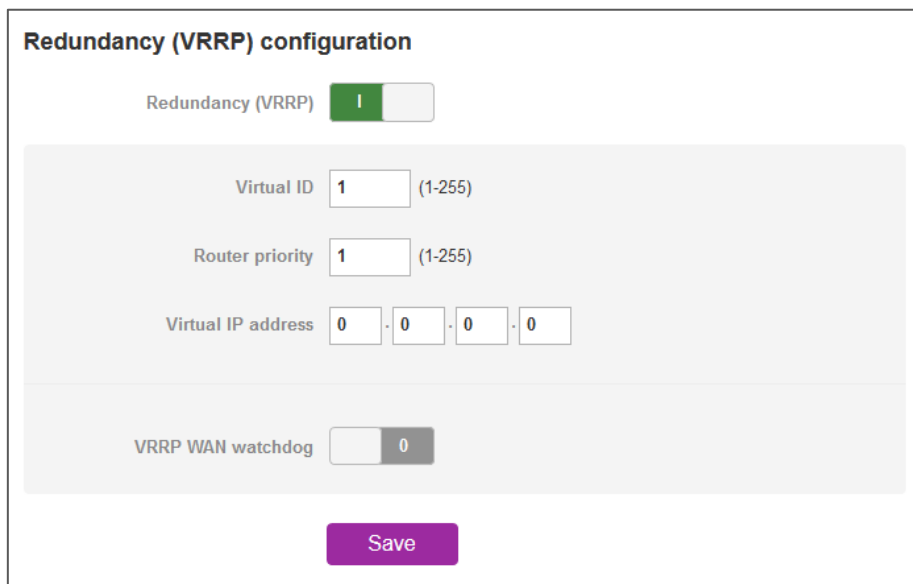


Figure 88 – VRRP configuration

To configure VRRP, configure multiple devices as follows and connect them all via an Ethernet network switch to downstream devices.

- 1 Click the Redundancy (VRRP) toggle key to activate VRRP.
- 2 In the Virtual ID field, enter an ID between 1 and 255. This is the VRRP ID which is different for each virtual router on the network.
- 3 In the Router priority field, enter a value for the priority – a higher value is a higher priority.
- 4 The Virtual IP address field is used to specify the VRRP IP address – this is the virtual IP address that both virtual routers share.

- 5 Click the Save button to save the new settings.



Note – Configuring VRRP changes the MAC address of the Ethernet port and therefore if you want to resume with the web configuration you must use the new IP address (VRRP IP) or clear the arp cache (old MAC address) on a command prompt by typing:

arp -d <ip address> (i.e. arp -d 192.168.1.1)

Using the VRRP WAN watchdog

By default, VRRP WAN watchdog is disabled. When it is disabled, VRRP monitors the status of the primary and backup routers by the physical link. When enabled, the VRRP WAN watchdog feature monitors the status of the connection by both the physical link and controlled ping packets. Refer to the Ping monitor section for more information on how to configure the watchdog.

VRRP WAN watchdog

VRRP WAN watchdog

☒

Verbose logging

☐

0

First destination address

Second destination address

Periodic Ping timer

(3-65535) secs

Retry timer

(2-65535) secs

Consecutive error monitor

Consecutive error monitor

☒

Failover fail count

(3-65535) times

Failback success count

(3-65535) times

Periodic ratio monitor

Periodic ratio monitor

☒

Monitor total count

(3-65535) times

Failover fail count

(3-65535) times

Failback success count

(3-65535) times

Save

Figure 89 – VRRP WAN watchdog configuration

Port forwarding

The Port forwarding list is used to configure the Network Address Translation (NAT) rules currently in effect on the router. To access the Port forwarding page, click on the Networking menu at the top of the screen, click on the Routing menu on the left, then click on the Port forwarding menu item.



Protocol	Source IP address	Original destination port range	Destination IP address	Destination port range	
TCP	192.168.1.1	3389 - 3389	192.168.1.150	3389 - 3389	 Edit 

Figure 90 – Port forwarding list

The purpose of the port forwarding feature is to allow mapping of inbound requests to a specific port on the WAN IP address to any connected device.

Adding a port forwarding rule

To create a new port forwarding rule:

- 1 Click the +Add button. The port forwarding settings screen is displayed.
- 2 Use the Protocol drop down list to select the type of protocol you want to use for the rule. The protocols selections available are TCP, UDP and All.
- 3 In the Source IP Address field, enter a “friendly” address that is allowed to access the router or a wildcard IP address (0.0.0.0) that allows all IP addresses to access the router.
- 4 The Original destination port range (From) and (To) fields are used to specify the port(s) on the source side that are to be forwarded. This allows you to send a range of consecutive port numbers by entering the first in the range in the (From) field and the last in the range in the (To) field. To forward a single port, enter the port in the (From) field and repeat it in the (To) field.
- 5 In the Destination IP address field, enter the IP address of the client to which the traffic should be forwarded.
- 6 The Destination Port Range (From) and (To) fields are used to specify the port(s) on the destination side that are to be forwarded. If the Source port range specifies a single port then the destination port may be configured to any port. If the Source port range specifies a range of port numbers then the Destination port range must be the same as the Source port range.
- 7 Click the Save button to confirm your settings.

Port forwarding settings

Protocol **TCP** ▼

Source IP address . . .

Original destination port range (From) (1-65535) (To) (1-65535)

Destination IP address . . .

Destination port range (From) (1-65535) (To) (1-65535)

Save **Reset** **Cancel**

Figure 91 – Port forwarding settings

To delete a port forwarding rule, click the button on the Port forwarding list for the corresponding rule that you would like to delete.

DMZ

The Demilitarized Zone (DMZ) allows you to configure all incoming traffic on all protocols to be forwarded to a selected device behind the router. This feature can be used to avoid complex port forwarding rules, but it exposes the device to untrusted networks as there is no filtering of what traffic is allowed and what is denied. The DMZ configuration page is used to specify the IP Address of the device to use as the DMZ host.

To access the DMZ page, click on the Networking menu at the top of the screen, click on the Routing menu on the left, then click on the DMZ menu item.

DMZ configuration

DMZ ☒

DMZ IP address 192 . 168 . 1 . 2

Save

Figure 92 – DMZ configuration

- 1 Click the DMZ toggle key to turn the DMZ function ON.
- 2 Enter the IP Address of the device to be the DMZ host into the DMZ IP Address field.
- 3 Click the Save button to save your settings.

Router firewall

The Router firewall page is used to enable or disable the in-built firewall on the router. When enabled, the firewall performs stateful packet inspection on inbound traffic from the wireless WAN and blocks all unknown services, that is, all services not listed on the Services configuration page of the router.

With respect to the other Routing options on the Networking page, the firewall takes a low priority. The priority of the firewall can be described as:

DMZ > MAC/IP/Port filtering rules > MAC/IP/Port filtering default rule > Router firewall rules

In other words, the firewall is of the lowest priority when compared to other manual routing configurations. Therefore, a MAC/IP/Port filtering rule takes priority in the event that there is a conflict of rules. When DMZ is enabled, MAC/IP/Port filtering rules and the router firewall are ignored but the router will still honour the configuration of the Remote router access control settings listed under Administration Settings.

To access the Router firewall page, click on the Networking menu at the top of the screen, click on the Routing menu on the left, then click on the Router firewall menu item.

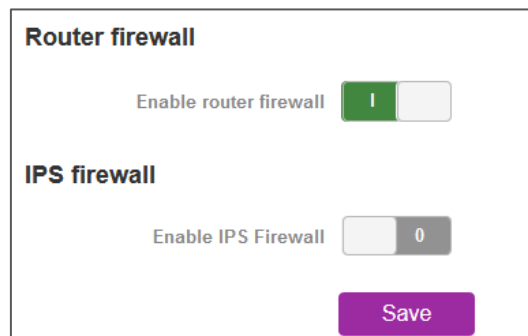


Figure 93 – Router firewall toggle key

IPS firewall

Intrusion Prevention Systems (IPS) work together with, but in a different manner than, system firewalls to prevent unauthorised access to your network and potentially malicious attacks. It provides a few more levels of security protection for your system from external threats.

Firewalls are rules-based and allow or exclude broad ranges of types of traffic that do not meet the criteria. IPS monitors and analyses individual inbound data packets to identify threats. Be aware that an IPS should not be considered a replacement for a well-defined firewall but should be seen as one more defensive weapon in your network security arsenal: firewalls, anti-virus software, etc.

IPS filters are interposed between the firewall and the other MachineLink 4G Lite functionality. It uses a variety of sophisticated techniques to monitor traffic flows and analyse inbound packets to determine whether they constitute network threats and, if so, to deny them access. The IPS firewall allows different levels of protection to be selectively applied, to thwart a threat specifically identified. A logging function to record the operation of the service and the results of its analysis is also included.

Router firewall

Enable router firewall ☒

IPS firewall

Enable IPS Firewall ☒

IPS firewall configurations

IPS Firewall Logging Enable ☒

SYN Flood Defence ☒

 Packets / Second (10-10000)

Ping Flood Defence ☒

 Packets / Second (10-10000)

UDP Flood Defence ☒

 Packets / Second (10-10000)

IPv4 Ping Max Size ☒

 Packets Size (0-65535)

Figure 94 – IPS firewall enabled.

Option	Description
IPS firewall	
Enable IPS firewall	Toggles the IPS firewall function ON or OFF. When Enable IPS Firewall is set to OFF the IPS options in the IPS Firewall configurations section will be hidden
IPS firewall configurations	
IPS Firewall logging Enable	Enables logging of attack on the system log.
SYN Flood Defence	Blocks attacks in which an attacker sends a succession of SYN requests to a target's system to consume enough server resources to make the system unresponsive to legitimate traffic. The default value is 10 packets per second.
Ping Flood Defence	Blocks malicious ICMP flooding attack. The default value is 10 packets per second.
UDP Flood Defence	Blocks attacks in which the attacker overwhelms ports on the targeted host with IP packets containing UDP datagrams. The default value is 10 packets per second.
IPv4 Ping Max Size	Blocks ICMP packets larger than the configured packet size to protect against Ping of Death attacks. The default packet length is 512 Bytes.

Table 34 – IPS firewall configuration options

MAC / IP / Port filtering

The MAC/IP/Port filter feature allows you to apply a policy to the traffic that passes through the router, both inbound and outbound, so that network access can be controlled. When the filter is enabled with a default rule of “Accepted”, all connections will be allowed except those listed in the “Current MAC / IP / Port filtering rules in effect” list. Conversely, when the default rule is set to “Dropped”, all connections are denied except for those listed in the filtering rules list.

To access the MAC / IP / Port filtering page, click on the Networking menu at the top of the screen, click on the Routing menu on the left, then click on the MAC / IP / Port filtering menu item.

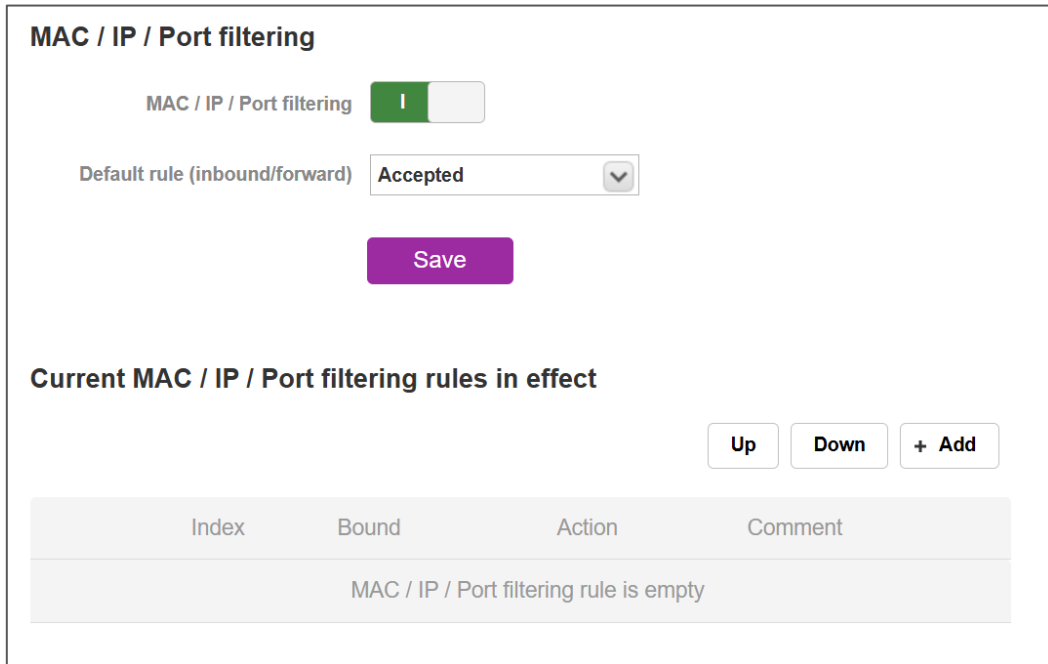


Figure 95 – MAC / IP / Port filtering



Note – When enabling MAC / IP / Port filtering and setting the default rule to “Dropped”, you should ensure that you have first added a filtering rule which allows at least one known MAC/IP to access the router, otherwise you will not be able to access the user interface of the router without resetting the router to factory default settings.

Creating a MAC / IP / Port filtering rule

To create a filtering rule:

- 1 Click the MAC / IP / Port filtering toggle key to switch it to the ON position.
- 2 Using the Default rule (inbound/forward) drop down list, select the default action for the router to take when traffic reaches it. By default, this is configured to Accepted. If you change this to Dropped, you should first configure a filter rule that allows at least one device access to the router, otherwise you will effectively be locked out of the router.
- 3 Click the Save button to confirm the default rule.
- 4 In the Current MAC / IP / Port filtering rules in the effect section, click the +Add button.

Current MAC / IP / Port filtering rules in effect

Up
Down
+ Add

Index	Bound	Action	Comment
MAC / IP / Port filtering rule is empty			

Figure 96 – Current MAC / IP / Port filtering rules in effect

- 5 Enter the details of the rule in the section that is displayed and click the Save button.

MAC / IP / Port filter settings

Bound Forward

Protocol All

Source MAC address

Source IP address . . . / 32

Destination IP address . . . / 32

Action Drop

Comment

Save
Cancel

Figure 97 – MAC / IP / Port filtering settings

Option	Description
Bound	Use the drop-down list to select the direction of the traffic for which you want to apply the rule. Inbound refers to all traffic that is entering the router including data entering from the WAN and the LAN. Outbound refers to all traffic exiting the router including traffic leaving in the direction of the WAN and traffic leaving in the direction of the LAN. Forward specifies traffic that enters on the LAN or WAN side and is forwarded to the opposite end.
Protocol	Use the drop-down list to select the protocol for the rule. You can have the rule apply to All protocols, TCP, UDP, UDP/TCP or ICMP.
Source MAC Address	Enter the MAC address in six groups of two hexadecimal digits separated by colons (:). e.g. 00:40:F4:CE:FA:1E
Source IP Address	Enter the IPv4 address that the traffic originates from and the subnet mask using CIDR notation.

Option	Description
Destination IP Address	Enter the IPv4 address that the traffic is destined for and the subnet mask using CIDR notation.
Action	Select the action to take for traffic which meets the above criteria. You can choose to Accept or Drop packets. When the default rule is set to Accept, you cannot create a rule with an Accept action since the rule is redundant. Likewise, if the default rule is set to Dropped you cannot create a rule with a Drop action.
Comment	[Optional] Use this field to enter a comment as a meaningful description of the rule.

Table 35 – Current MAC / IP / Port filtering rules in effect

- 6 The new rule is displayed in the filtering rules list. You can edit the rule by clicking the  Edit button or delete the rule by clicking the  button.

Current MAC / IP / Port filtering rules in effect				
Up Down + Add				
	Index	Bound	Action	Comment
	1	Forward	Drop	DemonstrationRule
				Edit 

Figure 98 – Completed filtering rule

VPN



Note – VPN, IPsec and GRE tunneling functions are not available for equipment imported or sold in the Russian Federation

A Virtual Private Network (VPN) is a tunnel providing a private link between two networks or devices over a public network. Data to be sent via a VPN needs to be encapsulated and as such is generally not visible to the public network.

The advantages of a VPN connection include:

- Data Protection
- Access Control
- Data Origin Authentication
- Data Integrity

Each VPN connection has different configuration requirements. The following pages detail the configuration options available for the different VPN connection types.

IPSec

IPSec operates on Layer 3 of the OSI model and as such can protect higher layered protocols. IPSec is used for both site to site VPN and Remote Access VPN. The Vodafone MachineLink 4G Lite router supports IPSec end points and can be configured with Site to Site VPN tunnels with third party VPN routers.

Configuring an IPSec VPN

From the menu at the top of the screen, click Networking and under the VPN section, click IPSec. A list of configured IPSec VPN connections is displayed.



Figure 99 – IPSec VPN List

Click the +Add button to begin configuring an IPSec VPN connection.

IPSec profile edit

IPSec profile

1

Profile name

Phase 1 parameters

Remote IPSec address

Key mode

Pre-shared keys

Pre-shared key

Remote ID

(xy.sample.com or blank)

Local ID

(xy.sample.com or blank)

IKE mode

Main

PFS

On

IKE encryption

Any

IKE hash

Any

DH group

Any

IKE re-key time

3600

(0-78400, 0=Unlimited) secs

DPD action

Hold

DPD keep alive time

10

secs

DPD timeout

60

secs

SA life time

28800

(0-78400, 0=Unlimited) secs

Phase 2 parameters

Remote LAN address

0

.

0

.

0

.

0

Remote LAN subnet mask

255

.

255

.

255

.

0

Local LAN address

0

.

0

.

0

.

0

Local LAN subnet mask

255

.

255

.

255

.

0

Encapsulation type

ESP

IPSec encryption

Any

IPSec hash

Any

Save

Exit

Figure 100 – IPSec profile edit

The following table describes each of the fields of the IPsec VPN Connection Settings page.

Item	Definition
IPSec profile	Enables or disables the VPN profile.
Profile name	A name used to identify the VPN connection profile.
Phase 1 parameters	
Remote IPSec address	The IP address or domain name of the IPSec server.
Key mode	Select the type of key mode in use for the VPN connection. You can select from: Pre Shared Key RSA keys Certificates SCEP client
Pre-shared key	The pre-shared key is the key that peers used to authenticate each other for Internet Key Exchange. The pre-shared key must meet the requirements for a strong password. See the Configuring a strong password section.
Update Time	Displays the last time the key was updated.
Local RSA Key Upload	Select the RSA key file for the local router here by clicking the Browse button.
Remote RSA Key Upload	Select the RSA key file for the remote router here by clicking the Browse button.
Private key Passphrase	The Private key passphrase of the router is the passphrase used when generating the router's private key using OpenSSL CA.
Key / Certificate	Select the type of key or certificate to use for authentication. You can select Local private key, Local public certificate, Remote public certificate, CA certificate, CRL certificate.
IPSec Certificate Upload	Select the IPSec certificate to upload by clicking the Browse button.
Remote ID	Specifies the domain name of the remote network.
Local ID	Specifies the domain name of the local network.
IKE mode	Select the IKE mode to use with the VPN connection. You can choose Main, Aggressive or Any.
PFS	Choose whether Perfect Forward Secrecy is ON or OFF for the VPN connection.
IKE encryption	Select the cipher type to use for the Internet Key Exchange.
IKE hash	Select the IKE Hash type to use for the VPN connection. The hash is used for authentication of packets for the key exchange.
DH group	Select the desired Diffie-Hellman group to use. Higher groups are more secure but also require longer to generate a key.
IKE re-key time	Enter the time in seconds between changes of the encryption key. To disable changing the key, set this to 0.
DPD action	Select the desired Dead Peer Detection action. This is the action to take when a dead Internet Key Exchange Peer is detected.

Item	Definition
DPD keep alive time	Enter the time in seconds for the interval between Dead Peer Detection keep alive messages.
DPD timeout	Enter the time in seconds of no response from a peer before Dead Peer Detection times out.
SA life time	Enter the time in seconds for the security association lifetime.
Phase 2 parameters	
Remote LAN address	Enter the IP address of the remote network for use on the VPN connection.
Remote LAN subnet mask	Enter the subnet mask in use on the remote network.
Local LAN address	Enter the IP address of the local network for use on the VPN connection.
Local LAN subnet mask	Enter the subnet mask in use on the local network.
Encapsulation type	Select the encapsulation protocol to use with the VPN connection. You can choose ESP, AH or Any.
IPSec encryption	Select the IPSec encryption type to use with the VPN connection.
IPSec hash	Select the IPSec hash type to use for the VPN connection. The hash is used for authentication of packets for the VPN connection.

Table 36 – IPSec Configuration Items

Configuring IPSec using an SCEP certificate


When adding or editing an IPSec profile, use the Key mode drop down list to select SCEP client and then enter the Distinguished Name details of the remote peer's certificate in the Remote ID field. They should be entered in the following format:

C=<Two-digit country code>, ST=<State>, L=<Locality>, O=<Organisation>, OU=<Organisational Unit>, CN=<Common Name>.

For example:

C=AU, ST=NSW2, L=LaneCove2, O=Lantronix2, OU=SW2, CN=nwl222222999

See the below screenshot for an example configuration.

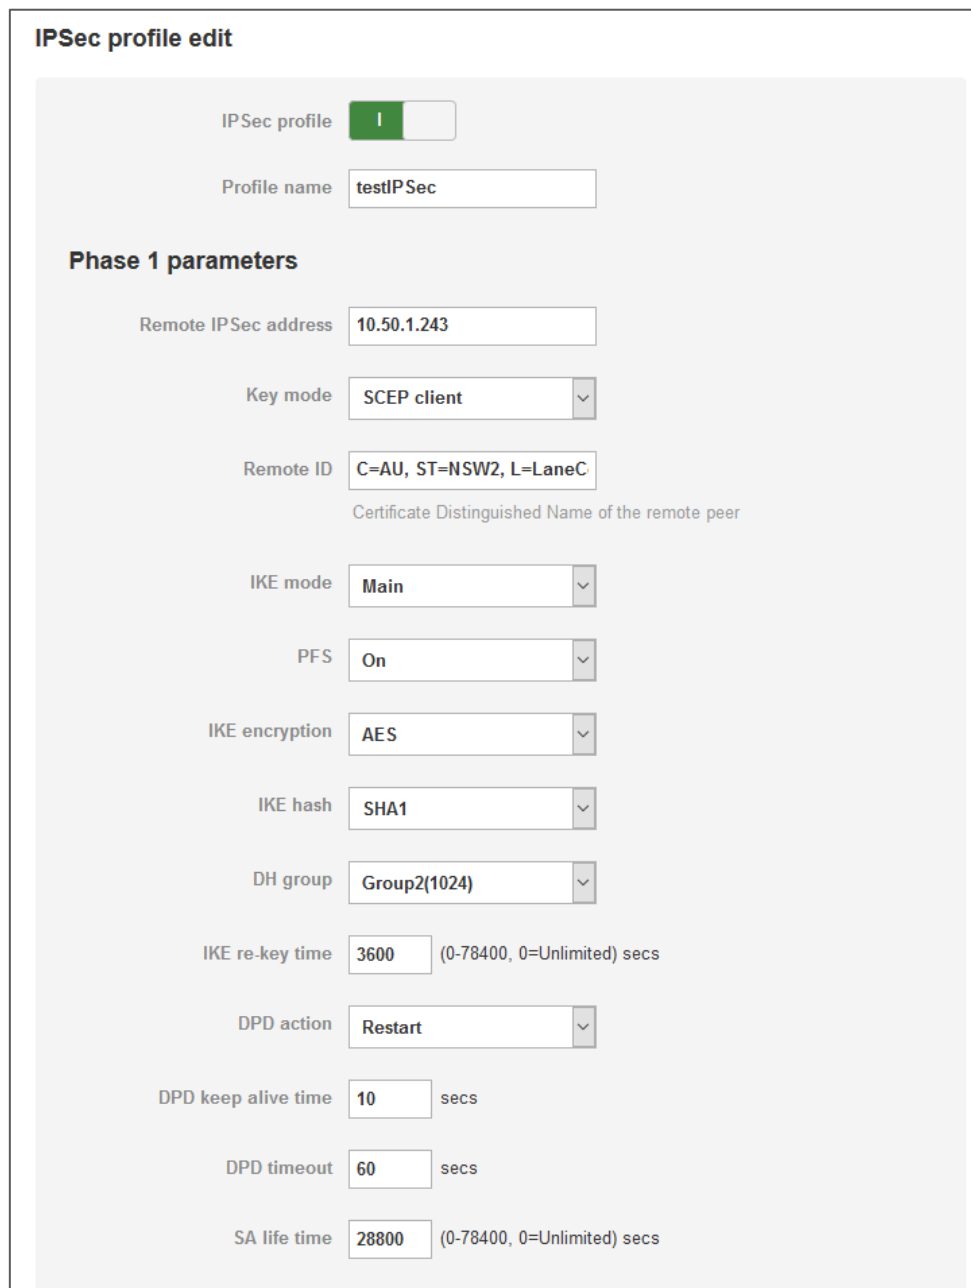

IPSec profile edit

IPSec profile **I**

Profile name **testIPSec**

Phase 1 parameters

Remote IPSec address **10.50.1.243**

Key mode **SCEP client**

Remote ID **C=AU, ST=NSW2, L=LaneC**
Certificate Distinguished Name of the remote peer

IKE mode **Main**

PFS **On**

IKE encryption **AES**

IKE hash **SHA1**

DH group **Group2(1024)**

IKE re-key time **3600** (0-78400, 0=Unlimited) secs

DPD action **Restart**

DPD keep alive time **10** secs

DPD timeout **60** secs

SA life time **28800** (0-78400, 0=Unlimited) secs

Figure 101 – Configuring IPSec using an SCEP certificate

OpenVPN

OpenVPN is an open source virtual private network (VPN) program for creating point-to-point or server-to-multi-client encrypted tunnels between host computers. It can traverse network address translation (NAT) and firewalls and allows authentication by certificate, pre-shared key or username and password. OpenVPN works well through proxy servers and can run over TCP and UDP transports. Support for OpenVPN is available on several operating systems, including Windows, Linux, OS X, Solaris, OpenBSD, FreeBSD, NetBSD and QNX.

Configuring an Open VPN connection

From the menu at the top of the screen, click Networking and from the VPN section on the left, click OpenVPN. A list of configured OpenVPN VPN connections is displayed.


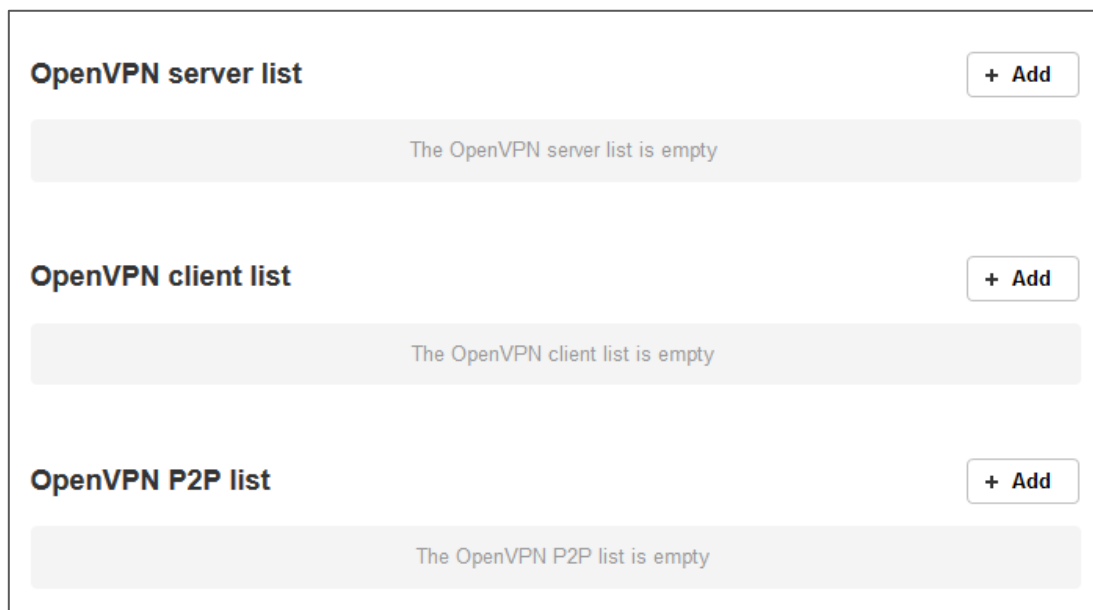


Figure 102 – OpenVPN VPN List

Configuring an OpenVPN Server

When you select the +Add button to add an OpenVPN server, the router checks whether there are existing server certificates. If no server certificate is found, you are informed that you must generate a certificate before configuring the OpenVPN server.

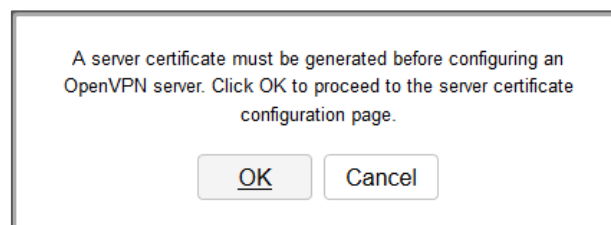

Click on the OK button to be taken to the Server certificate page. For more information on generating server certificates, refer to the Server certificate section of this guide. When you have created the certificate, return to the OpenVPN server configuration page and continue with the steps below.

OpenVPN server edit

OpenVPN profile ☒

Profile name

Type **TUN**

Server port **1194** **UDP**

Encryption cipher **AES-128**

MTU **1500**

VPN network address . . .

VPN network subnet mask 255 . 255 . .

Server certificates

Not before Jan 1 01:19:30 2000 GMT

Not after Dec 29 01:19:30 2009 GMT

Country IN

State Telangana

City Hyderabad

Organisation Lantronix

Email support@lantronix.com

Change

Figure 103 – OpenVPN server profile settings


To configure an OpenVPN Server:

- 1 Click the OpenVPN profile toggle key to switch it to the **ON** position.
- 2 Type a name for the **OpenVPN server profile** you are creating.
- 3 In the **Type** drop down list, select the OpenVPN connection type (**TUN/TAP**). Default is **TUN**.
- 4 Use the **Server port** field to select a port number and then use the drop-down list to select a packet type to use for your OpenVPN Server. The default OpenVPN port is 1194 and default packet type is UDP.
- 5 In the **Encryption cipher** field select the required cipher. The default cipher is: **AES-128**
- 6 MTU size for the tunnel interface, the default value is **1500**
- 7 In the VPN network address and VPN network subnet mask fields, enter the IP address and network subnet mask to assign to your VPN. This is ideally an internal IP address which differs from your existing address scheme.
- 8 The Server certificates section displays the details of the certificate. If you wish to change the certificate, click the Change button.

- 9 HMAC or Hash-based Message Authentication Code is a means of calculating a message authentication code through the use of a cryptographic hash function and a cryptographic key. If you wish to use the HMAC signature as an additional key and level of security, under the SSL/TLS handshake section, click the Use HMAC Signature toggle key so that it is in the ON position, then click the Generate button so that the router can randomly generate the key. The Server key timestamp field is updated with the time that the key was generated. Click the Download button to download the key file so that it can be uploaded on the client.
- 10 Select an Authentication type. Authentication may be done using a Certificate or Username / Password.

Certificate Authentication

In the **Certificate Management** section, enter the required details to create a client certificate. All fields are required. When you have finished entering the details, click the **Generate** button.

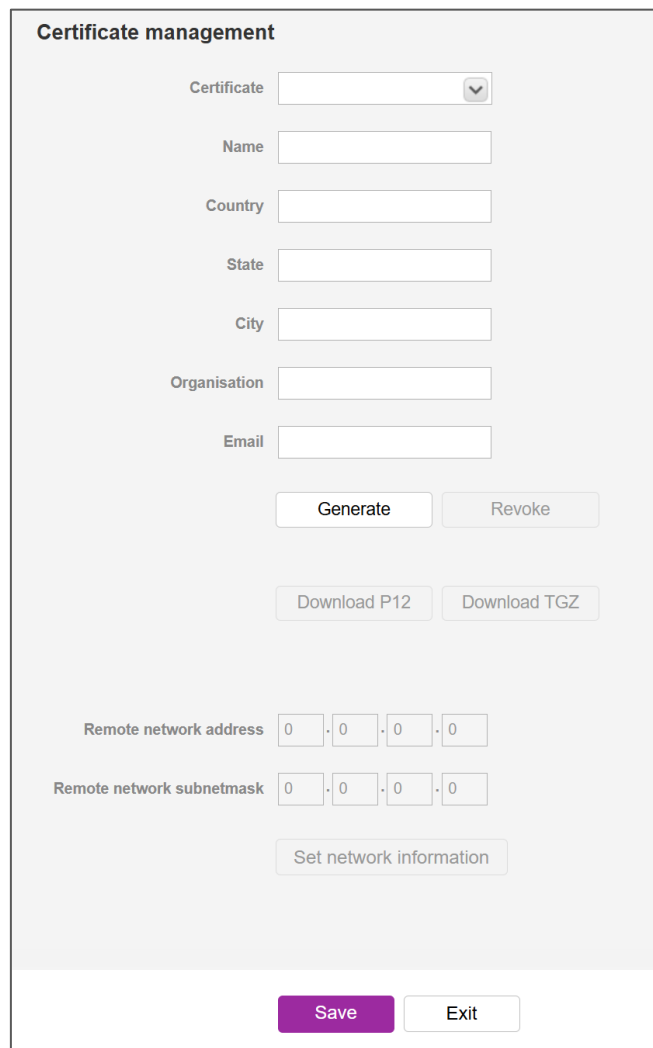

The form is titled "Certificate management" and contains the following fields and buttons:

- Certificate:** A dropdown menu.
- Name:** A text input field.
- Country:** A text input field.
- State:** A text input field.
- City:** A text input field.
- Organisation:** A text input field.
- Email:** A text input field.
- Buttons:** "Generate", "Revoke", "Download P12", and "Download TGZ".
- Remote network address:** A field with four input boxes for IP address (0, 0, 0, 0).
- Remote network subnetmask:** A field with four input boxes for subnetmask (0, 0, 0, 0).
- Buttons:** "Set network information", "Save", and "Exit".

Figure 104 – OpenVPN server configuration – Certificate management

When it is done, you can click the Download P12 button or the Download TGZ button to save the certificate file depending on which format you would like. If for some reason the integrity of your network has been compromised, you can return to this screen and use the Certificate drop down list to select the certificate and then press the Revoke button to disable it.


Optional: To inform the OpenVPN server of the network address scheme of the currently selected certificate, enter the network address and network subnet mask in the respective fields and click the Set network information button. If you do not enter the remote subnet here, any packet requests from the server to the client will not be received by the client network because it is not aware of the remote client's subnet.

Username / Password Authentication

In the Username/Password section, enter the username and password you would like to use for authentication on the OpenVPN Server. Click the Download CA certificate or Download CA TGZ depending on file format button to save the ca.crt file. This file will need to be provided to the client.



Note – If you wish to have more than one client connect to this OpenVPN server, you must use Certificate authentication mode as Username/Password only allows for a single client connection.

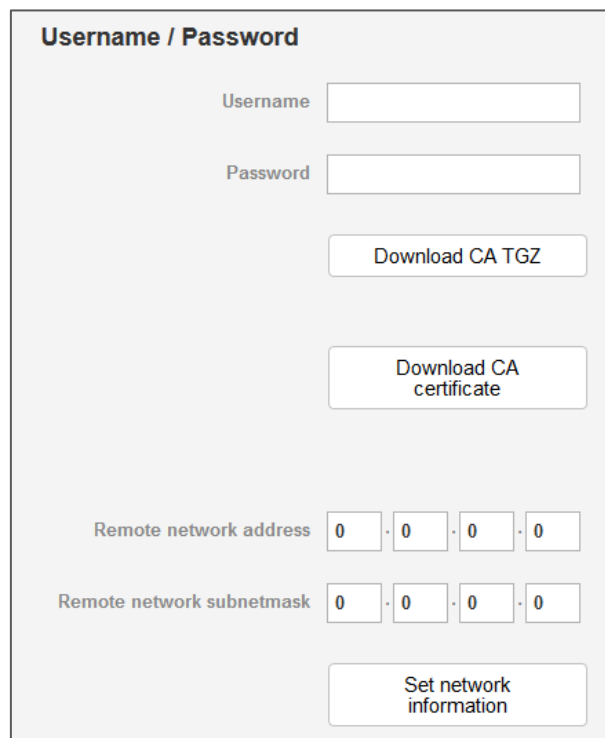

Username / Password

Username

Password

Remote network address

Remote network subnetmask

Figure 105 – OpenVPN Server – Username / Password section

Optional: To inform the OpenVPN server of the network address scheme of the currently selected certificate, enter the network address and network subnet mask in the respective fields and click the Set Network Information button. If you do not enter the remote subnet here, any packet requests from the server to the client will not be received by the client network because it is not aware of the remote client's subnet.

When you have finished entering all the required information, click Save to finish configuring the OpenVPN server.

Configuring an OpenVPN Client

- 1 Click the OpenVPN profile toggle key to switch it to the ON position.
- 2 In the Profile name field, type a name for the OpenVPN client profile you are creating.
- 3 In the Server IP address field, type the WAN IP address /host domain name of the OpenVPN server.

- 4 Select OpenVPN connection type (TUN/TAP). Default is TUN.
- 5 Use the Server port field to select a port number and then use the drop-down list to select a packet type to use for the OpenVPN server. The default OpenVPN port is 1194 and default packet type is UDP.
- 6 If the Default gateway option is applied on the OpenVPN client page, the OpenVPN server will enable connections to be made to other client networks connected to it. If it is not selected, the OpenVPN connection allows for secure communication links between this router and the remote OpenVPN server only.
- 7 Use the Authentication type options to select the Authentication type that you would like to use for the OpenVPN client.

Certificate Authentication

In the Certificate upload section at the bottom of the screen, click the Choose a file button and locate the certificate file you downloaded when you configured the OpenVPN server. When it has been selected, click the Upload button to send it to the router.

 


Figure 106 – OpenVPN client – Certificate upload

Username / Password Authentication

- 1 Enter the username and password to authenticate with the OpenVPN server.

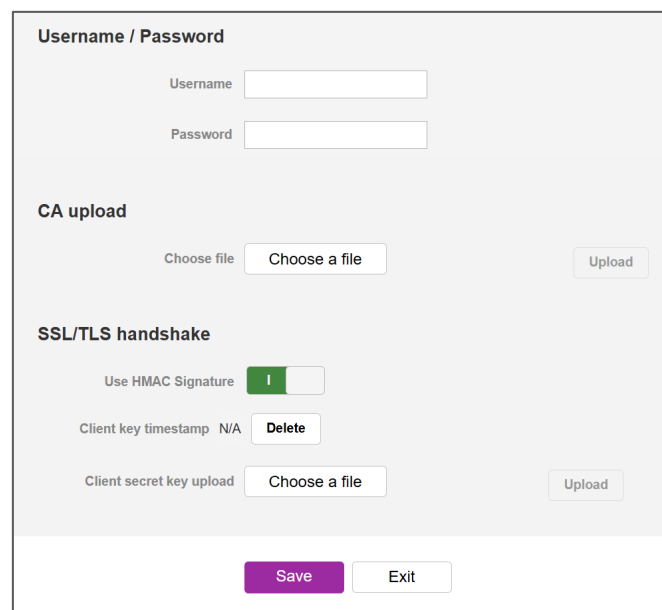


Figure 107 – OpenVPN Client – Username/Password section

- 2 Use the Choose a file button to locate the CA certificate file you saved from the OpenVPN Server and then press the Upload button to send it to the router.
- 3 Click the Save button to complete the OpenVPN Client configuration.

- 4 If you have an additional SSL/TLS key created on the server, click on the Use HMAC Signature toggle key so that it is in the ON position. Select the Choose a file button then locate the key file on your computer. Click the Upload button to upload it to the router.
- 5 Click the Save button to save your settings.

Certificate and Username / Password Authentication

This is a combination of both the Certificate and Username / Password authentication methods providing additional levels of security since the client must know the username / password combination and be in possession of the certificate.

Configuring an OpenVPN P2P Connection

To configure an OpenVPN peer-to-peer connection:

- 1 Set the OpenVPN profile toggle key to switch it to the ON position.
- 2 In the Profile name field, type a name for the OpenVPN P2P profile you are creating.
- 3 On the router designated as the server, leave the Server IP address field empty. On the router designated as the client, enter the WAN IP address/host domain name of the server.

OpenVPN peer edit

OpenVPN profile ☒

Profile name

Server IP address
(leave empty if this device is a peer-to-peer server)

Server port

Encryption cipher

MTU

Local IP address

Remote IP address

Remote network

Address

Subnet mask

Server secret key

Update time N/A

Generate Download

Client secret key

Update time N/A

Delete

Client secret key upload

Save Exit

Figure 108 – OpenVPN P2P mode settings

- 4 Use the Server port field to select a port number and then use the drop-down list to select a packet type to use for the OpenVPN server. The default OpenVPN port is 1194 and default packet type is UDP.
- 5 In the Local IP Address and Remote IP Address fields, enter the respective local and remote IP addresses to use for the OpenVPN tunnel. The client should have the reverse settings of the server.
- 6 Under the Remote network section, enter the network Address and network Subnet mask. The Network Address and Network Mask fields inform the server of the LAN address scheme of the client.
- 7 Press the Generate button to create a secret key to be shared with the client. When the timestamp appears, you can click the Download button to save the file to exchange with the other router.
- 8 When you have saved the secret key file on each router, use the Choose a file button to locate the secret key file for the server and then press the Upload button to send it to the client. Perform the same for the other router, uploading the client's secret key file to server.
- 9 When they are uploaded click the Save button to complete the peer-to-peer OpenVPN configuration.

PPTP client

The Point-to-Point Tunneling Protocol (PPTP) is a method for implementing virtual private networks using a TCP and GRE tunnel to encapsulate PPP packets. PPTP operates on Layer 2 of the OSI model and is included on Windows computers.

Configuring the PPTP client

To configure the PPTP client:

- 1 From the menu bar at the top of the screen, click Networking and then from the VPN section on the left side of the screen, click PPTP client. The PPTP client list is displayed.

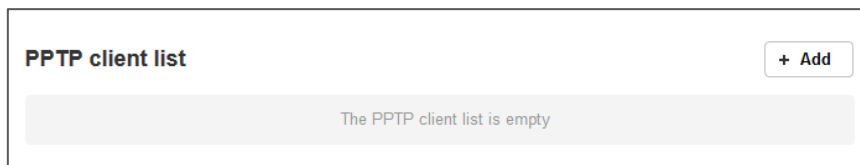


Figure 109 – PPTP client list

- 2 Click the +Add button to begin configuring a new PPTP client profile. The PPTP client edit screen is displayed.

VPN PPTP client edit

Enable PPTP client

☒

Name

Username

Password

PPTP server

Authentication type

Any

▼

Metric

10

(0-65535)

MTU

1300

(68-65535)

Use peer DNS

☐

0

NAT masquerading

☐

0

Set PPTP server as default gateway

☐

0

MPPE

☒

Extra PPP option

Verbose logging

☐

0

Reconnect delay

30

(30-65535) seconds

Reconnect retries

0

(0-65535, 0=Unlimited)

Save

Cancel

Figure 110 – VPN PPTP client edit

- 3 Click the Enable PPTP client toggle key to switch it to the ON position.
- 4 In the Profile name field, enter a profile name for the tunnel. This may be anything you like and is used to identify the tunnel on the router.
- 5 Use the Username and Password fields to enter the username and password for the PPTP account.
- 6 In the PPTP server field, enter the IP address /host domain name of the PPTP server.
- 7 From the Authentication type drop down list, select the Authentication type used on the server. If you do not know the authentication method used, select any and the router will attempt to determine the correct authentication type for you. There are 5 authentication types you can choose from:
 - CHAP – uses a three way handshake to authenticate the identity of a client.

- MS-CHAP v1 – This is the Microsoft implementation of the Challenge Handshake Authentication Protocol for which support was dropped in Windows® Vista.
 - MS-CHAP v2 - This is the Microsoft implementation of the Challenge Handshake Authentication Protocol which was introduced in Windows® NT 4.0 and is still supported today.
 - PAP – The Password Authentication Protocol uses a password as a means of authentication and as such, is commonly supported. PAP is not recommended because it transmits passwords unencrypted and is not secure.
 - EAP – Extensible Authentication Protocol. An Authentication protocol commonly used in wireless networks.
- 8 The Metric value helps the router to prioritise routes and must be a number between 0 and 65535. The default value is 30 and should not be modified unless you are aware of the effect your changes will have.
- 9 Enter the size of the MTU. This is the Maximum Transmission Unit and on a Vodafone data connection, the maximum value is 1340 bytes. The PPTP tunnel has a 40 byte overhead meaning the maximum value that this should be set to is 1300.
- 10 The Use peer DNS option allows you to select whether the remote clients will use the Domain Name Server of the PPTP server. Click the toggle key to set this to ON or OFF as required.
- 11 NAT masquerading allows the router to modify the packets sent and received to inform remote computers on the internet that packets originating from a machine behind the router actually originated from the WAN IP address of the router's internal NAT IP address. Click the toggle key to switch this to the ON position if you want to use this feature.
- 12 Set PPTP server as default gateway sets all outbound data packets to go out through the PPTP tunnel. Click the toggle key to switch this to the ON position if you want to use this feature.
- 13 The MPPE toggle key turns the Microsoft Point-to-Point Encryption feature on or off. This is used to secure transmissions. Set this as desired.
- 14 In the Extra PPP option field, specify any extra commands or parameters that you wish to use when the PPP connection is established.
- 15 The Verbose logging option sets the router to output detailed logs regarding the PPTP connection in the System Log section of the router interface.
- 16 The Reconnect delay is the time in seconds that the router will wait before attempting to connect to the PPTP server in the event that the connection is broken. The minimum time to wait is 30 seconds so as to not flood the PPTP server with connection requests, while the maximum time to wait is 65535 seconds.
- 17 The Reconnect retries is the number of connection attempts that the router will make in the event that the PPTP connection goes down. If set to 0, the router will retry the connection indefinitely, otherwise the maximum number of times to retry cannot be greater than 65535.
- 18 Click the Save button to save the changes. The VPN will attempt to connect after your click Save. Click the Status button at the top left of the interface to return to the status window and monitor the VPN's connection state.

GRE tunnelling

The Generic Route Encapsulation (GRE) protocol creates a point-to-point connection similar to a VPN between clients and servers or between clients only. GRE is used to encapsulate the data or payload.

Configuring GRE tunnelling

To configure GRE tunnelling:

- 1 From the menu bar at the top of the screen, click Networking and then from the VPN section on the left side of the screen, click GRE tunnelling. The GRE client list is displayed.



Figure 111 – GRE client list

- 2 Click the +Add button to begin configuring a new GRE tunnelling client profile. The GRE Client Edit screen is displayed.

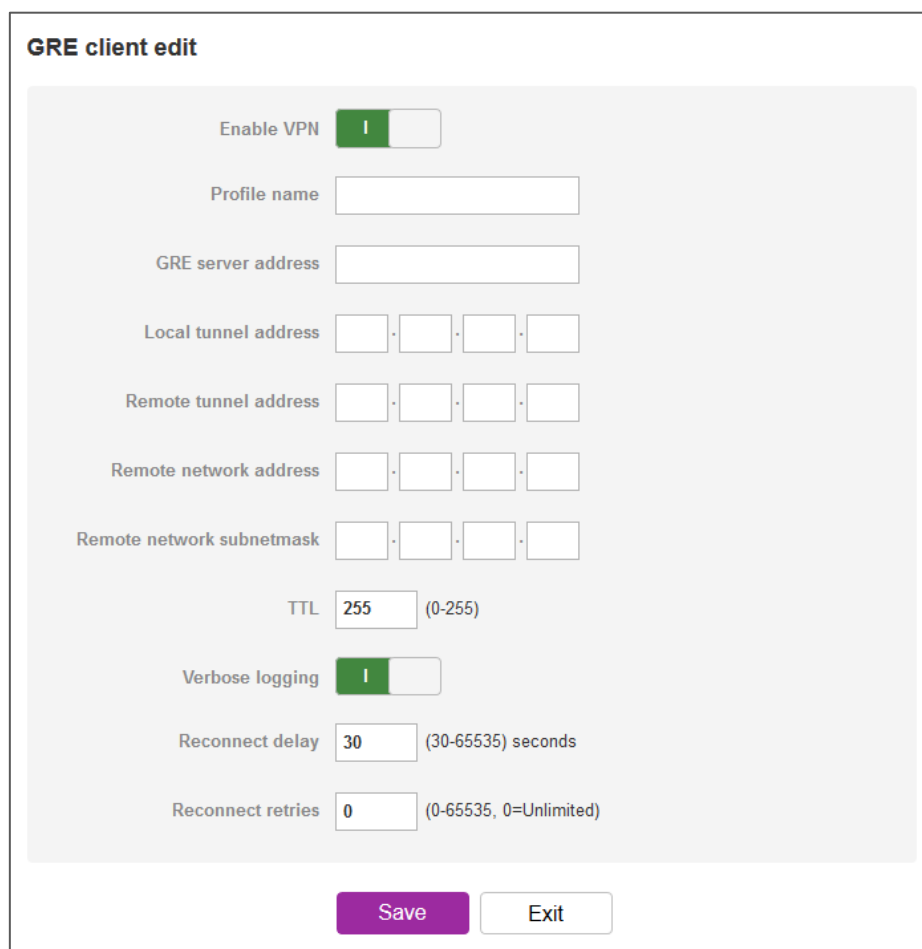


Figure 112 – GRE client edit

- 3 Click the Enable VPN toggle key to switch it to the ON position.

- 4 In the Profile name, enter a profile name for the tunnel. This may be anything you like and is used to identify the tunnel on the router.
- 5 In the GRE server address field, enter the IP address or domain name of the GRE server.
- 6 In the Local tunnel address field, enter the IP address you want to assign the tunnel locally.
- 7 In the Remote tunnel address field, enter the IP address you want to assign to the remote tunnel.
- 8 In the Remote network address field, enter the IP address scheme of the remote network.
- 9 In the Remote network subnetmask field, enter the subnet mask of the remote network.
- 10 The TTL (Time To Live) field is an 8-bit field used to remove an undeliverable data packet from a network to avoid unnecessary network traffic across the internet. The default value of 255 is the upper limit on the time that an IP datagram can exist. The value is reduced by at least one for each hop the data packet takes to the next router on the route to the datagram's destination. If the TTL field reaches zero before the datagram arrives at its destination the data packet is discarded and an error message is sent back to the sender.
- 11 The Verbose logging option sets the router to output detailed logs regarding the GRE tunnel in the System Log section of the router interface.
- 12 The Reconnect delay is the time in seconds that the router will wait before attempting to connect to the GRE server if the connection is broken. The minimum time to wait is 30 seconds so as to not flood the GRE server with connection requests, while the maximum time to wait is 65335 seconds.
- 13 The Reconnect retries is the number of connection attempts that the router will make if the GRE connection goes down. If set to 0, the router will retry the connection indefinitely, otherwise the maximum number of times to retry cannot be greater than 65335.
- 14 Click the Save button to save the changes. The VPN will attempt to connect after your click Save. Click the Status button at the top left of the interface to return to the status window and monitor the VPN's connection state.

SCEP client

The Simple Certificate Enrolment Protocol (SCEP) is a popular protocol used to make the issuing of digital certificates as scalable as possible. It allows for a network user to request a digital certificate electronically and simply, removing the necessity for network administrators to provide input thereby freeing them up to perform more important tasks. The MachineLink 4G Lite router includes an SCEP client allowing you to connect to an SCEP server.

To configure the SCEP client:

- 1 Click on the SCEP client toggle key so that it is in the ON position. Additional configuration options are displayed.

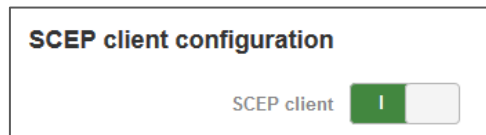


Figure 113 – SCEP client toggle key

- 2 In the Server URL field, enter the address of the SCEP server. Your network administrator will be able to provide this information.



Figure 114 – Server URL

- 3 If no CA certificates are displayed, select the Query server button.
- 4 When the certificates have loaded, use the CA signature certificate and CA encryption certificate drop down lists to select the appropriate certificates. You must select a certificate for both the signature and encryption certificate fields.



Figure 115 – CA signature and CA encryption certificates

- 5 In the Challenge password field, enter the password required to issue the certificate. This password may change at regular intervals. Your network administrator will be able to provide the password.



Figure 116 – Challenge password

- 6 In the Renew before expiry (days) field, enter the number of days before the certificate expires that the certificate should be renewed. If you do not wish to renew the certificate before expiry, set this to 0.

Renew before expiry (days) (0=disabled, 1-365)

When it is enabled, the certificate will be renewed before expiry by using a PKCSreq message signed with the existing certificate. If a challenge password is provided, it will be included in the renewal request.

Figure 117 – Renew before expiry (days)

- 7 In the Retry timer field, enter the number of seconds that the SCEP client should wait before it attempts to query the server and download the issued certificate.

Retry timer (60-65535) seconds

Figure 118 – Retry timer

- 8 The Country (C), State (S), Locality (L), Organisation (O), Organisational Unit (OU) and Common Name (CN) fields comprise the Distinguished Name of the certificate being issued. Complete all fields to create the Distinguished Name.

Country (C)

State (ST)

Locality (L)

Organisation (O)

Organisational Unit (OU)


Common Name

Figure 119 – Distinguished Name fields

Field name	Description
Country	The country code for the certificate. See the Server certificate section for a list of country codes.
State	The state for the certificate.
Locality	The locality for the certificate.
Organisation	The name of the organisation using the certificate.
Organisational Unit	Used to identify the organisational unit.
Common Name	Used to identify the connection to the server.

Table 37 – Distinguished Name field descriptions

 
- 9 Use the Digest algorithm field to select the cryptographic hash type to use for the certificate. This will depend on the SCEP server. If unsure, contact your IT administrator.



Digest algorithm MD5

Figure 120 – Digest algorithm

 - 10 Use the Permitted string types drop down list to select the strings allowed in the Distinguished Name fields.



Permitted string types PrintableString, T61String, BMPString

Figure 121 – Permitted string types

- 11 When all the details have been entered, click the Save button. Wait for the period defined in the Retry timer field and then reload the page (e.g. by pressing F5 or clicking on the SCEP client menu item). If the SCEP server issues a certificate, it appears in the SCEP client certificate section. See below for an example screenshot.

SCEP client certificate	
Issuer	DC=com, DC=windows2003test, CN=atclient
Subject	C=au, ST=nsw2, L=lanecove2, O=netcomm2, OU=sw2, CN=nwl222222999
Common Name	nwl222222999
Valid from	Nov 23 00:12:15 2016 GMT
Valid until	Nov 23 00:22:15 2017 GMT
SCEP URI	http://192.168.1.108:8888/certsrv/mscep/mscep.dll

Figure 122 – SCEP client certificate

Services

Dynamic DNS

The DDNS page is used to configure the Dynamic DNS feature of the router. A number of Dynamic DNS hosts are available from which to select. To access the Dynamic DNS page, click on the Services menu at the top of the screen then click on the Dynamic DNS menu item on the left.

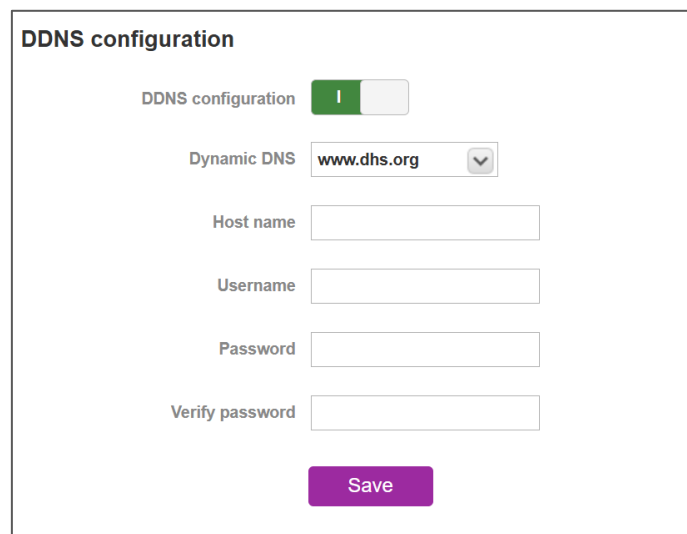


Figure 123 – Dynamic DNS settings

Dynamic DNS provides a method for the router to update an external name server with the current WAN IP address.

To configure dynamic DNS:

- 1 Click the DDNS configuration toggle key to switch it to the ON position.
- 2 From the Dynamic DNS drop down list, select the Dynamic DNS service that you wish to use. The available DDNS services available are:
 - www.dhs.org
 - www.dyndns.org
 - www.easydns.com
 - www.no-ip.com
 - www.zoneedit.com
- 3 Enter your hostname in the Host name field.
- 4 In the Username and Password fields, enter the logon credentials for your DDNS account. Enter the password for the account again in the Verify password field.
- 5 Click the Save button to save the DDNS configuration settings.

Network time (NTP)

The NTP (Network Time Protocol) settings page allows you to configure the Vodafone MachineLink 4G Lite router to synchronize its internal clock with a global Internet Time server and specify the time zone for the location of the router. This provides an accurate timekeeping function for features such as System Log entries and Firewall settings where the current system time is displayed and recorded. Any NTP server available publicly on the internet may be used.

To access the Network time (NTP) page, click on the Services menu at the top of the screen then click on the Network time (NTP) menu item on the left.

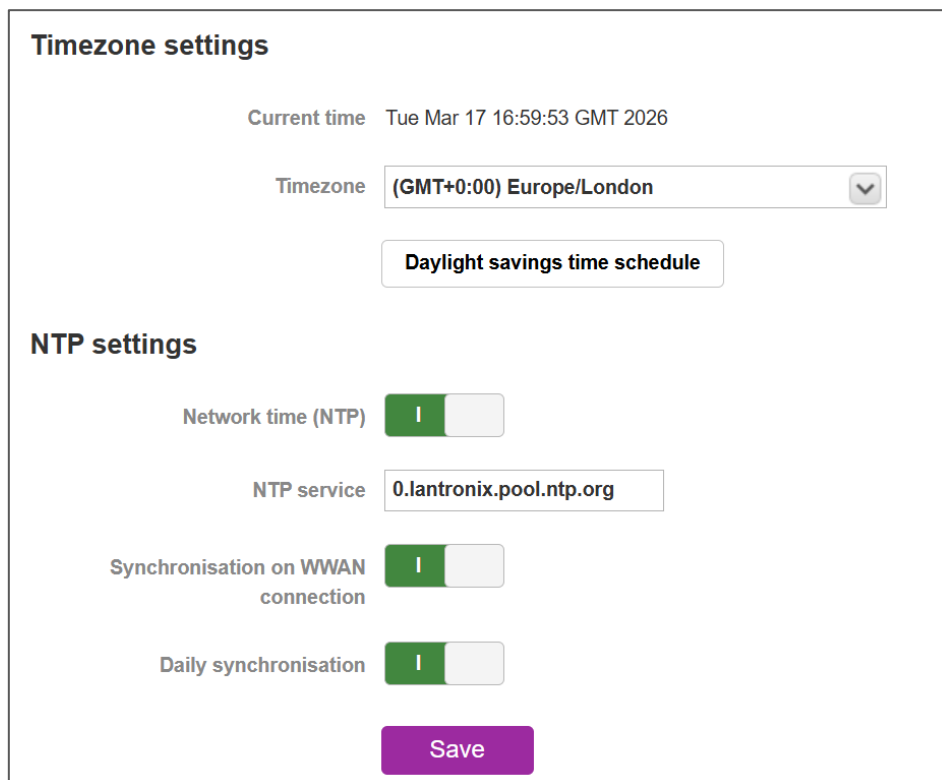


Figure 124 – NTP settings

Configuring Timezone settings

To configure time zone settings:

- 1 The Current time field shows the time and date configured on the router. If this is not accurate, use the Time zone drop down list to select the correct time zone for the router. If the selected zone observes daylight savings time, a Daylight savings time schedule link appears below the drop-down list. Click the link to see the start and end times for daylight savings.
- 2 When you have selected the correct time zone, click the Save button to save the settings.

Configuring NTP settings

To configure NTP settings:

- 1 Click the Network time (NTP) toggle key to switch it to the ON position.

- 2 In the NTP service field, enter the address of the NTP server you wish to use.
- 3 The Synchronization on WWAN connection toggle key enables or disables the router from performing a synchronization of the time each time a mobile broadband connection is established.
- 4 The Daily synchronisation toggle key enables or disables the router from performing a synchronization of the time each day.
- 5 When you have finished configuring NTP settings, click the Save button to save the settings.

Data stream manager

The data stream manager provides you with the ability to create mappings between two endpoints on the router. These endpoints may be physical or virtual, for example, a serial port connected to the router's USB port could be configured as an endpoint or you could configure a TCP Server as an endpoint. You can then configure a virtual data tunnel or "stream" between the endpoints.

The data stream manager provides a wide range of possibilities including the forwarding and translation of data between any of the endpoints. For example, you could send the GPS data from the built-in module to a TCP server running on the router. In each case, the logical flow of the stream is from Endpoint A to Endpoint B.


Customers interested in developing their own applications to create custom endpoints and streams can contact Lantronix Technical Support about our Software Development Kit.

Endpoints

The first thing to be done to create a data stream is to define the endpoints. The following endpoints can be defined:

- Serial port (generic)
- TCP Server
- TCP Client
- UDP Server
- UDP Client
- GPS Data
- User defined executable
- RS232 port
- RS422 port
- RS 485 port
- Modem emulator
- PPP server
- IP modem
- TCP connect-on-demand

To access the Endpoints page, click on the Services menu at the top of the screen, click on the Data stream manager menu then click on the Endpoints menu item on the left.

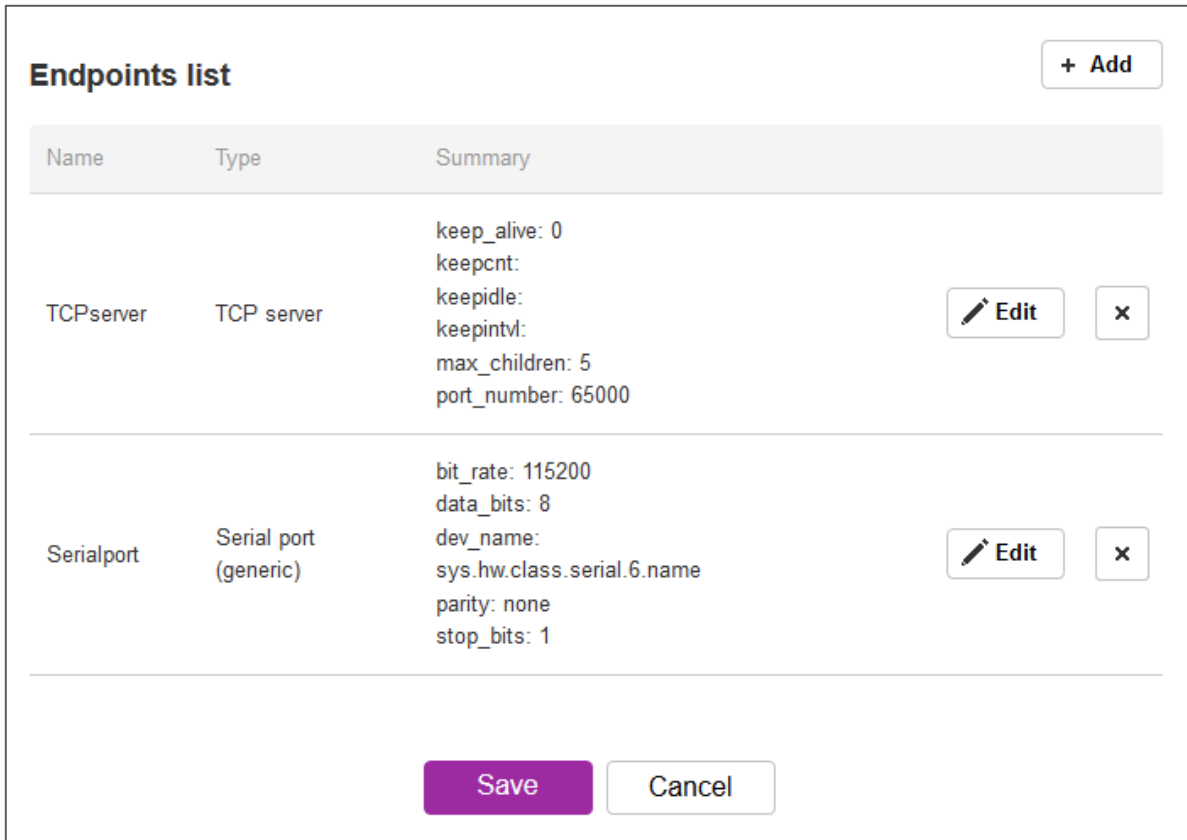

Endpoints list + Add


Name	Type	Summary	
TCPserver	TCP server	keep_alive: 0 keepcnt: keepidle: keepintvl: max_children: 5 port_number: 65000	Edit ×
Serialport	Serial port (generic)	bit_rate: 115200 data_bits: 8 dev_name: sys.hw.class.serial.6.name parity: none stop_bits: 1	Edit ×

Save Cancel

Figure 125 – Endpoints list

To create an endpoint:

- 1 Click the **+Add** button on the right side of the page. A pop-up window appears.

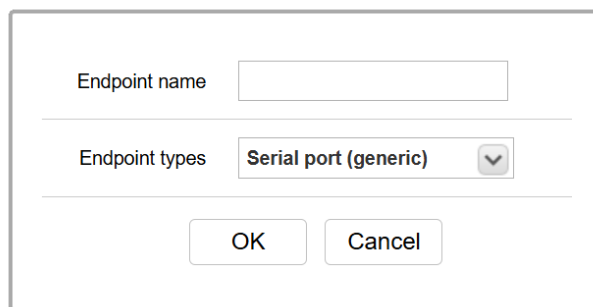

Endpoint name


Endpoint types Serial port (generic) ▼

OK Cancel

Figure 126 – Creating an endpoint

- 2 In the **Endpoint name** field, type a name for this endpoint. The name can contain alphanumeric characters only i.e. A-Z, a-z, 0-9.
- 3 Use the **Endpoint types** drop down list to select the type of endpoint to configure.

Serial port (generic): When a USB to Serial cable is used, this creates a generic serial port as an endpoint defaulting to the commonly used settings as shown below.

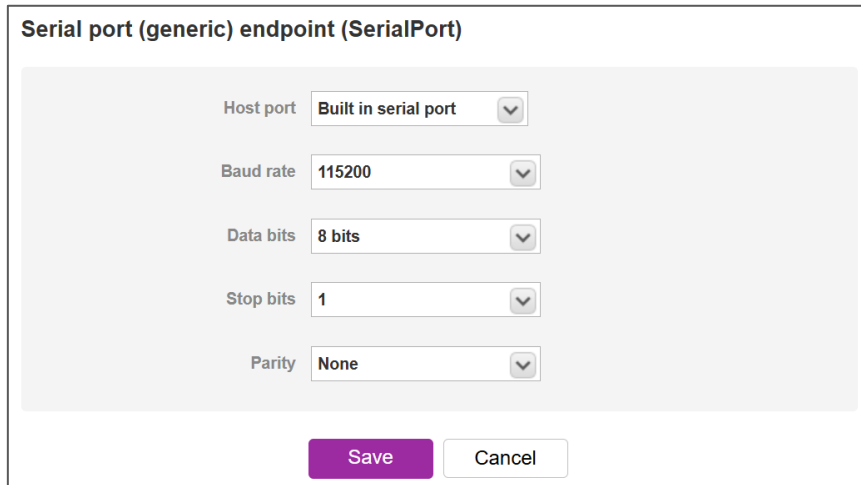


The dialog box is titled "Serial port (generic) endpoint (SerialPort)". It contains a light gray panel with five settings, each with a label and a dropdown menu:

- Host port: Built in serial port
- Baud rate: 115200
- Data bits: 8 bits
- Stop bits: 1
- Parity: None

At the bottom of the dialog are two buttons: "Save" (purple) and "Cancel" (white).

Figure 127 – Serial port (generic) endpoint configuration

TCP server: This creates a TCP server endpoint with the following options available.

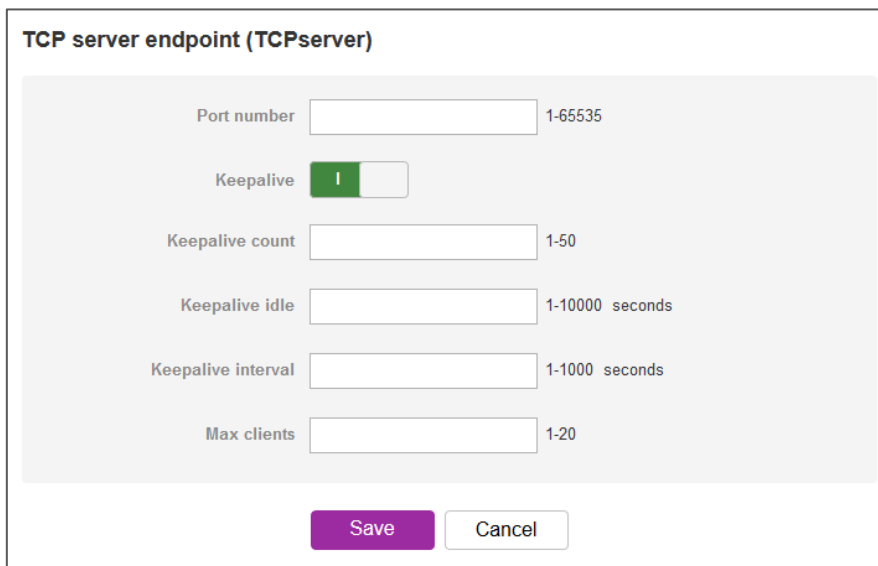


The dialog box is titled "TCP server endpoint (TCPserver)". It contains a light gray panel with six settings:

- Port number: A text input field with the value "1-65535" to its right.
- Keepalive: A toggle switch that is currently turned on (green).
- Keepalive count: A text input field with the value "1-50" to its right.
- Keepalive idle: A text input field with the value "1-10000 seconds" to its right.
- Keepalive interval: A text input field with the value "1-1000 seconds" to its right.
- Max clients: A text input field with the value "1-20" to its right.

At the bottom of the dialog are two buttons: "Save" (purple) and "Cancel" (white).

Figure 128 – TCP server endpoint configuration

TCP client: This creates a TCP client endpoint with the following options available. The retry timeout period specifies the number of seconds to wait between attempts to re-establish a connection in the event that it is lost. The client will attempt re-connection indefinitely every Retry timeout interval.

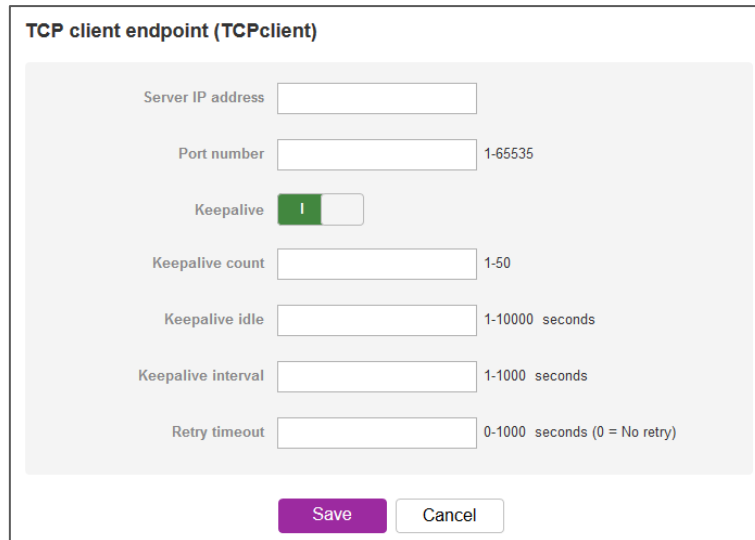

TCP client endpoint (TCPclient)

Server IP address

Port number 1-65535

Keepalive ☒

Keepalive count 1-50


Keepalive idle 1-10000 seconds

Keepalive interval 1-1000 seconds

Retry timeout 0-1000 seconds (0 = No retry)

Figure 129 – TCP client endpoint configuration

UDP server: This creates a UDP server endpoint with the following options available.

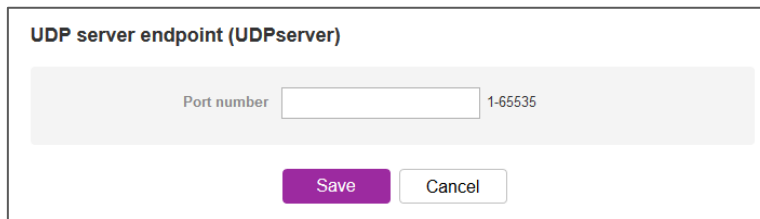


UDP server endpoint (UDPserver)

Port number 1-65535

Figure 130 – UDP server endpoint configuration

UDP client: This creates a UDP client endpoint with the following options available. The retry timeout period specifies the number of seconds to wait between attempts to re-establish a connection in the event that it is lost. The client will attempt re-connection indefinitely every Retry timeout interval.

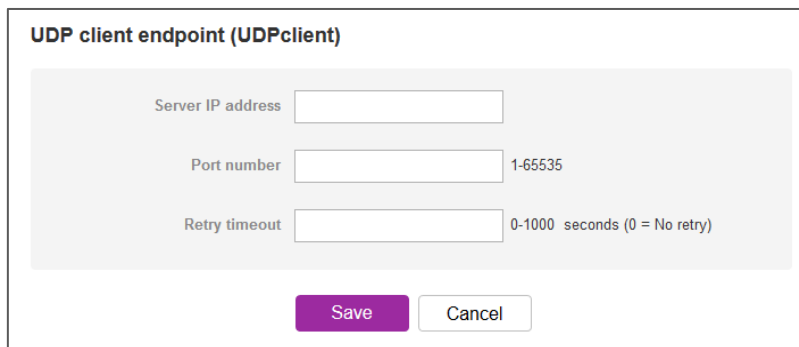

UDP client endpoint (UDPclient)


Server IP address

Port number 1-65535

Retry timeout 0-1000 seconds (0 = No retry)

Figure 131 – UDP client endpoint configuration

GPS data: This creates a GPS data endpoint.

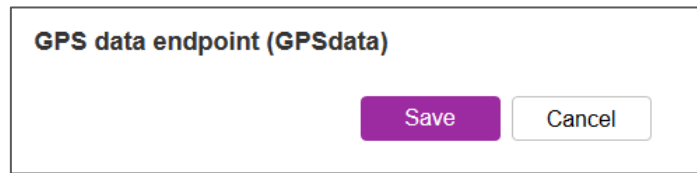


A dialog box titled "GPS data endpoint (GPSdata)". It contains two buttons at the bottom right: a purple "Save" button and a white "Cancel" button with a grey border.

Figure 132 – GPS data endpoint configuration

User defined executable: Allows you to specify an executable and parameters to be used as an endpoint. For example, the following executable reads the phone module temperature every second.

```
while true; do rdb_get wwan.0.radio.temperature; sleep 1; done
```


The temperature can then be sent to another endpoint.

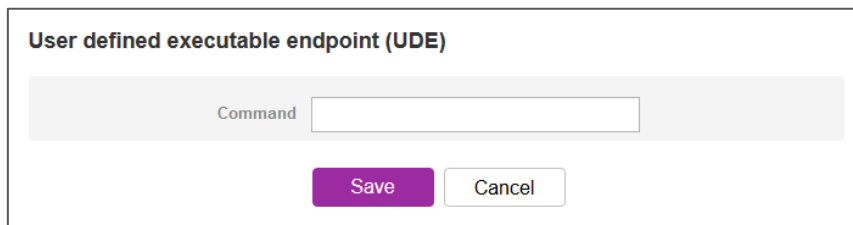

A dialog box titled "User defined executable endpoint (UDE)". It features a text input field labeled "Command" with a light grey background. Below the input field are two buttons: a purple "Save" button and a white "Cancel" button with a grey border.

Figure 133 – User defined executable endpoint configuration

RS232 / RS485 / RS422 port: These endpoint types all use the built-in serial port. When one of these endpoints is used to create a stream, the hardware switches to accommodate the chosen serial communication interface.

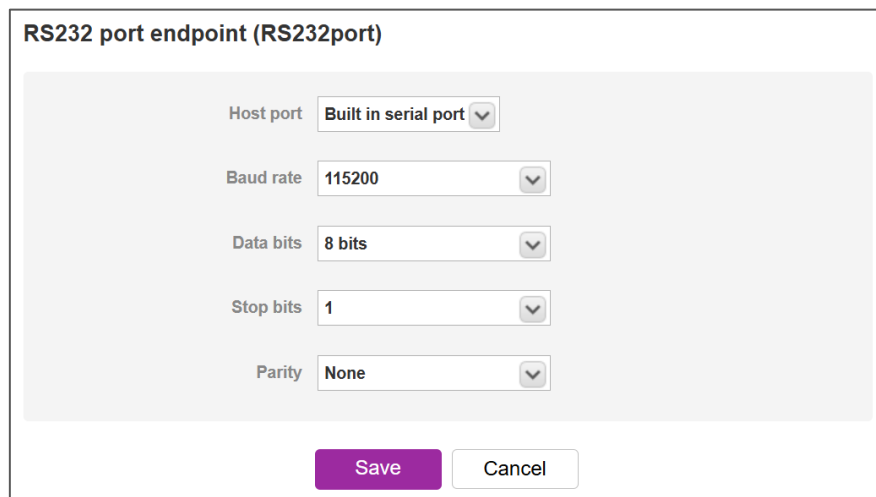

A dialog box titled "RS232 port endpoint (RS232port)". It contains several configuration options, each with a dropdown menu: "Host port" (set to "Built in serial port"), "Baud rate" (set to "115200"), "Data bits" (set to "8 bits"), "Stop bits" (set to "1"), and "Parity" (set to "None"). At the bottom are two buttons: a purple "Save" button and a white "Cancel" button with a grey border.

Figure 134 – RS232 / RS485 / RS422 port configuration options



Note – For detailed information about half duplex RS-485 and full duplex RS-422 refer to [Appendix F – Serial port wiring](#) section.

Modem emulator: Modem emulator allows you to connect legacy equipment such as an RTU or PLC to the serial port of the router in place of a traditional dial-up modem. The MachineLink 4G Lite router emulates the dial-up modem's behaviour and passes the serial data over the IP network.

Modem emulator endpoint (ModemEmulator)

Host port

Built in serial port

Baud rate

115200

Data bits

8 bits

Stop bits

1

Parity

None

Hardware flow control

None

Software flow control

None

DSR action

Session Established

DCD action

Connect

DTR action

Disconnect

RI action

Never

Enable auto answer

☐ 0

Circuit auto answer rings

0

^ Advanced status

Echo enable

☒ 1

Quiet mode

☐ 0

Send OK on carriage return

☒ 1

Suppress line feeds

☐ 0

Send OK on unknown command

☐ 0

Verbose mode

☒ 1

Save

Cancel

Figure 135 – Modem emulator endpoint configuration

Item	Description
Host port	Use the drop-down list to select the serial port to use. If no USB-to-Ethernet adapter is connected, the only available selection is the Built-in serial port.
Baud rate	The serial (V.24) port baud rate. By default the serial line format is 8 data bits, No parity, 1 Stop bit. Refer to the AT (V.250) AT Command Manual if you need to change the serial line format.
Data bits	The default serial line data bits setting used is 8. Options include 5 – 8 bits.
Stop bits	The default stop bit setting is set to 1. However, the stop bit setting can be set to 2 bits if required.
Parity	Parity is the means to detect transmission errors. An extra data bit is transmitted with each data character and is arranged in a fashion such that the number of 1 bits in each character, including the parity bit, is always odd or always even. If a byte is received with the wrong number of 1s, then this shows the data must be corrupt. Options include none, odd or even. The default setting is none for no parity checks.
Hardware flow control	• Off - Serial port flow control off • Hardware - Serial port uses RTS/CTS flow control
Software flow control	Enables or disables software flow control.
DSR action	Sets the Data Set Ready action. This is an output from the modem and this configuration determines the pin's behaviour. • Always: DSR is always on. • Registered: When connected to a remote CSD endpoint, sets pin to "on" when modem is in data mode. • Session established: When connected to PPP endpoint, sets pin on when PDP is connected, when connected to IP modem endpoint, sets pin to on when modem is in online state (e.g. data connection is established). • Never: DSR is always off. • Mimic DTR: mimics the DTR pin.
DCD action	Determines how the router controls the state of the serial port Data Carrier Detect (DCD) line. • Always On: DCD is always on. • Connect: DCD is on when a connection is established in response to an ATD command or DTR dial. • Session established: Pin is on when PPP session is in progress or modem is in an online state (e.g. data connection is established). • Always Off: DCD is always off.
DTR action	Determines how the router responds to change of state of the serial port DTR line • Ignore - Take no action • Enter Command State – when connected to PPP endpoint, this is equivalent to disconnect. When connected to IP modem endpoint, this enters online command state (e.g. process AT commands without dropping the connection). • Disconnect – terminates connection.

Item	Description
RI action	Determines how the router controls the state of the serial port RI (Ring Indicator) line. • Always On: RI is always on. • Incoming Ring: RI is on when an incoming connection request is received. • Always Off: RI is always off
Enable auto answer	When enabled, the router accepts incoming connections.
Circuit auto answer rings	Sets the number of incoming rings after which the router will answer incoming circuit switched data calls. The default value is Off. The other available options are from 1 to 12.
Advanced status	
Echo enable	Enables echo on the serial side. All commands are echoes. This can be turned on/off via ATE1 and ATE0 commands. Recommended setting for this option is ON.
Quiet mode	When on, there is no output from the modem on the serial side, i.e. you do not see OK, Connect etc. Recommended setting for this option is OFF.
Send OK on carriage return	If enabled, will print OK every time CR is received on the serial side. Recommended setting for this option is ON.
Suppress line feeds	If enabled, line termination is using CR (13). If disabled, line termination is CR LF (13 10). Recommended setting for this option is OFF.
Send OK on unknown command	Will send OK when an unknown/invalid AT command is received. Recommended setting for this option is ON.
Verbose mode	The modem returns messages to the computer to indicate the return status of commands and interrupts such as incoming call and call progress. Recommended setting for this option is ON.

Table 38 – Modem emulator endpoint options

PPP server: This creates a point-to-point server endpoint with the following options.

PPP server endpoint (PPPserver)

PPP server IP address

PPP client IP address

MTU
128-16384

MRU
128-16384

Raw PPP mode
☐ 0
Disable modem emulation before starting PPP

Disable CCP
☐ 0
Use with devices without compression control protocol

Figure 136 – PPP server endpoint configuration

Item	Description
PPP server IP address	The IP address of the PPP server. This defaults to the router's current IP address.
PPP client IP address	The IP address of the PPP client. This defaults to the next IP address in the DHCP range after the router's address.
MTU	The maximum transmission unit size of packets sent by the PPP server.
MRU	The maximum receive unit size of packets received by the PPP server.
Raw PPP mode	This option is provided for compatibility with legacy devices that assume there is a line available and do not require dial commands to be issued first. Raw PPP mode is turned off by default.
Disable CCP	This option is provided for use with devices that do not support the compression control protocol. The router uses the compression control protocol and the toggle key is in the OFF position by default.

Table 39 – PPP server endpoint options

IP modem: This endpoint can be used to connect to the modem emulator endpoint to achieve similar functionality to PAD Daemon. It allows a data stream from the serial port to a TCP/UDP server/client and provides modem control lines and AT interpreter on the serial side.

IP modem endpoint (IPmodem)

Outgoing connections enabled ☐ Enable ☒ **Disable**

Incoming connections enabled ☐ Enable ☒ **Disable**

Mode ☐ UDP ☒ **TCP**

Exclusive mode ☐ 0 First TCP connection has priority

No send delay ☐ 0 Selecting ON will disable Nagle algorithm

Keepalive ☐ 0

Save Cancel

Table 40 – IP modem endpoint configuration

Item	Description
Outgoing connections enabled	Enables or disables the ability of the router to initiate outbound network connections i.e act as a networking client. It will attempt to connect to the remote server when relevant activity is detected on the serial side e.g. ATD dial command.
Incoming connections enabled	Enables or disables the ability of the router to accept incoming network connections i.e. act as a networking server. When an incoming connection from a remote client is detected, the router simulates a dial-in call on the serial line.
Mode	Sets the IP modem to either TCP or UDP mode.
Exclusive mode (TCP mode only)	When this is off, any new client connection disconnects the previous client connection and uses a new client instead.
No send delay	Disables Nagle algorithm. Disabling this is sometimes important so that serial data is sent as soon as possible instead of waiting for a more optimal block of data for Ethernet. Enabling this effectively reduces latency but increases the amount of network traffic.
Keepalive	Keepalive sends a message to check that the link is still active or to keep it active.
Keepalive count	The number of keepalive messages to send.
Keepalive idle	The duration between two keepalive transmissions when in idle condition.
Keepalive interval	The duration between two successive keepalive retransmissions.

Table 41 – IP modem endpoint options

TCP connect-on-demand endpoint: The TCP connect-on-demand endpoint allows data to be buffered and then sent to a TCP server when the buffer has been filled. It is primarily useful in situations where you do not want ‘keep alive’ packets to keep the socket open and create an overhead when the TCP data connection is not in use.

TCP connect-on-demand endpoint (TCPconnect)

Primary server IP address

Port number

1-65535

Backup server IP address

Leave blank if backup server not required

Port number

1-65535

Inactivity timeout

0-10000 seconds, 0 Disconnect immediately

Minimum transmit buffer size

1-1500

Start ID

Send this ID to server when connected

End ID

Send this ID to server before disconnecting

Keepalive

☐

0

Save


Cancel

Figure 137 – TCP connect-on-demand endpoint configuration

Item	Description
Primary server IP address	The IP address of the TCP server to which the router should attempt the initial connection.
Port number	The port number that the TCP server operates on.
Backup server IP address	If connection to the primary server fails, the router will attempt to connect to this address.
Port number	The port number that the backup TCP server operates on.
Inactivity timeout	The period, in seconds, that the socket is considered idle/inactive if no packets are sent. The timer begins at the end of the last sent packet. The valid range is 0-10000 seconds. If this field is set to 0, the client disconnects immediately after sending a packet.
Minimum transmit buffer size	The number of bytes that must be reached before the client decides to transmit.
Start ID	This is a string which, if configured, is sent before any serial data is sent, every time the client connects <START ID><SERIAL DATA>
End ID	This is a string which, if configured, is sent after all serial data, just before the client disconnects <START ID><SERIAL DATA><END ID>
Keepalive	Keepalive sends a message to check that the link is still active or to keep it active.
Keepalive count	The number of keepalive messages to send.
Keepalive idle	The duration between two keepalive transmissions when in idle condition.
Keepalive interval	The duration between two successive keepalive retransmissions.

Table 42 – TCP connect-on-demand endpoint options

- 4 Click the **OK** button. The router displays a screen with configuration options for your chosen endpoint type.
- 5 Enter the options for your endpoint as required.
- 6 Click the Save button. The Endpoints list is displayed with the newly created endpoint listed and a summary of the settings your configured.

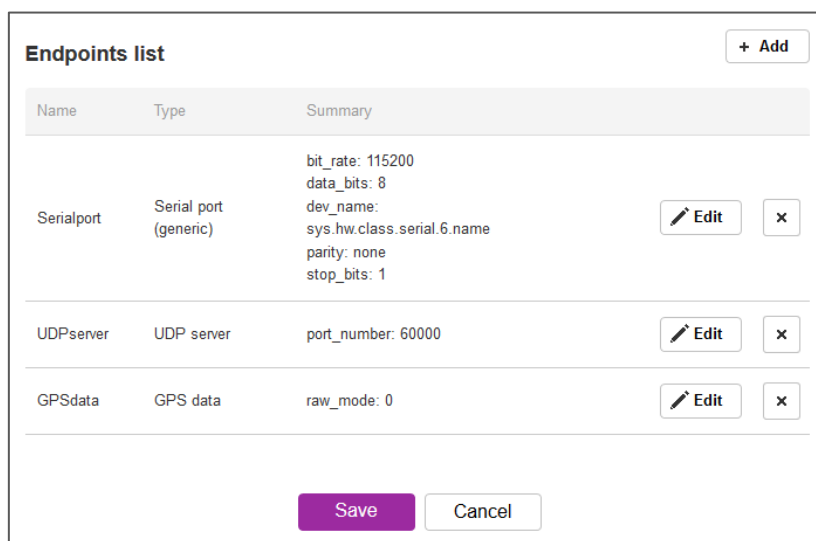

Endpoints list
+ Add

Name	Type	Summary	
Serialport	Serial port (generic)	bit_rate: 115200 data_bits: 8 dev_name: sys.hw.class.serial.6.name parity: none stop_bits: 1	Edit X
UDPserver	UDP server	port_number: 60000	Edit X
GPSdata	GPS data	raw_mode: 0	Edit X

Save
Cancel

Figure 138 – Endpoints list

Streams

When you have created the required endpoints, you can then proceed to set up a data stream. A data stream sends data from one endpoint to another, performing any transformation of the data as required. When a stream is added, an underlying process on the router checks the validity of the stream, checking for conflicts and illogical configurations. To access the Streams page, click on the Services menu at the top of the screen, click on the Data stream manager menu then click on the Streams menu item on the left.

Notes on data stream operation:



When any changes to the Data stream manager configuration are detected, all data streams are stopped and restarted as per the new configuration.

Multiple Modbus clients cannot connect simultaneously to Modbus serial devices connected to the router.

Every stream requires two endpoints, Endpoint A and Endpoint B. In all cases, the flow of data is from Endpoint A to Endpoint B.

To create a new stream:

- 1 Click the +Add button on the right side of the page.

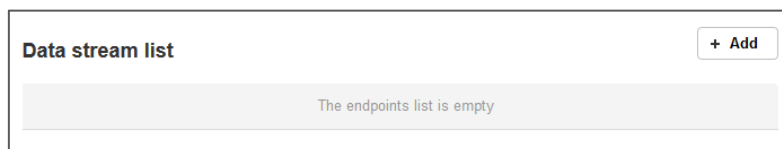


Figure 139 – Data stream list

The Edit data stream page is displayed.

- 2 In the Data stream name field, enter a name for the Data stream.
- 3 Under Endpoint A, use the Endpoint name drop down list to select one of the endpoints you created previously. This endpoint should be the starting point of the stream. Use the Mode drop down list to select the mode of operation of the endpoint. The mode can be thought of as a transformation of the data as it leaves this endpoint. For example, if Endpoint A type is Serial port (generic), the Mode can be set to various Modbus server and client types. This means that upon arrival at Endpoint A, the data will be transformed into the chosen Modbus format, ready to be sent to Endpoint B.
- 4 Under Endpoint B, use the Endpoint name drop down list to select one of the endpoints you created previously. This endpoint should be the destination of the stream. The screenshot below shows a configuration sending data received on an attached serial port to a TCP server running on the router. Use the Mode drop down list to select the mode of operation of the endpoint. The mode can be thought of as a transformation of the data as it arrives at this endpoint.

Edit data stream

Activate ☒

Data stream name

Endpoint A

Endpoint name Serial port (generic)

Mode

Endpoint B

Endpoint name UDP server

Mode

Figure 140 – Edit data stream

- 5 Click the Save button. The new stream appears in the Data stream list.

Data stream list

Name	Endpoint A	Mode	Endpoint B	Mode	Enabled	Status	
SerialtoUDP	Serialport	Raw	UDPserver	Raw	Enabled	Running	Edit x

Figure 141 – Data stream list.

SNMP

SNMP configuration

The SNMP page is used to configure the SNMP features of the router. To access the SNMP configuration page, click on the Services menu at the top of the screen then click on the SNMP menu item on the left.

SNMP configuration

SNMP

I

SNMP Port

161

Version

v3

Engine ID suffix

User Name

Security level

Authentication, privacy

Authentication protocol

MD5

Authentication passphrase

Privacy protocol

DES

Privacy passphrase

Download MIB File

Download

This is a brief version of

SNMP traps

SNMP traps

I

Trap destination

Heartbeat interval

seconds

Trap persistence time

seconds

Trap retransmission time

seconds

Send heartbeat

Save

Figure 142 – SNMP configuration

SNMP (Simple Network Management Protocol) is used to remotely monitor the router for conditions that may warrant administrative attention. It can be used to retrieve information from the router such as the signal strength, the system time and the interface status.

Configuring SNMP

To configure SNMP:

- 1 Click the SNMP toggle key to switch it to the ON position.
- 2 In the SNMP port field, enter a port number to use for SNMP.
- 3 Use the Version drop down list to select an SNMP version to use. When SNMP is turned on, the router selects v3 as default because v1 and v2 are known to be insecure, therefore you should use v1 and v2 of SNMP with caution.

v3 Configuration

Complete the details as described in the screenshot and table below then click the Save button.

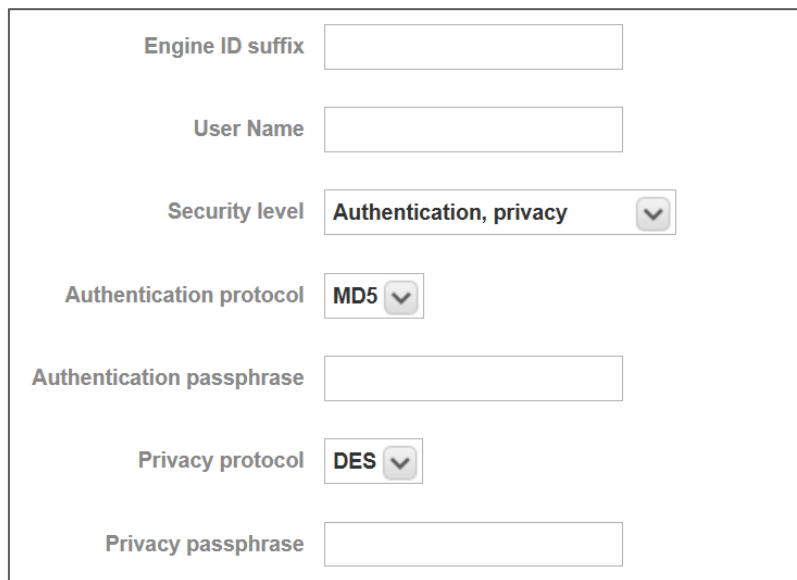


Figure 143 – SNMP v3 Configuration

Item	Description
Engine ID suffix	Enter the Engine ID suffix generated by the SNMP server.
User Name	Enter the SNMP user name.
Security level	Use the drop-down list to select the desired security level.
Authentication protocol	Select the authentication protocol (MD5/SHA). This is only required if Security level is set to enforce authentication.
Authentication passphrase	Select the authentication passphrase. This is only required if Security level is set to enforce authentication.
Privacy protocol	Select the privacy protocol (DES/AES). This is only required if Security level is set to enforce privacy.
Privacy passphrase	Select the privacy passphrase. This is only required if Security level is set to enforce privacy.

Table 43 – SNMP v3 Configuration

v1/v2 Configuration

Enter Read-only community name and Read-write community name which are used for client authentication.



Important – Community names are used as a type of security to prevent access to reading and/or writing to the routers configuration. It is recommended that you change the Community names to something other than the default settings when using this feature.

Click the Save button to save any changes to the settings.

The Download button displays the Management Information Base (MIB) of the router. The MIB displays all the objects of the router that can have their values set or report their status. The MIB is formatted in the SNMP-related standard RFC1155.


SNMP traps

SNMP traps are messages from the router to the Network Management System sent as UDP packets. They are often used to notify the management system of any significant events such as whether the link is up or down.

Configuring SNMP traps

To configure SNMP traps:

- 1 In the Trap destination field, enter the IP address to which SNMP data is to be sent.
- 2 In the Heartbeat interval field, enter the number of seconds between SNMP heartbeats.
- 3 Use the Trap persistence time to specify the time in seconds that an SNMP trap persists.
- 4 Use the Trap retransmission time to specify the length of time in seconds between SNMP trap retransmissions.

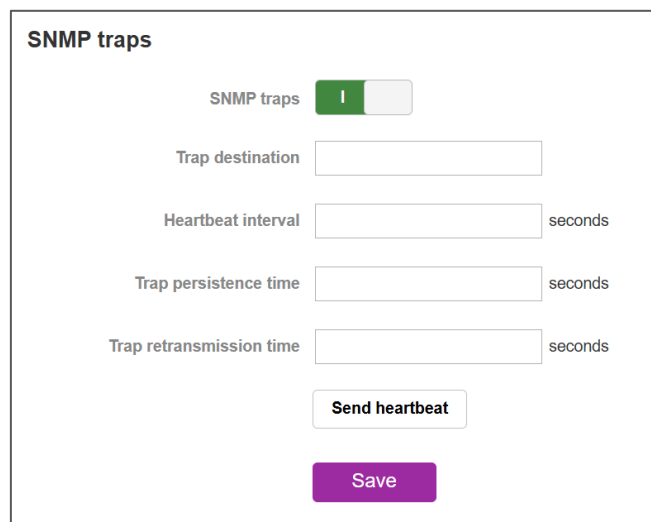

The image shows a configuration form titled "SNMP traps". At the top, there is a toggle switch for "SNMP traps" which is currently turned on (green). Below this are four input fields: "Trap destination", "Heartbeat interval", "Trap persistence time", and "Trap retransmission time". Each of these fields has a "seconds" label to its right. At the bottom of the form, there are two buttons: "Send heartbeat" and "Save".

Figure 144 – SNMP traps

To send a manual SNMP Heartbeat, click the Send heartbeat button. When you have finished configuring the SNMP traps, click the Save button to save the settings.



Note: When a factory reset is performed via SNMP, the SNMP settings are not preserved. Ensure that you have physical access to the router if you plan to perform a factory reset.

PADD

PAD Daemon is a tool used to encapsulate raw serial data into a TCP packet to be transported over IP to another end point. The server receiving the TCP packets unpacks the data and the original raw serial data is passed out of its serial port to the attached device, thereby creating an invisible IP network to the two serial devices.

The PAD Daemon runs as a background process which can be accessed via the web configuration interface. The PADD is used usually with multiple connections or when redundant connections are needed. The PADD has two modes: the PADD TCP/IP Server mode and PADD TCP/IP Client Mode. When PADD is enabled, both the PADD server mode and PADD client mode can be run at the same time.

The PADD configuration page is shown below.

PADD

Activate ☒

Serial port status No conflicts

Debug level (0-2)

Serial port settings

Host port

Baud rate

Data bits

Stop bits

Parity

Flow control

Inter character timeout (x100ms)

End-of-line character ASCII code

Start of line timestamps ☒ Off ☐ YYYYMMDDHHMMSS

TCP/IP Server

Listening port 1-65535

Incoming connection is ☒ Exclusive ☐ Shared

TCP/IP Client

Connect to ☐ First available ☒ All available

Remote Host 1 Server:Port

Remote Host 2 Server:Port

Remote Host 3 Server:Port

Remote Host 4 Server:Port

Network

Remote server retry period 1-65535 seconds

TCP Keepalive Probes 0-65535 seconds (0=disabled)

Number of probe failures before disconnect 1 - 20

Figure 145 – PADD

Item	Description
PADD	
Activate	Set to ON to activate PADD.

Item	Description
Serial port status	Status of the Serial port.
Debug level	Enter Debug level: • 0 – Disabled • 1 – Logs basic debug and error information • 2 – Logs detailed debugging information for troubleshooting
Serial port settings	
Host port	Use the drop-down list to select the serial port to use. If no USB-to-Serial adapter is connected, the available options are Built-in serial port and Custom .
Baud rate	The data transmission speed of the serial port in bits per second. Default value is 115200 By default, the serial line format is 8 data bits, No parity, 1 Stop bit. Refer to the AT (V.250) AT Command Manual if you need to change the serial line format.
Data bits	The number of data bits used to represent each character transmitted over the serial port. The default serial line data bits setting used is 8. Options include 5 – 8 bits.
Stop bits	The number of stop bits used to indicate the end of a character. The default stop bit setting is set to 1. However, the stop bit setting can be set to 2 bits if required.
Parity	Parity is the means to detect transmission errors. An extra data bit is transmitted with each data character and is arranged in a fashion such that the number of 1 bits in each character, including the parity bit, is always odd or always even. If a byte is received with the wrong number of 1s, then this shows the data must be corrupt. Options include none, odd or even. The default setting is none for no parity checks.
Flow control	Set Flow control. Options are: • Off – Disabled • Hardware – Uses RTS/CTS signals to control flow of data • Xon/Xoff – Uses software based flow control. Xon resumes transmission and Xoff pauses transmission. The special characters Xon and Xoff are sent within the data stream to regulate flow.
Inter character timeout	Enter the maximum time the router waits between two consecutive characters on the serial port before treating the received data as complete. The value entered x 100 ms is considered as the Inter character timeout.
End-of-line character	Enter the character used to indicate the end of a line of input received on the serial port. It should be an ASCII value.
Start of the line timestamps	Set to Off or YYYYMMDDHHMMSS format
TCP/IP Server	
Listening port	Enter the port value. Default value is 1516.
Incoming connection is	Select how the serial port accepts incoming connections. Options are: • Exclusive – Only one connection is allowed at a time • Shared – Multiple connections can access the serial port simultaneously
TCP/IP client	
Connect to	Select how the router connects to the configured destination hosts. Options are: • First available – Connect to first reachable host • All available – Connect to all configured hosts simultaneously
Remote Host 1	IP address or hostname of remote device 1:Port
Remote Host 2	IP address or hostname of remote device 2:Port

Item	Description
Remote Host 3	IP address or hostname of remote device 3:Port
Remote Host 4	IP address or hostname of remote device 4:Port
Network	
Remote server retry period	Enter the time interval in seconds between successive attempts to reconnect to the remote server after a failed connection.
TCP Keepalive Probes	Enter the time interval in seconds between successive TCP keepalive probes sent to verify that the connection to the remote host is still active.
Number of probe failures before disconnect	Enter the maximum number of consecutive TCP keepalive probe failures allowed before the router terminates the connection to the remote host.

Table 44 – PADD Configuration

Serial data status

This feature allows monitoring the sent and received packets on the Serial DE-9 interface when Data Stream Manager and PADD modes are configured in conjunction with TCP/UDP endpoints.

Serial data status

Serial ports
Host port: Serial port (generic)
Baud rate: 115200
Data bits: 8
Stop bits: 1
Parity: none
RX count: 8
TX count: 10

TCP connections
Server listen on port:
Keep alive time: 1
Keepcnt: 10
Keepidle: 10
Keepintvl: 10
Max clients: 10

Clients list:	Local address:Port	Peer address:Port
	192.168.1.1:35415	192.168.1.108:40000

UDP connections
Server listen on port:

Clients list:	Local address:Port	Peer address:Port
---------------	--------------------	-------------------

Figure 146 – Serial data status page



Note – Note: this feature will be disabled if PADD or Data Stream Manager are turned off.

TR-069

To access the TR-069 configuration page, click the Services menu item, then select the TR-069 menu item on the left.

TR-069 configuration

Enable TR-069

☒

ACS URL

ACS username

ACS password

Verify ACS password

Connection request username

Connection request password

Verify connection request password

Enable periodic ACS informs

☒

Inform period

(30-2592000) secs

Randomise initial inform

☐ 0

Save

Last inform status

Start at

End at

TR-069 DeviceInfo

Manufacturer

NetComm Wireless Limited

ManufacturerOUI

18F145

ModelName

NWL-222

Description

NetComm NWL Series Cellular Router

ProductClass

NWL220 Series

SerialNumber

EF11DF

Figure 147 – TR-069 configuration

The TR-069 (Technical Report 069) protocol is a technical specification also known as CPE WAN Management Protocol (CWMP). It is a framework for remote management and auto-configuration of end-user devices such as customer-premises equipment (CPE) and Auto Configuration Servers (ACS). It is particularly efficient in applying configuration updates across networks to multiple CPEs.

TR-069 uses a bi-directional SOAP/HTTP-based protocol based on the application layer protocol and provides several benefits for the maintenance of a field of CPEs:

- Simplifies the initial configuration of a device during installation
- Enables easy restoration of service after a factory reset or replacement of a faulty device
- Firmware and software version management
- Diagnostics and monitoring

Note –



You must have your own compatible ACS infrastructure to use TR-069. To access and configure the TR-069 settings, you must be logged into the router with the root account.

When a factory reset of the router is performed via TR-069, the TR-069 settings are preserved.

The Wireless router sends “inform” messages periodically to alert the ACS server that it is ready. These inform messages can also be configured to accept a connection request from the ACS server. When a connection is established, any tasks queued on the ACS server are executed. These tasks may be value retrieval or changes and firmware upgrades.

TR-069 configuration

To configure TR-069:

- 1 Click the Enable TR-069 toggle key to switch it to the ON position.
- 2 In the ACS URL field, enter the Auto Configuration Server’s full domain name or IP address.
- 3 Use the ACS username field to specify the username used by the server to authenticate the CPE when it sends an “inform” message.
- 4 In the ACS password and Verify ACS password fields, enter the password used by the server to authenticate the CPE when it sends an “inform” message.
- 5 In the Connection request username field, enter the username that the CPE uses to authenticate the Auto Configuration Server during a connection request to the CPE.
- 6 In the Connection request password and Verify password fields, enter the password that the CPE uses to authenticate the Auto Configuration Server during a connection request to the CPE.
- 7 The inform message acts as a beacon to inform the ACS of the existence of the router. Click the Enable periodic ACS informs toggle key to turn on the periodic ACS inform messages.
- 8 In the Inform Period field, enter the number of seconds between the inform messages.
- 9 Click the Save button to save the settings.


OMA-Lightweight M2M

The OMA Lightweight M2M (OMA-LWM2M) protocol was designed by the Open Mobile Alliance to provide remote device management specifically for M2M devices. It is less taxing on the system and network than OMA-DM and TRS-069. OMA-LWM2M runs over UDP and supports asynchronous notifications when a resource changes.

It provides:

- Firmware upgrades
- Device monitoring and configuration
- Server provisioning

To configure the Lightweight M2M client, select the Enable Lwm2m toggle key so that it is in the ON position.

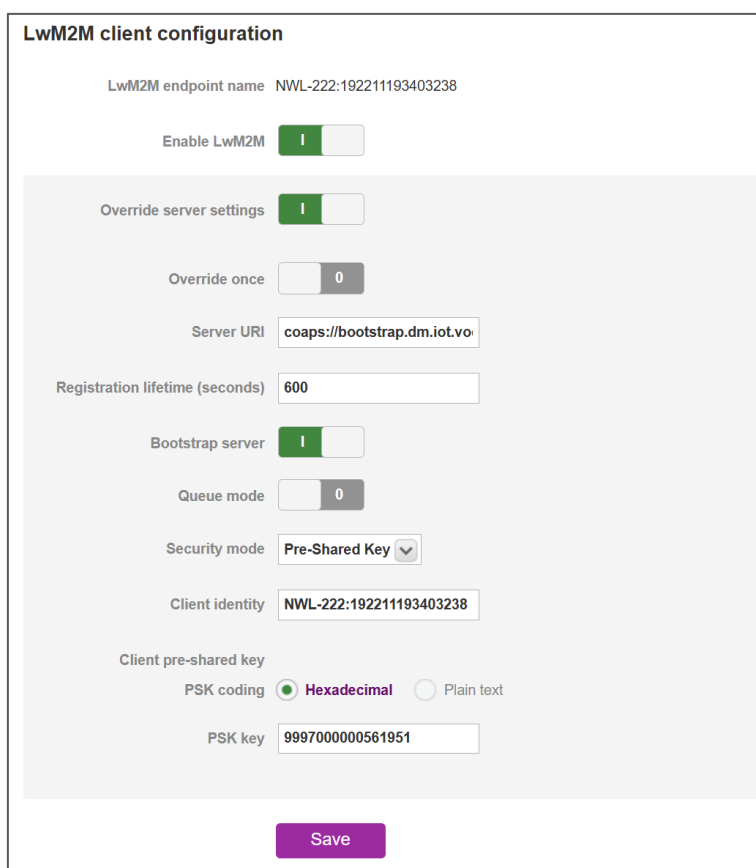

Lwm2m client configuration

Lwm2m endpoint name: NWL-222:192211193403238

Enable Lwm2m: ☒

Override server settings: ☒

Override once: ☐ 0

Server URI:

Registration lifetime (seconds):

Bootstrap server: ☒

Queue mode: ☐ 0

Security mode:

Client identity:

Client pre-shared key

PSK coding: ☒ Hexadecimal ☐ Plain text

PSK key:

Figure 148 – Lwm2m client configuration

Item	Description
Lwm2m Endpoint Name	This is the unique ID the device will use to identify itself with Lwm2m servers.
Enable Lwm2m	Toggle key which enables or disables the Lwm2m function.
Override Server Settings	The Lwm2m client maintains the list of servers that it will connect to as part of its internal state. Enabling this setting will allow a user to specify new server details that will override whatever current settings the client has.

Item	Description
Override Once	When 'Override Settings' is enabled, this option allows you to specify whether the new server details they provide will be applied once when the client is restarted (normal flow for configuring/reconfiguring the client) or, when disabled, applied every time the client restarts (used for debugging/troubleshooting.)
Server URI	When 'Override Settings' is enabled, this allows you to specify the URI of the LwM2M server to connect to. Must be a fully specified CoAP or CoAPS URI, including port number, e.g. coap://server.com:5683 or coaps://server.com:5864.
Registration Lifetime	When 'Override Settings' is enabled, this allows you to specify the interval (in seconds) at which the LwM2M client will send registration updates (i.e. heartbeat messages) to the server.
Bootstrap Server	When 'Override Settings' is enabled, this allows you to specify whether the new server is a LwM2M bootstrap server.
Queue Mode	When 'Override Settings' is enabled, this allows you to specify whether to report the UDP binding mode to the server as queued ("UQ" binding mode) or not ("U" binding mode.)
Security Mode	When 'Override Settings' is enabled, this allows you to choose the security mode that will be used to connect to the LwM2M server. Currently supported options are 'No Security' and 'Pre-Shared Key'.
Client Identity	When PSK security mode is selected this field is where you must specify the identity string associated with your pre-shared key.
Client Pre-Shared Key	When PSK security mode is selected this field is where you must provide the pre-shared key. The key must be entered as a hexadecimal string.

Figure 149 – LwM2M client configuration

Timeouts

Most mobile networks use stateful firewalls or NAT where the timeout for UDP is approximately 1-2 minutes. If this applies to you, we suggest either configuring the LwM2M client with a registration lifetime that falls within this period (e.g. 60 seconds) or using the queued ("UQ") UDP binding mode.

GPS

On models with a built-in GPS, you are able to use location-based services, monitor field deployed hardware or find your current location. The GPS Status window provides up to date information about the current location and the current GPS signal conditions (position dilution of precision (PDOP), horizontal dilution of precision (HDOP) and vertical dilution of precision (VDOP)) of the router.

NMEA support

The router supports the National Marine Electronics Association NMEA-0183 compatible (V2.3) standard of sending GPS data. The standard includes "sentences" used to identify the type of data being sent and therefore defines the way the data is interpreted. The supported GPS related sentences are listed below:

- GPGLGA – Global Positioning System Fix Data, Time, Position and fix related data for a GNSS receiver
- GPRMC – Recommended minimum data for GPS
- GPGSV – Detailed satellite data
- GPGSA – Overall satellite data

- GPVTG – Vector track and speed over the Ground

GPS configuration

To access the GPS configuration screen, select the Services item from the top menu bar then the GPS item on the left. Finally, select the GPS configuration menu item.

To use the GPS function, set the GPS operation toggle key to ON and click the Save button.

GPS configuration

GPS operation ☒

Save

GPS applications

Google maps

GPS status

Positioning data source Stand-alone GPS

Date & Time 8/7/2015 10:21:41 am

Latitude & Longitude 33 48' 43.561" S , 151 08' 90.614" E

Altitude & GEOID height 43.5 m , 24.0 m

Ground speed 0.0 km/h , 0.0 knots

PDOP & HDOP & VDOP 3.5 , 3.3 , 1.0

Standalone GPS device status Normal

Number of satellites 10

Satellites status

Index	In Use	PRN	SNR	Elevation	Azimuth
1	✗	14		51	348
2	✓	15		07	137
3	✓	18		52	139
4	✗	19		23	226
5	✓	21		39	064
6	✗	22		62	223
7	✓	24		19	101
8	✗	16		00	296
9	✗	20		00	105
10	✗	27		46	258
11	✗	N/A		N/A	N/A
12	✗	N/A		N/A	N/A

Figure 150 – GPS configuration

The Google maps button provides a quick short cut to show your router's current position on a map.

Mobile Station Based Assisted GPS configuration

To access the Mobile Station Based Assisted GPS configuration screen, select the Services item from the top menu bar then the GPS item on the left. Finally, select the MSB (A-GPS) menu item.

Mobile Station Based Assisted GPS (MSB A-GPS) enables your router to download GNSS data which supplies orbital data to the GPS receiver, enabling it to lock to the satellites more rapidly. The GNSS data is stored on the router to assist the GPS in locating the router.

To set up automatic updates of GNSS data, set the A-GPS Enable toggle key to the ON position and use the drop-down lists to configure the automatic retry options. Each retry, the router checks for an updated GNSS data file and downloads the GNSS data if newer than the currently stored data.



Important – When new GNSS data is available and the router performs an update, up to 40MB of data may be downloaded. Please keep this in mind if your mobile broadband plan has usage restrictions.

Mobile Station Based Assisted GPS configuration

A-GPS Enable

☒

Maximum Retry Count

5

▼

Retry Delay (minute)

▼

Automatic Update Period (day)

5

▼

GNSS data last update

Thu Jan 01 1970 05:30:00 GMT+0530 (India Standard Time)

GNSS data expires

Thu Jan 01 1970 05:30:00 GMT+0530 (India Standard Time)

A-GPS last update

Thu Jan 01 1970 05:30:00 GMT+0530 (India Standard Time)

Save

Update now

Figure 151 – Mobile Stations Based Assisted GPS configuration options

Item	Description
A-GPS Enable	Enables or disables the mobile station based assisted GPS function.
Maximum Retry Count	Sets the maximum number of times the router should attempt to triangulate its position.
Retry delay (minute)	Sets the number of minutes the router should wait between attempts to triangulate its position.
Automatic Update Period (day)	Sets the number of days that the router should automatically update the A-GPS data. The maximum update period is 7 days.

Table 45 – Mobile Station Based Assisted GPS configuration options

The GNSS data last update field represents the time that the GNSS data file was created while the GNSS data expires field indicates the time that this data is valid until. The A-GPS last update field specifies the last time the router attempted to retrieve an update to the GNSS data.

You may manually force the router to check for an update regardless of the next scheduled update time by clicking the Update Now button.

When you have finished configuring the settings, click the Save button to save the changes.

Odometer

To access the Odometer screen, select the Services item from the top menu bar then the GPS item on the left. Finally, select the Odometer menu item.

The GPS may be used to record the distance that the router has travelled. To do this, set the Odometer toggle key to the ON position as in the screenshot below. You can toggle the unit of measurement by clicking the Display imperial / Display metric button. The threshold setting adjusts the router's sensitivity to movement so that movement within the specified radius from the starting point does not register as distance travelled. When you have finished configuring the Odometer settings, click the Save button to ensure the settings are stored on the router.

Odometer

Odometer

☒
☐

Odometer reading

0 Meter

Display imperial

Odometer start time

N/A

Reset odometer

Threshold

Min

Max

35 Meter

Save

Figure 152 – Odometer options

Item	Description
Odometer reading	The number of metres/kilometres that the device has travelled since the time listed in the Odometer start time field.
Display imperial / Display metric	Toggles the Odometer reading between metric and imperial measurements.
Odometer start time	The time that recording of distance travelled began.
Reset odometer	Resets the odometer reading to 0 and the Odometer start time to the current time.
Odometer	Toggles the Odometer function on and off.
Threshold	Specifies the minimum distance that the router must travel from its current position before the Odometer reading increases.

Table 46 – Odometer configuration options

Geofence

To access the Geofence screen, select the Services item from the top menu bar then the GPS item on the left. Finally, select the Geofence menu item.

Geofence allows you to designate a circular area and then uses the router's GPS position to monitor when the Vodafone MachineLink 4G Lite router moves out of or in to that area. You can configure notifications to be sent when the unit enters or exits the region. Notifications types are set on the Event notification configuration page, see below.

Geofence configuration

Geofence operation
☒

Save

Geofence list

+ Add

Display DMS

Display imperial

Latitude	Longitude	Radius km	Status	Notification
-33.807111	151.148188	25	Entry/Exit	Edit ×


Figure 153 – Geofence options

Item	Description
Geofence operation button	Toggles Geofence operation on or off. When on your currently defined Geofences appear in the Geofence list, see below.
Save button	Saves any changes made on this page
Add button	Click to add a new Geofence definition. The add Geofence configuration screen will open, see next section below.
Geofence list	This table contains all your currently defined Geofences.
Display DMS / Display Decimal degree button	Toggle the Latitude and Longitude coordinates display between Decimal degree coordinates, see above graphics, or the more traditional DMS (degrees, minutes, seconds) coordinates, see below: Latitude Longitude S33° 48' 25.5996" E151° 8' 53.4768"
Display imperial/metric	Toggle between metric (kilometres) or imperial (miles) display of the radius of the Geofence.
Notification	The event notification currently selected for this Geofence, see Add Geofence in next section for a description of the available notification types.
Edit button	Click this to edit an existing Geofence in the list. The user interface is the same as the add Geofence configuration screen, see next section below.

Table 47 – Geofence user interface


Add Geofence

Click the Add button to create a new Geofence (note that editing an existing Geofence uses the same configuration page).

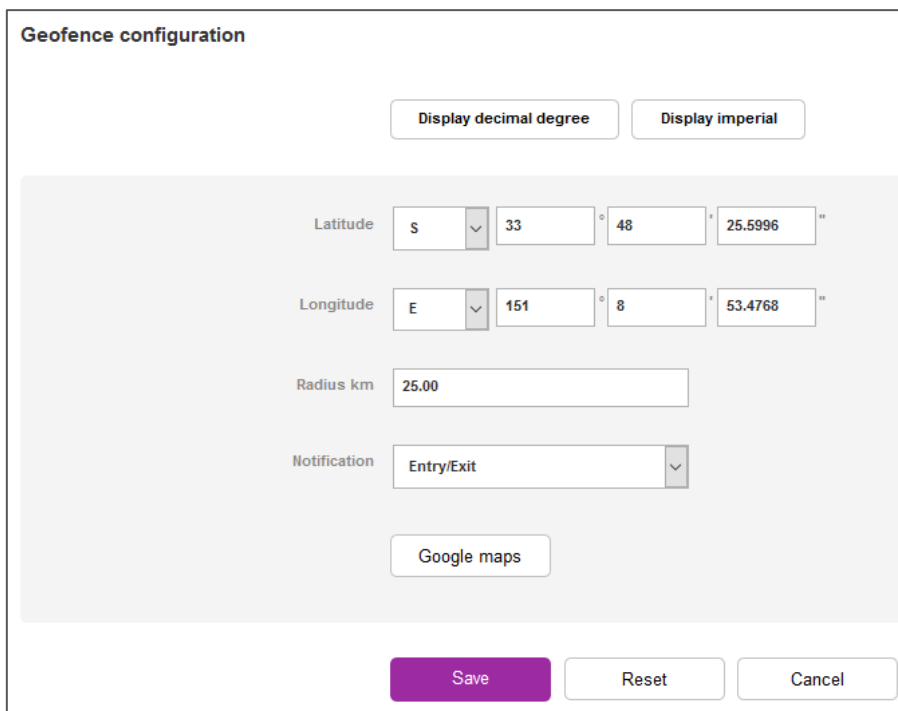

The image shows a 'Geofence configuration' form. At the top, there are two buttons: 'Display decimal degree' and 'Display imperial'. Below these, the form is divided into a light gray shaded area containing the input fields. The 'Latitude' field has a dropdown menu set to 'S', followed by input boxes for '33', '48', and '25.5996'. The 'Longitude' field has a dropdown menu set to 'E', followed by input boxes for '151', '8', and '53.4768'. Below these is a 'Radius km' text box with the value '25.00'. The 'Notification' field is a dropdown menu set to 'Entry/Exit'. At the bottom of the shaded area is a 'Google maps' button. Below the shaded area are three buttons: 'Save' (highlighted in purple), 'Reset', and 'Cancel'.

Figure 154 – Configure Geofences

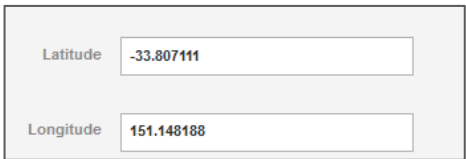Item	Description
Display DMS button	In the above graphic, the Latitude and Longitude coordinates have been entered using the more traditional DMS (degrees, minutes, seconds) coordinates, Note that you have to select North (N) or South (S) for your latitude, depending on whether your location is north or south of the equator and you must select east (E) or west (W) of the prime meridian (Greenwich England to the international date line)
Display decimal button	Click this to enter the Latitude and Longitude coordinates using Decimal degree coordinates:  The image shows a smaller version of the 'Geofence configuration' form, but with the 'Latitude' field set to '-33.807111' and the 'Longitude' field set to '151.148188'. The 'Display decimal degree' button is highlighted. Note that in the southern hemisphere you must enter a negative Latitude coordinate and in the western hemisphere (North and South America, from the prime meridian to the international date line) you must enter a negative Longitude coordinate.
Display imperial/metric in Radius mi / km text box	Toggle between metric (kilometres) or imperial (miles) display of the radius of the Geofence.

Item	Description
Notification	Four notification states are available: None – This effectively turns the Geofence function off, although the router continues to monitor the location of the device with respect to the Geofence settings. To properly disable the Geofence function, set the Geofence operation toggle key to the off position. Entry – A notification is triggered when the router enters into the Geofence radius. Exit – A notification is triggered when the router leaves the Geofence radius. Entry/Exit – A notification is triggered when the router crosses over the Geofence radius line. The type or types of notification (SMS, email, etc.) is set in the Event notification configuration page, see below.
Google maps button	The Google maps button serves two purposes. When no latitude and longitude has been entered, the Google maps button displays the router's current location on the map. When coordinates have been entered, clicking on the Google maps button checks that your coordinates go to where you expect them to be.
Save button	Saves the new Geofence (Add) or saves the changes to an existing Geofence (Edit).
Reset button	Clears all entries on the page.
Cancel button	Closes the Add/Edit page and returns to the Geofence list without saving any changes.

Table 48 – Add Geofence options

IO configuration

The Vodafone MachineLink 4G Lite router is equipped with a 6-way terminal block connector providing three identical multipurpose inputs and outputs as well as a dedicated ignition input. These inputs and outputs may be independently configured for various functions, including:

- NAMUR (EN 60947-5-6 / IEC 60947-5-6) compatible proximity sensor input
- Proximity sensor input for use with contact closure (open/closed) type of sensors (PIR sensors, door/window sensors for security applications) with the input tamper detection possible (four states detected: open, closed, short and break) using external resistors
- Analogue 0V to 30V input
- Digital input (the I/O voltage measured by the iMX283 LRADC and the software making decision about the input state) with the threshold levels configurable in software
- Open collector output.

Use the pull up voltage options to select the desired output voltage of the I/O pins. The pull up voltage you select will be the same for each pin when pull up is enabled for that pin. Each pin is capable of outputting either 3.3V or 8.2V.

IO configuration

IO Functionality
☒ I

Pull up voltage
☒ 3.3V
☐ 8.2V

IO Manager Debug level
Min
Max
Error (Default=Error)

Per pin configuration

Pin	Mode	Pull up	Threshold	Value
1	Analogue input	☐ 0		0.04 V
2	Analogue input	☐ 0		0.04 V
3	Analogue input	☐ 0		0.08 V

Save
Cancel

Figure 155 – IO configuration options

Item	Description
IO configuration	
IO Functionality	Enables the configuration of the input and output pins on the four-way terminal block connector.
Pull up voltage	Specifies the output voltage of the I/O pins.
IO Manager Debug level	Use the slide bar to adjust the level of detail you would like to see in the log for IO messages. A higher debug level displays more detailed messages in the log file.
Per pin configuration	
Pin	The I/O pin number corresponding to the pin on the four-way terminal block connector that you wish to configure.
Mode	The mode of operation for the corresponding pin. Available options are: Digital Input – The corresponding pin accepts digital input. Pull up may be on or off and both 3.3V and 8.2V are available as pull up voltages. The value column displays whether the signal received on the pin is High or Low. The default value is High. When the I/O pin is shorted to ground the value changes to Low. Digital Output – The corresponding pin outputs a digital signal. Pull up may be on or off and both 3.3V and 8.2V are available as pull up voltages. The value column contains a toggle key allowing you to set whether the output signal is High or Low. When set to Low, the output of the I/O pin is 0V. When set to High, the output of the I/O pin is 5V. Analogue input – The corresponding pin accepts an analogue signal. Pull up may be on or off and both 3.3V and 8.2V are available as pull up voltages. The value column displays the current voltage detected on the pin. Namur input - NAMUR is a sensor standard using low-level current signals. It can supply two different signal levels depending on the state of the switch and is commonly used in hazardous or explosive locations where compact sensors are required. When a pin is set to NAMUR mode, Pull up is turned on and the global Pull up voltage is set to 8.2V. These settings may not be changed for as long as a pin is set to NAMUR mode as they are required settings according to the NAMUR IEC 60947-5-6 standard. The value column displays whether the signal received on the pin is High or Low. Contact closure - A common type of digital input where a sensor or switch opens or closes a set of contacts as a result of a process change. An electrical signal is then used to determine whether the circuit is open or closed. When a pin is set to Contact closure input, Pull up is enabled for that pin and may not be turned off as long as the pin remains configured as a Contact closure input. Global pull up voltage may be either 3.3V or 8.2V. Digital Pulse - The corresponding pin outputs a series of high and low signals for specified durations, for a specified number of pulse cycles. When the pin is set to Digital pulse mode the edit icon displays in the value column for the corresponding pin. Click the edit icon, the Pulse Settings page displays (see Figure 156) where you can configure or edit the pulse settings for that pin. For pulse settings configuration details see Table 50. Once you configure the settings click Save to save and apply the settings and trigger the Digital Pulse. When a pin is set to Digital Pulse the Pull up voltage for that pin can be ON or OFF and can be set to 3.3 V or 8.2 V.

Item	Description
Pull up	Use the pull up toggle keys to turn the pull up on or off for the corresponding pin. When turned on, the pull up voltage output is the value specified in the "Pull up voltage" option.
Value	The value column displays whether the voltage detected on the line is low or high or allows you to set the output value to high or low. This can be useful for applications where monitoring of the transition between low and high is used to trigger an action.

Table 49 – IO configuration options



Important – Please refer to the SDK Developer Guide for hardware information about the Input/Output pins, wiring examples and configuration of the pins via the command line interface. There are also wiring examples in Appendix J of this User Guide.

Pulse Settings

Default Pulse Value

High Pulse Duration (in milli sec) (min 200, max 100000)

Low Pulse Duration (in milli sec) (min 200, max 100000)

Numbers of Pulses (min 1, max 100000)

Current Pulse State Stopped Low

Figure 156 – Pulse Settings

Item	Description
Default Pulse value	Specifies the initial state of the pin before the pulse cycle starts. Select the required value. Options are: 0 – The pin starts in the low state 1 – The pin starts in the high state
High Pulse duration (in milli sec)	Enter the duration in ms that the pin remains in the high state during each pulse cycle.
Low Pulse Duration (in milli sec)	Enter the duration in ms that the pin remains in the low state during each pulse cycle.
Number of Pulses	Enter the number of pulse cycles the router generates.
Current Pulse state	Displays the current state of the pulse whether low or high.

Table 50 – Pulse settings configuration


Low power mode

The Low power mode page provides you with an overview of the power profiles and the ability to configure them. Up to five power profiles may be configured and all of them may be active simultaneously. The Status column indicates whether the profile is active, while the Sleep mode and Wake mode columns summarise the method used to sleep or wake the modem.

To access the Low power mode page, click the System menu item, then select the Low power mode menu item on the left.



Note – When configuring multiple power profiles, be careful so that they do not overlap or conflict with one another, for example, configuring a schedule which wakes up the unit when another profile has it scheduled to be in low power mode.

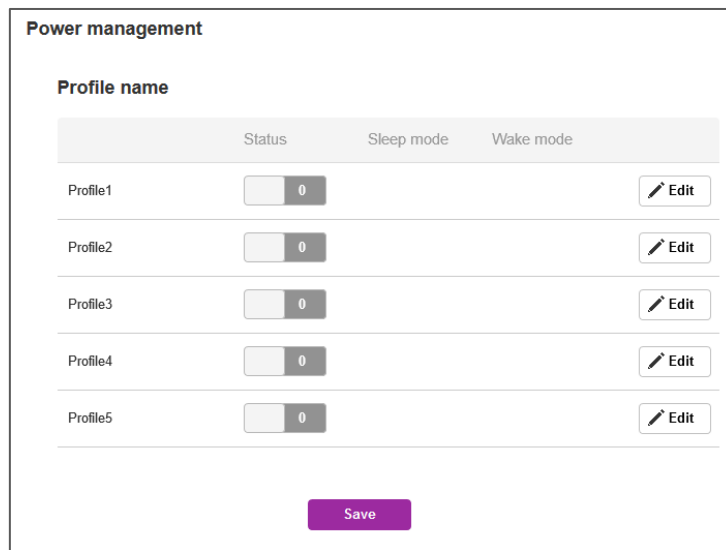


Profile name	Status	Sleep mode	Wake mode
Profile1	☐ 0		
Profile2	☐ 0		
Profile3	☐ 0		
Profile4	☐ 0		
Profile5	☐ 0		

Save

Figure 157 – Power management

To edit a power profile, click the Edit  icon of the appropriate profile.

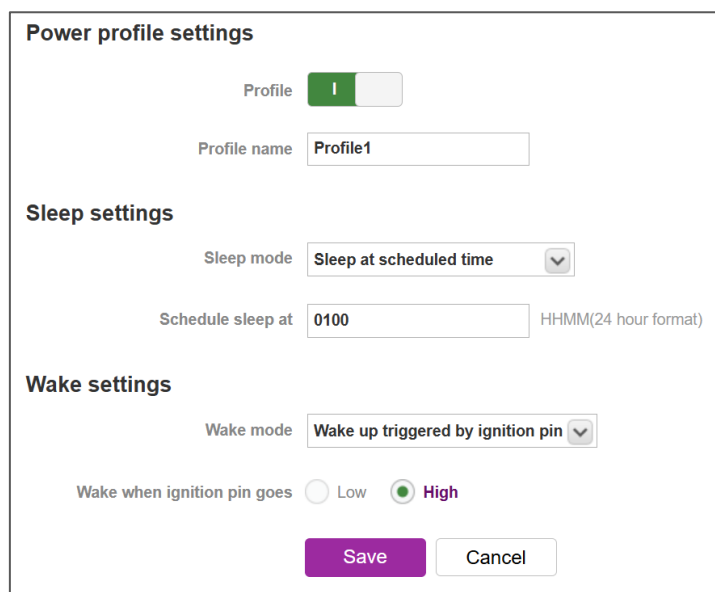

Power profile settings

Profile ☒

Profile name

Sleep settings

Sleep mode

Schedule sleep at HHMM(24 hour format)

Wake settings

Wake mode

Wake when ignition pin goes ☐ Low ☒ High

Save **Cancel**


Figure 158 – Power management – Power profile settings

Sleep settings

Use the Sleep mode drop down list to select a condition under which the router should enter the sleep state.

Sleep after timer

When this mode is selected, the router will enter the sleep state after the number of minutes specified in the Sleep after field, regardless of the state of the ignition pin.

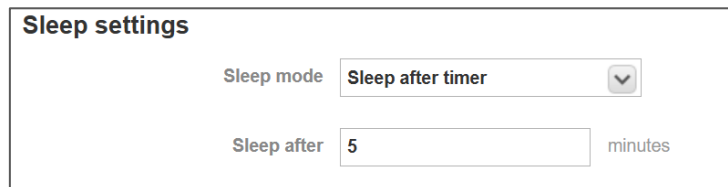


The screenshot shows the 'Sleep settings' section. The 'Sleep mode' dropdown is set to 'Sleep after timer'. Below it, the 'Sleep after' field contains the value '5', followed by the unit 'minutes'.

Figure 159 – Sleep after timer

Sleep at scheduled time

When this mode is selected, the router goes to sleep at the time specified in the Schedule sleep at field, regardless of the state of the ignition pin. Enter the time in 24-hour format without the semi-colon.

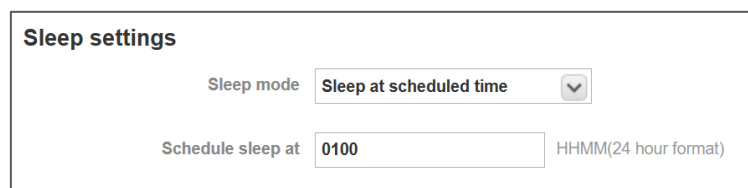


The screenshot shows the 'Sleep settings' section. The 'Sleep mode' dropdown is set to 'Sleep at scheduled time'. Below it, the 'Schedule sleep at' field contains the value '0100', followed by the text 'HHMM(24 hour format)'.

Figure 160 – Sleep at scheduled time

Sleep triggered by ignition pin

This mode sets the router to enter sleep state when the signal on the ignition pin reaches the specified value.

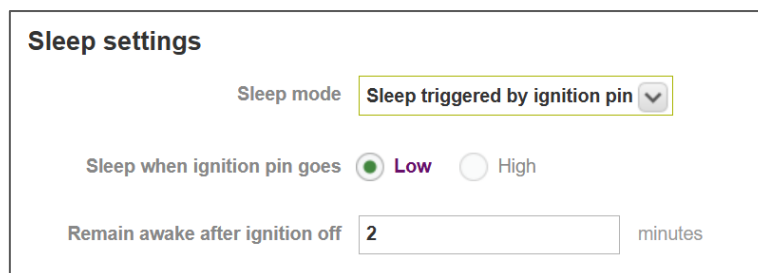

The screenshot shows the 'Sleep settings' section. The 'Sleep mode' dropdown is set to 'Sleep triggered by ignition pin'. Below it, there are two radio buttons: 'Low' (selected) and 'High'. At the bottom, the 'Remain awake after ignition off' field contains the value '2', followed by the unit 'minutes'.

Figure 161 – Sleep triggered by ignition pin


Use the Sleep when ignition pin goes setting to select Low or High. By default, this is set to Low. Additionally, the router will stay on for the number of minutes specified in the Remain awake after ignition off field. The minimum value for this field is 2 minutes with the maximum being 255 minutes.

Wake settings

Use the Wake mode drop down list to select a condition under which the router should return from the sleep state.

Wake triggered by ignition pin

This mode sets the router to wake up when the signal on the ignition pin reaches the specified value.

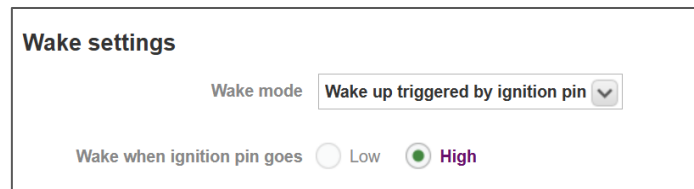


The screenshot shows a configuration box titled "Wake settings". Inside, there is a "Wake mode" dropdown menu set to "Wake up triggered by ignition pin". Below this, there is a section "Wake when ignition pin goes" with two radio button options: "Low" and "High". The "High" option is selected, indicated by a green dot.

Figure 162 – Wake up triggered by ignition pin

Use the Wake up when ignition pin goes setting to select Low or High. By default, this is set to High.

Wake up at scheduled time

When this mode is selected, the router wakes up at the time specified in the Schedule wake up at field, regardless of the state of the ignition pin. Enter the time in 24 hour format without the semi-colon.

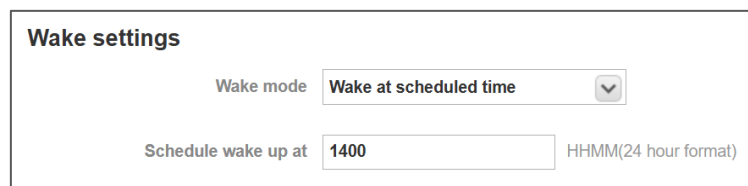

The screenshot shows a configuration box titled "Wake settings". Inside, there is a "Wake mode" dropdown menu set to "Wake at scheduled time". Below this, there is a section "Schedule wake up at" with a text input field containing "1400" and a label "HHMM(24 hour format)".

Figure 163 – Wake up at scheduled time

Event notification

The event notification feature is an advanced remote monitoring tool providing you with the ability to send alerts via SMS, e-mail, TCP or UDP when pre-defined system events occur.

Notification configuration

The Notification configuration screen is used to select the event types, methods of notification and the destinations for the notifications. Up to four types of alerts for a particular event may be sent to a single destination profile containing the contact details.

To access the Event notification configuration page, click the Services menu item, select the Event configuration menu item on the left, then select the Notification configuration menu item.

Event notification configuration

Enable event notification ☒

Maximum event buffer size (5-50)

Maximum retry count (1-20)

Event notification log file

Unit ID

Event description	Event ID	Email	TCP	UDP	SMS	Command	Destination profile	Filter
Unit powered up	1	☐	☐	☐	☐	☐	Default	v
Unit rebooted	2	☐	☐	☐	☐	☐	Default	v
Link status change	3	☐	☐	☐	☐	☐	Default	v
WWAN IP address change	4	☐	☐	☐	☐	☐	Default	v
WWAN Registration change	5	☐	☐	☐	☐	☐	Default	v
WWAN Cell ID change	6	☐	☐	☐	☐	☐	Default	v
WWAN technology change	7	☐	☐	☐	☐	☐	Default	v
Number of connected Ethernet interfaces change	8	☐	☐	☐	☐	☐	Default	v
Login status	10	☐	☐	☐	☐	☐	Default	v
WAN failover instance occurred	12	☐	☐	☐	☐	☐	Default	v
Digital input change	15	☐	☐	☐	☐	☐	Default	v Configure
Analog input threshold	16	☐	☐	☐	☐	☐	Default	v Configure
Digital output change	17	☐	☐	☐	☐	☐	Default	v Configure
FOTA/DOTA status	20	☐	☐	☐	☐	☐	Default	v
Hardware reset settings change	21	☐	☐	☐	☐	☐	Default	v
VRRP mode change	22	☐	☐	☐	☐	☐	Default	v
USB OTG status change	23	☐	☐	☐	☐	☐	Default	v
GPS GEOFENCE status change	24	☐	☐	☐	☐	☐	Default	v

Figure 164 – Event notification configuration

Item	Description
Enable event notification	Toggles the event notification feature on and off.
Maximum event buffer size	Specifies the buffer size for event notifications which failed to be delivered or are yet to be sent. The minimum size is 100 and the maximum is 10000.
Maximum retry count	Specifies the maximum number of attempts that the router will make to deliver an event notification. The range is between 1 and 20.
Event notification log file	Specifies to the location and name of the file used to log the event notification activity.
Unit ID	The Unit ID field is used to specify an identifier for the router which are sent in the event notifications so that you know which router has an event.

Table 51 – Event notification configuration options

Event types

There are twenty-one events for which you can configure alerts. Hovering the mouse over the event description provides more details of event notification type.

Event	Event ID	Description	Example message
Unit powered up	1	Notification is sent when the unit is powered up through connection of a power source or after a soft-reset.	Power is up
Unit rebooted	2	Notification is sent when the unit is rebooted via Web UI, SMS diagnostics or via command line/telnet session.	Rebooting triggered by internal application
Link status change	3	Notification is sent if the status of the data connection profile or any IPSec/OpenVPN/PPTP/GRE tunnel endpoint changes i.e. the link goes up or down.	Profile 1 WWAN status changed : down --> up
WWAN IP address change	4	Notification is sent if an active data connection profile's WWAN IP address changes.	WWAN IP address changed : N/A --> 10.103.4.149
WWAN Registration change	5	Notification is sent if the network registration status changed between "registered", "unregistered" or "roaming".	WWAN registration status changed : Not registered --> Registered to home network
WWAN Cell ID change	6	Notification is sent if the router connects to a different cell, marked by a changed in the Cell ID.	Cell ID changed : --> 15224145 Cell ID changed : 15224148 --> 15224145
WWAN technology change	7	Notification is sent if the router connects to a different network technology, e.g. 3G/2G.	WWAN network changed : N/A() --> 3G(UMTS) WWAN network changed : 3G(UMTS) --> 2G(GSM)
Number of connected Ethernet interfaces change	8	Notification is sent if there is a change to the number of directly connected Ethernet interfaces.	Ethernet device number changed : 0 --> 1

Event	Event ID	Description	Example message
Login status	10	Notification is sent if there was a failure to log in to the router via the Web UI.	WEBUI login failed, username root, password
WAN failover instance occurred	12	Notification is sent if a failover between WAN interfaces occurs.	Failover instance occurred: N/A --> wwan.0 Failover instance occurred: eth.0 --> wwan.0
Digital input change	15	Notification is sent if an IO pin configured as a digital input goes high or low for a specified period.	IO pin 1 now high IO pin 2 now low
Analogue input threshold	16	Notification is sent if an IO pin configured as an analogue output goes high or low for a specified period.	IO pin 1 now high IO pin 2 now low
Digital output change	17	Notification is sent if an IO pin configured as a digital output goes high or low for a specified period.	IO pin 1 now high IO pin 2 now low
FOTA/DOTA status	20	Notification is sent with the result of the Firmware Over-The-Air via SMS or TR-069.	FOTA/DOTA: upgrading firmware successful
Hardware reset settings change	21	Notification is sent when the reset button is enabled or disabled in the web user interface.	Reset button is enabled
VRRP mode change	22	Notification is sent if a device configured as a backup becomes a primary router or returns to backup status.	VRRP is in backup mode
USB OTG status change	23	When a USB device is connected.	USB OTG status changed: disabled → connected
GPS GEOFENCE status change	24	Notification is sent based on the Geofence settings.	GPS GEOFENCE status changed(latitude: -33.807242, longitude: 151.148293, radius 15 km): out → in

Table 52 – Event notification – event types

Destinations

A “destination” is a profile on the router containing the contact details of a recipient of event notification alerts i.e. the e-mail address, SMS number, TCP or UDP server addresses of the recipient. The destination profile must contain the details of at least one destination type in order to be used.

Configuring Event notification

To configure the event notification feature:

- 1 Click the Services menu item at the top of the screen. From the Event notification menu on the left of the screen, select the Destination configuration menu item.
- 2 Click the +Add button at the top right corner of the window. The Event destination edit screen is displayed.
- 3 In the Destination name field enter a name for the destination profile then enter the contact details for each type of destination i.e. Email address, TCP address and port, UDP address and port and/or SMS number.
- 4 Click the Save button when you have entered the required details.

- 5 From the Event notification menu on the left of the screen, select the Notification configuration menu item.
- 6 Select the Enable event notification toggle key to turn it to the ON position.
- 7 If desired, set the Maximum event buffer size, Maximum retry count, Event notification log file and Event notification prefix fields. See table 29 for descriptions of these options.
- 8 From the Destination profile column, use the drop-down menus to select the desired destination profiles to use for the corresponding events, then select the checkboxes for the types of notifications to send to the chosen destination profile. If the Destination profile does not contain the required contact details, a pop-up warns you to enter the required details in the Destination profile.
- 9 Click the Save button.



Note – If you have selected the Email notification type for any of the events, you must also configure Email client settings to allow the router to send e-mail messages.

Destination configuration

The Destination configuration screen displays a list of the destination “profiles” that have been configured on the device as well as providing the option to add new profiles.

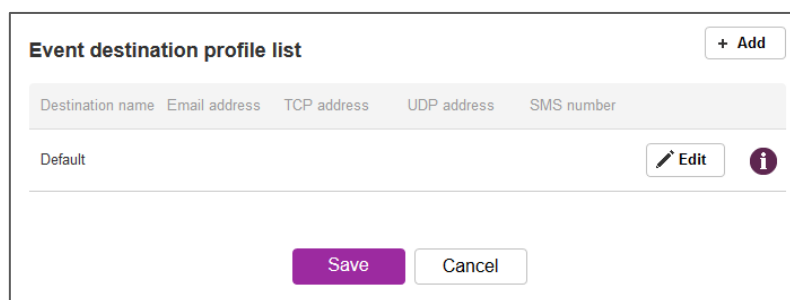


Figure 165 – Event destination list

To add a new destination profile:

- 1 Click the +Add button at the top right corner of the window. The Event destination profile edit screen is displayed.
- 2 In the Destination name field enter a name for the destination profile.
- 3 Then for each destination enter the contact details relevant to that destination type i.e.: Email address, TCP address and port, UDP address and port and/or SMS number.
- 4 In addition to entering details for specific destination types, you can also add a custom command to perform certain tasks when an event is triggered. Any command or script that can be executed from a terminal command prompt, including any executable and parameters, can be entered in the Custom Command field.
- 5 Click the Save button when you have entered the required details.

To edit a destination profile:

- 1 From the Event destination list, click the edit button for the corresponding destination profile. The Event destination edit page is displayed. Make the required changes.
- 2 Click the Save button.


To delete a destination profile:

- 1 From the Event destination list, select the delete button for the corresponding destination profile that you would like to delete. If the destination profile is linked to an event notification type, the **i** button is displayed instead of the delete button. In this case, you must go to the Notification configuration screen and remove the check marks from all the notification types for each event for which the destination profile is configured. When you have done that, return to the Event destination list and select the delete button.
- 2 Click the Save button.

Email settings

The Email settings screen allows the configuration of the email account that is used to send emails in features such as Event notification.

To access the Email settings page, click the Services menu item then select the Email settings menu item on the left.

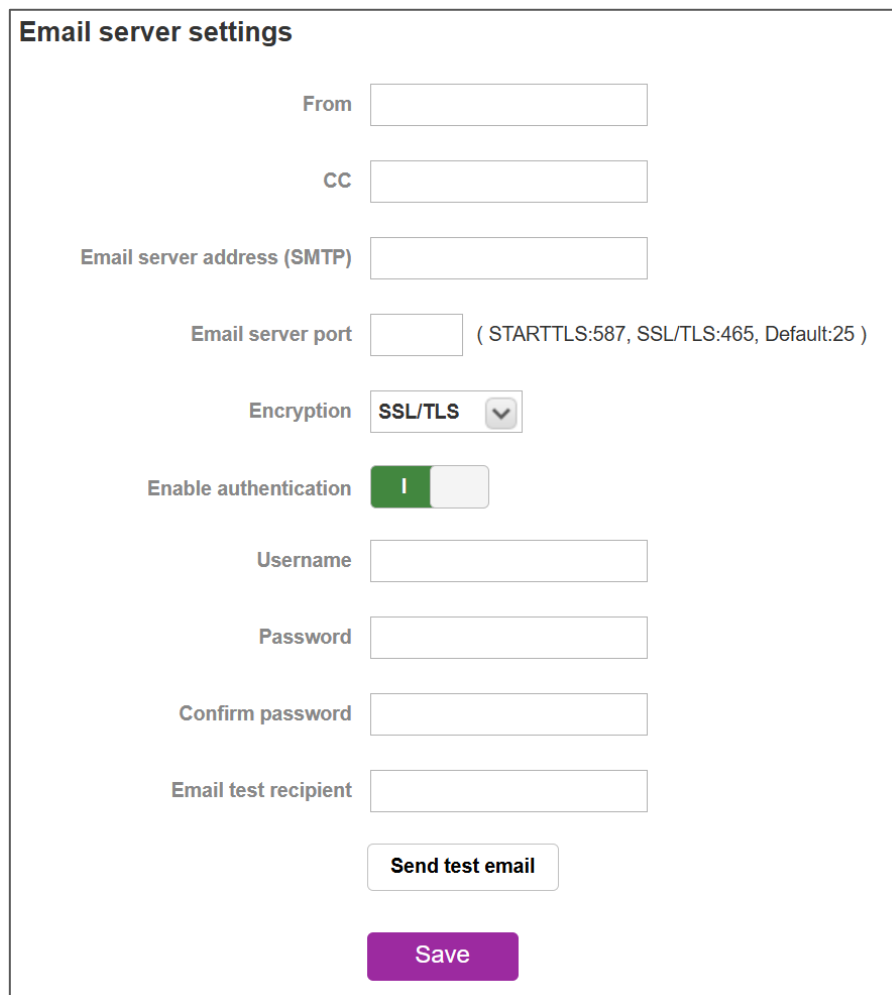

The screenshot shows the 'Email server settings' form. It contains the following fields and controls:

- From:** Text input field.
- CC:** Text input field.
- Email server address (SMTP):** Text input field.
- Email server port:** Text input field with a hint: (STARTTLS:587, SSL/TLS:465, Default:25).
- Encryption:** Dropdown menu with 'SSL/TLS' selected.
- Enable authentication:** Toggle switch, currently turned on (green).
- Username:** Text input field.
- Password:** Text input field.
- Confirm password:** Text input field.
- Email test recipient:** Text input field.
- Send test email:** Button.
- Save:** Button.

Figure 166 – Email client settings

Item	Description
From	Enter the email address of the account you will be using to send emails.
CC	(Optional) Enter an email address which will be copied on all messages sent.
Email server address (SMTP)	Enter the SMTP server address of the email server. This may be an IP address or a hostname.
Email server port	Enter the Email server's SMTP port.
Encryption	Choose from SSL or STARTTLS encryption methods or select None to use no encryption. The main point of difference between SSL and STARTTLS is that SSL opens a secure connection first, and then begins the SMTP transaction. STARTTLS starts the SMTP transaction and then looks for support for TLS in the response message.
Username	Enter the username of the account to be used for sending emails.
Password	Enter the password of the account to be used for sending emails.
Confirm password	Enter the password of the account to be used for sending emails once more for confirmation.
Email test recipient	Enter an email address to send a test message to, then click the Send test email button.

Table 53 – Email client settings

SMS messaging

The Vodafone MachineLink 4G Lite router offers an advanced SMS feature set, including sending messages, receiving messages, redirecting incoming messages to another destination, as well as supporting remote commands and diagnostics messages.

Some of the functions supported include:

- Ability to send a text message via a cellular network and store it in permanent storage.
- Ability to receive a text message via a cellular network and store it in permanent storage.
- Ability to forward incoming text messages via a cellular network to another remote destination which may be a TCP/UDP server or other mobile devices.
- Ability to receive run-time variables from the device (e.g. uptime) on request via SMS
- Ability to change live configuration on the device (e.g. network username) via SMS.
- Ability to execute supported commands (e.g. reboot) via SMS
- Ability to trigger the Vodafone MachineLink 4G Lite router to download and install a firmware upgrade
- Ability to trigger the Vodafone MachineLink 4G Lite router to download and apply a configuration file

To access the SMS messaging functions of the Vodafone MachineLink 4G Lite router, click on the Services menu item from the top menu bar, and then select one of the options under the SMS messaging section on the left hand menu.

Setup

The Setup page provides the options to enable or disable the SMS messaging functionality and SMS forwarding functionalities of the router. SMS messaging is enabled by default.

General SMS configuration

SMS messaging ☒

Messages per page (10-50)

Encoding scheme ☒ GSM 7-bit ☐ UCS-2

SMSC address

SMS forwarding configuration

Forwarding ☒

Redirect to mobile

TCP server address

TCP port (1-65535)

UDP server address

UDP port (1-65535)

Figure 167 – General SMS Configuration

Option	Definition
General SMS configuration	
SMS messaging	Toggles the SMS functionality of the router on and off.
Messages per page (10-50)	The number of SMS messages to display per page. Must be a value between 10 and 50.
Encoding scheme	The encoding method used for outbound SMS messages. GSM 7-bit mode permits up to 160 characters per message but drops to 50 characters if the message includes special characters. UCS-2 mode allows the sending of Unicode characters and permits a message to be up to 50 characters in length.
SMS forwarding configuration	
Forwarding	Toggles the SMS forwarding function of the router on and off.
Redirect to mobile	Enter a mobile number as the destination for forwarded SMS messages.
TCP server address	Enter an IP address or domain name as the destination for forwarded SMS messages using TCP.

Option	Definition
TCP port	The TCP port on which to connect to the remote destination.
UDP server address	Enter an IP address or domain name as the destination for forwarded SMS messages using UDP.
UDP port	The UDP port on which to connect to the remote destination.

Table 54 – SMS Setup Settings

SMS forwarding configuration

Incoming text messages can be redirected to another mobile device and/or a TCP/UDP message server.

Redirect to mobile

You can forward incoming text messages to a different destination number. This destination number can be another mobile phone or a router phone number.

For Example:

If someone sends a text message and Redirect to mobile is set to “+61412345678”, the text message is stored on the router and forwarded to “+61412345678” at the same time.

To disable redirection to a mobile, clear the Redirect to mobile field and click the Save button.

Redirect to TCP / UDP server address

You can also forward incoming text messages to a TCP/UDP based destination. The TCP or UDP server can be any kind of public or private server if the server accepts incoming text-based messages.

The TCP/UDP address can be an IP address or domain name. The port number range is from 1 to 65535. Please refer to your TCP/UDP based SMS server configuration for which port to use.

For Example:

If someone sends a text message and TCP server address is set to “192.168.20.3” and TCP port is set to “2002”, this text message is stored in the router and forwarded to “192.168.20.3” on port “2002” at the same time.

To disable redirection to a TCP or UDP address, clear the TCP server address and UDP server address fields and click the Save button.

New message

The New message page can be used to send SMS text messages to a single or multiple recipients. To access the New message page, click on the Services menu item from the top menu bar, select the SMS messaging menu on the left then select the New message menu item.

A new SMS message can be sent to a maximum of 9 recipients at the same time. After sending the message, the result is displayed next to the destination number as “Success” or “Failure” if the message failed to send. By default, only one destination number field

is displayed. Additional destination numbers may be added one at a time after entering a valid number for the current destination number field. To add a destination number, click the  button and to remove the last destination in the list, click the  button.

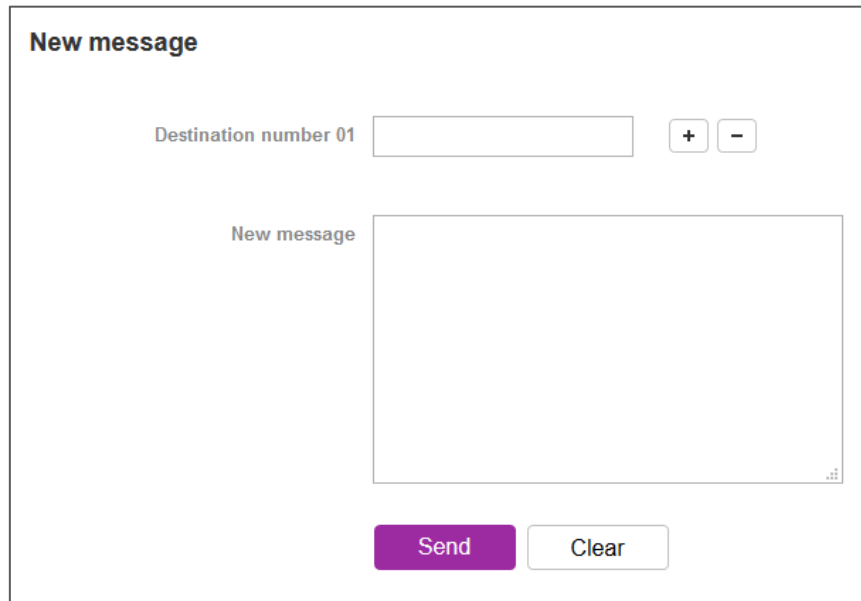


Figure 168 – SMS – New Message

Destination numbers should begin with the “+” symbol followed by the country calling code. To send a message to a destination number, enter the “+” symbol followed by the country calling code and then the destination number.

For example:

To send a message to the mobile destination number 0412345678 in Australia (country calling code 61), enter “+61412345678”.

After entering the required recipient numbers, type your SMS message in the New message field. As you type your message, a counter shows how many characters you have entered out of the total number available for your chosen encoding scheme. When you have finished typing your message and you are ready to send it, click the Send button.

Inbox / Sent Items

The Inbox displays all received messages that are stored on the router while Sent Items displays all sent messages. To access the Inbox page, click on the Services menu item from the top menu bar, select the SMS messaging menu on the left then select the Inbox menu item.

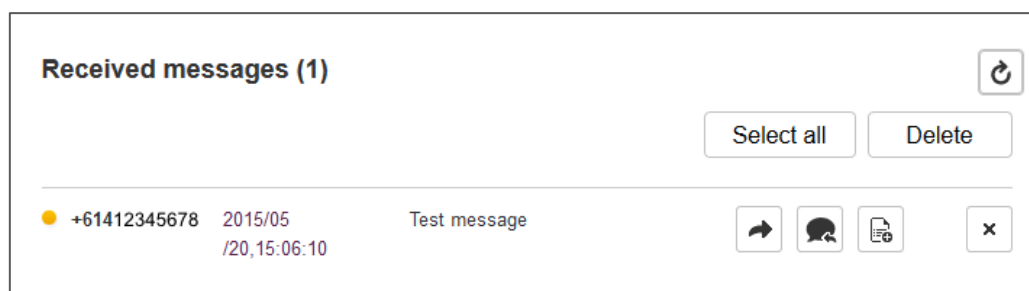


Figure 169 – SMS Inbox

To access the Sent items page, click on the Services menu item from the top menu bar, select the SMS messaging menu on the left then select the Sent items menu item.

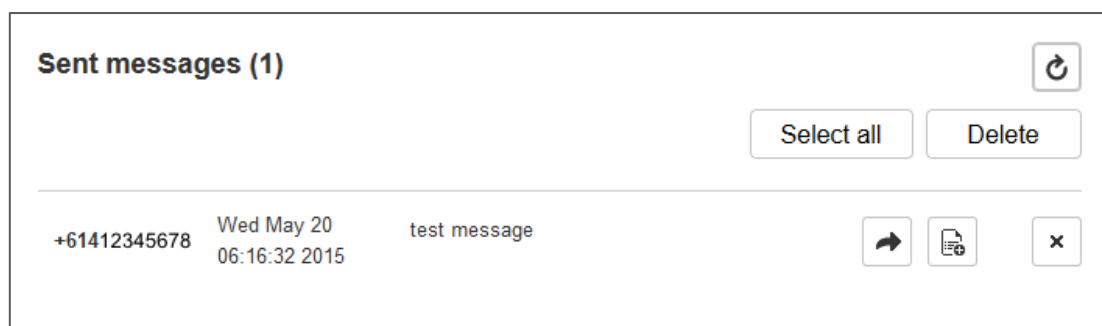


Figure 170 – SMS Outbox

Icon	Name	Description
	Forward	Click this button to open a new message window where you can forward the corresponding message to another recipient.
	Reply	Click this button to open a new message window where you can reply to the sender.
	Add to the allow list	Click this button to add the sender's mobile number to the allow list on the router.
	Delete	Click this button to delete the corresponding message.
	Refresh	Click this button to refresh the inbox or outbox to see new messages.

Table 55 – Inbox/Outbox icons

Diagnostics

The Diagnostics page is used to configure the SMS diagnostics and command execution configuration. This allows you to change the configuration, perform functions remotely and check on the status of the router via SMS commands.

To access the Diagnostics page, click on the Services menu item then select the SMS menu on the left and finally select Diagnostics beneath it.

SMS diagnostics and command execution configuration

Enable remote diagnostics and command execution ☒

Only accept authenticated SMS messages ☒

Send Set command acknowledgement replies ☐ 0

Access advanced RDB variables ☒

Allow execution of advanced commands ☒

Send acknowledgement replies to ☐ a fixed number ☒ the sender's number

Send command error replies ☒

Send error replies to ☐ a fixed number ☒ the sender's number

Send a maximum number of replies per
0 / 100 messages sent

Limit the number of diagnostic text messages that can be sent in a designated time period. Currently, the 'messages sent' count automatically resets at the end of the designated time period. For example, it will reset to zero at 01:00, 02:00, 03:00 etc for 'hour', 00:00 for 'day', 00:00 on Monday for 'week' and the first day of the month for 'month', or at anytime the unit reboots.

White list for diagnostic or execution SMS

All incoming diagnostic or execution text messages are checked against this white list. If the message sender and password don't match any destination numbers and passwords in this white list, the message is ignored and an error message reply is sent to the sender or to a predefined destination. You can add up to 16 destination numbers via the SMS inbox/sent items pages by clicking on 'Add white list'. Alternatively, click on 'Add' below to add a number now.

#	Destination number	Password	
01	310000214		x
02	310000202		x
03	8823993560000		x
04	8823903560000		x

Figure 171 – SMS diagnostics and command execution configuration

SMS diagnostics and command execution configuration

The options on this page are described below.

Enable remote diagnostics and command execution

Enables or disables the remote diagnostics feature. If this setting is enabled all incoming text messages are parsed and tested for remote diagnostics commands.

If remote diagnostics commands are found, the router executes those commands. This feature is enabled by default. All remote diagnostic commands that are received are stored in the Inbox.



Note – It is possible to adjust settings and prevent your router from functioning correctly using remote diagnostics. If this occurs, you will need to perform a factory reset to restore normal operation.



We highly recommended that you use the allow list and a password when utilising this feature to prevent unauthorised access. See the allow list description for more information.

Only accept authenticated SMS messages

Enables or disables checking the sender's phone number against the allow list for incoming diagnostics and command execution SMS messages.

If authentication is enabled, the router will check if the sender's number exists in the allow list. If it exists, the router then checks the password (if configured) in the incoming message against the password in the allow list for the corresponding sending number. If they match, the diagnostic or command is executed.

If the number does not exist in the allow list or the password does not match, the router does not execute the incoming diagnostic or command in the SMS message.

This is enabled by default and it is strongly advised that you leave this feature enabled to maintain security.

Send Set command acknowledgement replies

The Vodafone MachineLink 4G Lite router will automatically reply to certain types of commands received, such as get commands, or execute commands. However acknowledgement replies from the Vodafone MachineLink 4G Lite router are optional with set commands and the Wakeup command. This option Enables or disables sending an acknowledgment message after execution of a set command or SMS Wakeup command. If disabled, the router does not send any acknowledgement after execution of a set command or SMS Wakeup command. All acknowledgment replies are stored in the Outbox after they have been sent. This can be useful to determine if a command was received and executed by the router. This option is disabled by default.

Access advanced RDB variables

By default, this option is turned on and allows access to the full list of RDB variables via SMS. When it is turned off, you are only allowed access to the basic RDB variables listed later in this guide.

Allow execution of advanced commands

By default, this option is turned on and allows execution of advanced commands such as those which are common to the Linux command line. For example: "execute ls /usr/bin/sms*" to list the contents of the /etc folder on the router.

When it is turned off you are only allowed to execute the basic commands listed later in this guide.

Send acknowledgement replies to

This option allows you to specify where to send acknowledgment messages after the execution of a set, get, or exec command.

If a fixed number is selected, the acknowledgement message will be sent to the number defined in the Fixed number to send replies to field. If the sender's number is selected, the acknowledgement message will be sent to the number that the SMS diagnostic or command message originated from. The default setting is to use the sender's number.

Fixed number to send replies to

This field defines the destination number to which error messages are sent after the execution of a get, set, or exec command. This field is only displayed when Send Error SMS to is set to Fixed Number.

Send command error replies

Enables or disables the sending of an error message resulting from the execution of a get, set, or exec command. All error replies are stored in the Outbox after they have been sent.

Send error replies to

When Send command error replies is set to ON, this option is used to specify where the error SMS is sent. Use the radio buttons to select either a fixed number or the sender's number. When set to the sender's number the router will reply to the originating number of the SMS diagnostic or command. When set to a fixed number the router will send the error messages to the number specified in the following field.


Send a maximum number of

You can set the maximum number of acknowledgement and error messages sent when an SMS diagnostic or command is executed. The maximum limit can be set per hour, day, week or month. The router will send a maximum of 100 replies per day by default.

The number of messages sent is shown below the options. The total transmitted message count resets after a reboot or at the beginning of the time frame specified.

Allow list for diagnostic or execution SMS

The allow list is a list of mobile numbers that you can create which are considered “friendly” to the router. If ‘Only accept authenticated SMS messages’ is enabled in the diagnostics section, the router will compare the mobile number of all incoming diagnostic and command messages against this allow list to determine whether the diagnostic or command should be executed. You must configure a password for each number added to the allow list to give an additional level of security. Only the four GDSP reserved entries are exempt from having a password configured.

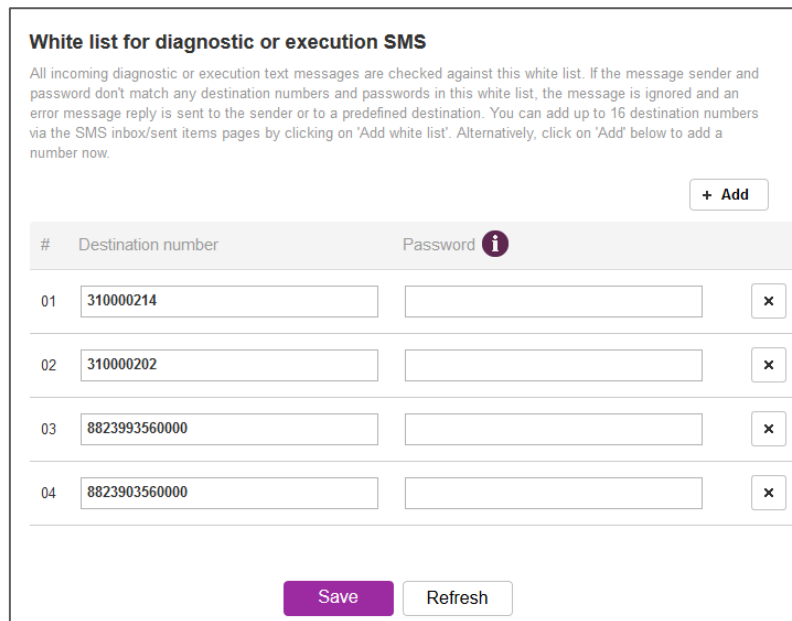

White list for diagnostic or execution SMS

All incoming diagnostic or execution text messages are checked against this white list. If the message sender and password don't match any destination numbers and passwords in this white list, the message is ignored and an error message reply is sent to the sender or to a predefined destination. You can add up to 16 destination numbers via the SMS inbox/sent items pages by clicking on 'Add white list'. Alternatively, click on 'Add' below to add a number now.


+ Add

#	Destination number	Password 	
01	310000214		X
02	310000202		X
03	8823993560000		X
04	8823903560000		X

Save Refresh

Figure 172 – Allow list for diagnostic or execution SMS

Up to 20 numbers may be stored in the allow list, however, when using a Vodafone GDSP SIM, 4 entries are reserved for system numbers and may not be removed. To add a number to the allow list, click the “+Add” button.

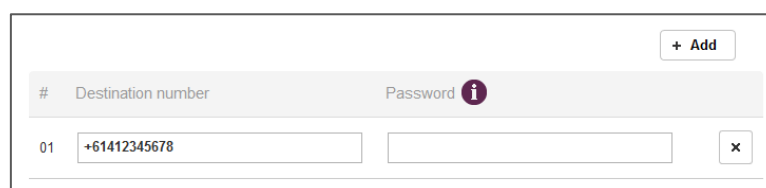

+ Add

#	Destination number	Password 	
01	+61412345678		X

Figure 173 – Adding a number to the SMS allow list

The allow list numbers and passwords can be cleared by pressing the  button to the right of each entry. To add a number to the allow list, enter it in the Destination number field and define a password in the Password field. The SMS allow list password must meet the following criteria for a strong password:

- Be a minimum of eight characters and no more than 128 characters in length.
- Contain at least one upper case, one lower case character and one number.
- Contain at least one of the following special characters: !*()?/

When you have finished adding numbers click the Save button to save the entries.

Sending an SMS Diagnostic Command

Follow the steps below to configure the router to optionally accept SMS diagnostic commands only from authenticated senders and learn how to send SMS diagnostic commands to the router.

- 1 Navigate to the Services > SMS messaging > Diagnostics page
- 2 Confirm that the Enable remote diagnostics and command execution toggle key is set to the ON position. If it is set to OFF click the toggle key to switch it to the ON position.
- 3 If you wish to have the router only accept commands from authenticated senders, ensure that Only accept authenticated SMS messages is set to the ON position. In the allow list for diagnostic or execution SMS messages section, click the +Add button and enter the sender's number in international format into the Destination number field that appears. You must enter a password in the Password field corresponding to the destination number.
- 4 If you would prefer to accept SMS diagnostic commands from any sender, set the Only accept authenticated SMS messages toggle key to the OFF position.



Note – An alternative method of adding a number to the allow list is to send an SMS message to the router, navigate to Services >

SMS messaging > Inbox and then click the  button next to the message which corresponds to the sender's number.

You will then need to set a Password in the allow list for diagnostic execution SMS list.

- 5 Click the Save button.

Types of SMS diagnostic commands

There are three types of commands that can be sent; execute, get and set. The basic syntax is as follows:

- execute COMMAND
- get VARIABLE
- set VARIABLE=VALUE

If authentication is enabled, each command must be preceded by the password:

- PASSWORD execute COMMAND
- PASSWORD get VARIABLE
- PASSWORD set VARIABLE=VALUE

The following are some examples of SMS diagnostic commands:

- password6657 execute reboot
- get rssi
- set apn1=testAPNvalue

SMS acknowledgment replies

The router automatically replies to get commands with a value and execute commands with either a success or error response. Set commands will only be responded to if the Send Set command acknowledgement replies toggle key is set to ON. If the Send command error replies toggle key is set to ON, the router will send a reply if the command is correct but a variable or value is incorrect, for example, due to misspelling.

SMS command format

Generic Format for reading variables:

```
get VARIABLE
PASSWORD get VARIABLE
```

Generic Format for writing to variables:

```
set VARIABLE=VALUE
PASSWORD set VARIABLE=VALUE
```

Generic Format for executing a command:

```
Execute COMMAND
PASSWORD execute COMMAND
```

Replies

Upon receipt of a successfully formatted, authenticated (if required) command, the gateway will reply to the SMS in the following format:

Type	SMS Contents	Notes
get command	"VARIABLE=VALUE"	
set command	"Successfully set VARIABLE to VALUE"	Only sent if the acknowledgment message function is enabled
execute command	"Successfully executed command COMMAND"	

Table 56 – SMS Diagnostic Command Syntax

Where "VARIABLE" is the name of the value to be read

Where "VARIABLE (x)" is the name of another value to be read

Where "VALUE" is the content to be written to the "VARIABLE"

Where "COMMAND" is a supported command to be executed by the device (e.g. reboot)

Where "PASSWORD" is the password (if configured) for the corresponding sender number specified in the allow List

Multiple commands can be sent in the same message, if separated by a semicolon.

For Example:

```
get VARIABLE1; get VARIABLE2; get VARIABLE3
PASSWORD get VARIABLE1; get VARIABLE2
set VARIABLE=VALUE1 ; set VARIABLE2=VALUE2
```

PASSWORD set VARIABLE1=VALUE1; set VARIABLE2=VALUE2; set VARIABLE3=VALUE3

If required, values can also be bound by an apostrophe, double apostrophe or back tick.

For Example:

```
“set VARIABLE=’VALUE’”
“set VARIABLE=”VALUE””
“set VARIABLE=`VALUE`”
“get VARIABLE”
```

A password (if required), only needs to be specified once per SMS, but can be prefixed to each command if desired.

“PASSWORD get Variable1”; “get VARIABLE2”

“PASSWORD set VARIABLE1=VALUE1”; “set VARIABLE2=VALUE2”

If the command sent includes the “reboot” command and has already passed the allow list password check, the device keeps this password and executes the remaining command line after the reboot with this same password.

For Example:

```
“PASSWORD execute reboot; getVariable1”; “get VARIABLE2”
“PASSWORD execute reboot; PASSWORD get Variable1”; “get VARIABLE2”
```



Note – Commands, variables and values are case sensitive.

List of basic commands

A list of basic commands which can be used in conjunction with the execute command are listed below:

“pdpcycle”, “pdpdown” and “pdpup” commands can have a profile number suffix ‘x’ added. Without the suffix specified, the command operates against the default profile configured on the profile list page of the Web-UI.

Item		Definition
1	reboot	Immediately performs a soft reboot.
2	pdpcycle	Disconnects (if connected) and reconnects the data connection. If a profile number is selected in the command, try to disconnect/reconnect the specified profile in case the profile is active. If no profile number is selected, try to disconnect/reconnect the current active profile. Reports an error if no profile number is selected and there is no currently activated profile.
3	pdpdown	Disconnects the PDP. If a profile number is selected in the command, the router tries to disconnect the specified profile in case the profile is active. If no profile number is selected, try to disconnect the current active profile. Reports an error if no profile number is selected and there is no currently activated profile.
4	pdpup	Reconnects the PDP. If a profile number is selected in the command, the router tries to connect with the specified profile. If no profile number is selected, the router tries to connect to the last active profile. The gateway will check the currently activated profile and disconnect this profile before executing the command. The router reports an error if no profile number is selected and there is no stored last active profile number.
5	factorydefaults	Performs a factory reset on the router. Be aware that this command also clears the SMS allow list on the router.

Item		Definition
6	download	Performs a download and install of a Firmware Upgrade (.cdi), Config File (.tar.gz) or a help document (.pdf) file. If the file is a firmware image as in the case of a .cdi file, the router will apply the recovery image first and then the main firmware image. The download location is specified immediately after the command and may be from an HTTP or FTP source URL. If the file is a .cdi file, the router will apply the file as a configuration file update for the device and reboot afterwards. If the file is a .pdf, the router will assume this is a user guide document and save it to the router and make the file available for viewing via the help menu on the Web-UI. Note: If your download URL includes any space characters, please encode these prior to transmission according to RFC1738, for example: ftp://username:password@serveraddress/directory%20with%20spaces/filename.cdi Note: Authenticated FTP addresses may be used following the format as defined in RFC1738, for example: ftp://username:password@serveraddress/directory/filename.cdi
7	codconnect	Causes the router to activate the PDP context when the Connect on demand feature is enabled.
8	coddconnect	Causes the router to de-activate the PDP context when the Connect on demand feature is enabled.
10	ssh.genkeys	Instructs the router to generate new public SSH keys.
11	ssh.clearkeys	Instructs the router to clear the client public SSH key files.

Table 57 – List of basic SMS diagnostic commands

List of get/set commands

The following table is a partial list of get and set commands which may be performed via SMS.

Command name	Example	Description
get status	get status	Returns the Module firmware version, LAN IP Address, Network State, Network operator and Signal strength.
get sessionhistory	get sessionhistory	Returns the time and date of recent sessions along with the total amount of data sent and received for each session.
set syslogserver	set syslogserver=123.45.67.89:514	Sets a remote syslog server IP or hostname and port.
set cod	set cod=1	Enables or disables Connect on demand.
get cod	get cod	Returns the enable/disable status of the Connect on demand feature.
get codstatus	get codstatus	Returns the connection status of the Connect on demand feature.

Command name	Example	Description
set coddialport	set coddialport=on,53	Sets the Connect on demand feature to connect only when traffic is received on the specified port.
get coddialport	get coddialport	Returns the Connect on demand port filter status and list of filtered ports.
set codonline	set codonline=20	Sets the router to stay online for at least X minutes when data activity is detected.
get codonline	get codonline	Returns the number of minutes the router is configured to stay online when data activity is detected.
set codminonline	set codminonline=10	Sets the router to stay online for a minimum of X minutes after connecting.
get codminonline	get codminonline	Returns the minimum number of minutes the router should stay online after connecting.
set codredial	set codredial=5	Sets the number of minutes that the router should not attempt to redial after hanging up.
get codredial	get codredial	Returns the number of minutes that the router is configured to not attempt to redial after hanging up.
set coddisconnect	set coddisconnect=0	Sets the number of minutes after which the router should disconnect regardless of traffic.
get coddisconnect	get coddisconnect	Returns the number of minutes the router is configured to disconnect regardless of traffic.
set codconnectreg	set codconnectreg=30	Sets the number of minutes that the router should regularly attempt to connect.
get codconnectreg	get codconnectreg	Returns the number of minutes that the router is configured to regularly attempt to connect.
set codrandomtime	set codrandomtime=3	Sets the number of minutes that the router should randomise the dial time by.
get codrandomtime	get codrandomtime	Returns the number of minutes that the router is configured to randomise the dial time by.
set codverbose	set codverbose=1	Sets verbose logging on or off.
get codverbose	get codverbose	Returns the status of verbose logging.

Command name	Example	Description
set codignore.icmp	set codignore.icmp=1	Sets the router to ignore ICMP packets triggering data activity detection.
get codignore.icmp	get codignore.icmp	Returns the status of the Ignore ICMP option.
set codignore.tcp	set codignore.tcp=1	Sets the router to ignore TCP packets triggering data activity detection.
get codignore.tcp	get codignore.tcp	Returns the status of the Ignore TCP option.
set codignore.udp	set codignore.udp=1	Sets the router to ignore UDP packets triggering data activity detection.
get codignore.udp	get codignore.udp	Returns the status of the Ignore UDP option.
set codignore.dns	set codignore.dns=1	Sets the router to ignore DNS traffic triggering data activity detection.
get codignore.dns	get codignore.dns	Returns the status of the Ignore DNS option.
set codignore.ntp	set codignore.ntp=1	Sets the router to ignore NTP traffic triggering data activity detection.
get codignore.ntp	get codignore.ntp	Returns the status of the Ignore NTP option.
set codignore.ncsi	set codignore.ncsi=1	Sets the router to ignore NCSI traffic triggering data activity detection.
get codignore.ncsi	get codignore.ncsi	Returns the status of the Ignore NCSI option.
get plmnsan	get plmnsan	Instructs the router to perform a network scan and returns the results by SMS.
set forceplmn	set forceplmn=505,3	Sets the operator to a manual selection made by the user where "505" is the Mobile Country Code for Australia and "3" is the Mobile Network Code for Vodafone. As no network type (e.g.. LTE/3G/2G) is specified, it is selected automatically.
get forceplmn	get forceplmn	Returns the operator and network type selection mode (Automatic/Manual), in addition to the MCC and MNC values
get pppoe	get pppoe	Returns the PPPoE status, currently configured dial string and service name
set pppoe	set pppoe=1,1,1, test	Sets PPPoE on, debug logging on, Forward WAN IP on, and service name to "test".

Command name	Example	Description
get ledmode	get ledmode	Returns the status of the LED operation mode.
set ledmode	set ledmode=10	Sets the LED operation mode to be always on or to turn off after the specified number of minutes.
get ssh.proto	get ssh.proto	Returns the SSH protocol in use.
set ssh.proto	set ssh.proto=1,2	Sets the SSH Protocol to protocol 1, 2 or both (1,2).
get ssh.passauth	get ssh.passauth	Returns the status of the SSH Enable password authentication option.
set ssh.passauth	set ssh.passauth=1	Sets the SSH Enable password authentication option on or off.
get ssh.keyauth	get ssh.keyauth	Returns the status of the SSH Enable key authentication option.
set ssh.keyauth	set ssh.keyauth=1	Sets the SSH Enable key authentication option on or off.
get download.timeout	get download.timeout	Returns the time in minutes that the router waits before a download times out.
set download.timeout	set download.timeout=20	Sets the time in minutes that the router waits before a download times out. This is set to 10 minutes by default. Supported range is 10 – 1440 minutes.
get install.timeout	get install.timeout	Returns the time in minutes that the router waits before a file that is being installed times out.
set install.timeout	set install.timeout=5	Sets the time in minutes that the router waits before a file that is being installed times out. This is set to 3 minutes by default. Supported range is 3 – 300 minutes.
get sw.version	get sw.version	Returns the software version of the router.

Table 58 – List of get/set commands

List of basic RDB variables

The following table lists valid variables where “x” is a profile number (1-6). If no profile is specified, variables are read from or written to for the current active profile. If a profile is specified, variables are read from or written to for the specified profile number ('x').

#	RDB variable name	SMS variable name	Read/Write	Description	Example VALUE
0	link.profile.1.enable link.profile.1.apn link.profile.1.user link.profile.1.pass link.profile.1.auth_type link.profile.1.iplocal link.profile.1.status	profile	RW	Profile	Read: (profile no,apn,user,pass,auth,iplocal,status) 1,apn,username,password, chap,202.44.185.111,up Write: (apn, user, pass,auth) apn,username,password
2	link.profile.1.user	username	RW	Cellular broadband username	Guest, could also return "null"
3	link.profile.1.pass	password	RW	Cellular broadband password	Guest, could also return "null"
4	link.profile.1.auth_type	authtype	RW	Cellular broadband Authentication type	"pap" or "chap"
5	link.profile.1.iplocal	wanip	R	WAN IP address	202.44.185.111
6	wwan.0.radio.information.signal_strength	rsi	R	Cellular signal strength	-65 dBm
7	wwan.0.imei	imei	R	IMEI number	357347050000177
8	statistics.usage_current	usage	R	Cellular broadband data usage of current session	"Rx 500 bytes, Tx 1024 bytes, Total 1524 bytes" or "Rx 0 byte, Tx 0 byte, Total 0 byte" when wwan down
9	statistics.usage_current	wanuptime	R	Up time of current cellular broadband session	1 days 02:30:12 or 0 days 00:00:00 when wwan down
10	/proc/uptime	deviceuptime	R	Device up time	1 days 02:30:12
11	wwan.0.system_network_status.current_band	band	R	Current band	WCDMA850

Table 59 – List of basic SMS diagnostics RDB variables

Network scan and manual network selection by SMS

Performing a network scan

The get plmnscan SMS command enables you to perform a scan of the cellular networks available at the time of the scan.

It returns the following semi-colon separated information for each network in range:

- MCC

- MNC
- Network Type (LTE, 3G, 2G)
- Provider's Name
- Operator Status (available, forbidden, current)

The following is an example of a response from the get plmnscan SMS command:

plmnscan=505,03,7,vodafone AU,1;505,03,1,vodafone AU,1;505,03,9,vodafone AU,4;505,01,7,Telstra Mobile,1;505,01,1,Telstra Mobile,1;505,02,9,YES OPTUS,1;505,02,1,YES OPTUS,1;505,01,9,Telstra

Network type	Description
9	Indicates an LTE network.
7	Indicates a 3G network
1	Indicates a 2G network

Table 60 – Network types returned by get plmnscan SMS command

Operator status	Description
1	Indicates an available operator which may be selected.
2	Indicates a forbidden operator which may not be selected (applies only to generic SIM cards).
4	Indicates the currently selected operator.

Table 61 – Operator status codes returned by get plmnscan SMS command

Notes about the network connection status when using the get plmnscan command:

If the connection status is Up and connection mode is Always on, the get plmnscan SMS will cause the connection to disconnect, perform the scan, send the result through SMS and then bring the connection back up again. If the connection status is Down, the router will perform the PLMN scan, send the result and keep the connection status down.



If the connection status is Waiting and connection mode is Connect on demand, the get plmnscan SMS will change the connection status to Down, perform the scan, send the result through SMS and then restore the connection status to the Waiting state.

If the connection status is Up and connection mode is Connect on demand, the get plmnscan SMS will cause the connection to disconnect, perform the scan, send the result through SMS, and then restore the connection status to the Waiting state unless there is a traffic which triggers a connection in which case the connection status will be set to Up.

Setting the router to connect to a network

The router can be instructed by SMS to connect to one of the networks returned by the get plmnscan command. The set forceplmn command forces the router to connect to a specified operator network (if available) while the get forceplmn command retrieves the currently configured network on the router.

Command format:

set forceplmn=0|MCC,MNC| MCC,MNC,Network Type

For example:

set forceplmn=0

Sets the selection of operator and network type to automatic mode.

```
set forceplmn=505,3
```

Sets the operator to a manual selection made by the user where “505” is the Mobile Country Code for Australia and “3” is the Mobile Network Code for Vodafone. As no network type (e.g. LTE/3G/2G) is specified, it is selected automatically.

```
set forceplmn=505,3,7
```

Sets the operator and network type to a manual selection made by the user where “505” is the Mobile Country Code for Australia, “3” is the Mobile Network Code for Vodafone and “7” is the 3G network type.

Notes about the set forceplmn command:



If the manual selection fails, the device will fall back to the previous ‘good’ network.

When enabled, the SMS acknowledgement reply reflects the success or failure of the manual selection with respect to the set command and includes the final MNC/MCC that was configured.

Confirming the currently configured operator and network type

You can retrieve the currently configured operator and network type using the get forceplmn command.

The get forceplmn command returns the operator and network type selection mode (Automatic/Manual), in addition to the MCC and MNC values, for example:

 
```
Automatic,505,3
```

This response indicates that the operator/network selection mode is Automatic, and the network used is Vodafone AU.

SMS diagnostics examples

The examples below demonstrate various combinations of supported commands. This is not an exhaustive list and serves as an example of possibilities only.

If the default setting of Only accept authenticated SMS messages is enabled:



Password authentication is required. Add your password followed by a space as a prefix to the command, for example

If authentication required:

```
PASSWORD set username= "Lantronix"
```

If authentication not required:

```
set username='Lantronix'
```



The authentication setting is located in the user interface at Services -> SMS messages-> Diagnostics.

Description	Input Command (without PASSWORD prefix)
Send SMS to change the data connection username	set username='Lantronix'
Send SMS to change the data connection password	set password= 'Lantronix'
Send SMS to change the data connection authentication	set authtype= 'pap'
Send SMS to reboot	execute reboot
Send SMS to check the WAN IP address	get wanip
Send SMS to check the mobile signal strength	get rssi
Send SMS to check the IMEI number	get imei
Send SMS to check the current band	get band
Send SMS to Disconnect (if connected) and reconnect the data connection	execute pdpcycle
Send SMS to disconnect the data connection	execute pdpdown
Send SMS to connect the data connection	execute pdpup
Send multiple get command	get wanip; get rssi
Send multiple set command	set ssh.genkeys=1; set username=test; set auth=pap
Send SMS to reset to factory default settings	execute factorydefaults
Send SMS to retrieve status of router	get status
Send SMS to retrieve the history of the session, including start time, end time and total data usage	get sessionhistory
Send SMS to configure the router to send syslog to a remote syslog server	set syslogserver=123.209.56.78
Send SMS to wake up the router, turn on the default gateway and trigger the 'connect on demand' profile if in waiting state.	A zero byte class 1 flash SMS
Send SMS to perform firmware upgrade when firmware is located on HTTP server	execute download http://download.com:8080/firmware_image.cdi execute download http://download.com:8080/firmware_image_r.cdi

Description	Input Command (without PASSWORD prefix)
Send SMS to perform firmware upgrade when firmware is located on FTP server	execute download ftp://username:password@download.com/firmware_image.cdi execute download ftp://username:password@ download.com/firmware_image_r.cdi
Send SMS to download and install IPK package located on HTTP server	execute download http://download.com:8080/package.ipk
Send SMS to download and install IPK package located on FTP server	execute download ftp://username:password@ download.com:8080/package.ipk
Send SMS to turn off PPPoE	set pppoe=0
Send SMS to retrieve the PPPoE status, currently configured dial string and service name	get pppoe
Send SMS to set the LED mode timeout to 10 minutes	set ledmode=10
Send SMS to retrieve the current LED mode	get ledmode
Retrieve current SSH protocol	get ssh.proto
Select SSH protocol	set ssh.proto=1
Retrieve password authentication status	get ssh.passauth
Enable/disable password authentication on host	set ssh.passauth=1 or set ssh.passauth=0
Generate set of public/private keys on the host	execute ssh.genkeys
Clear client public keys stored on host	execute ssh.clearkeys
Send SMS to initiate a Network Quality test	get networkquality

Table 62 – SMS diagnostics example commands

Network quality

The Network quality page provides some basic diagnostic information regarding the speed and quality of your cellular network connection. To perform a network quality test, click the Refresh button. The network quality test can take a few minutes to complete.

This test can be initiated remotely by an SMS command. See SMS Diagnostics examples.

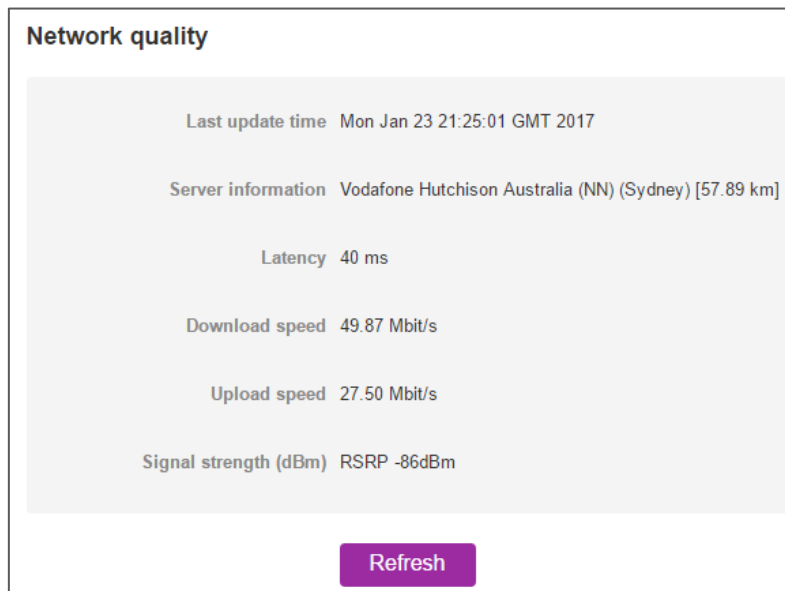


Figure 174 – Network quality test result page

Item	Description
Last update time	Date and time of the last successful refresh.
Server information	Includes details of the server used to conduct the network quality test. The distance to the particular server accessed by the software is displayed in kilometres.
Latency	Latency limits the maximum rate, expressed in milliseconds (ms), that information can be transmitted. This network test measures round trip latency and excludes the amount of time that a destination system spends processing the packet.
Download speed	Average speed achieved between the server and the router, measured in megabits per second (Mbit/s).
Upload speed	Average speed achieved between the router and the server, measured in megabits per second (Mbit/s).
Signal strength (dBm)	The method used to measure signal strength depends on the network technology: 4G uses RSRP (Reference Signal Received Power) 3G uses RSCP (Received Signal Code Power) 2G uses RSSI (Received Signal Strength Indication) All methods express the signal strength as a ratio in decibels (dB) of the measured power referenced to one milliwatt (mW).

Item	Description
Refresh	When the Refresh button is clicked, the router performs a network test to the address listed in the Server information field. This process may take a few minutes depending on the speed of your network.

Table 63 – Network quality test result details

System

Log

The Log pages are used to display or download the System log, Event notification logs and IPSec logs on the router.

System log

The System Log enables you to troubleshoot any issues you may be experiencing with your Vodafone MachineLink 4G Lite router. To access the System Log page, click on the System menu. The System Log is displayed.

Log file

Display level
Notice

Select page
<
Page 1 of 79
>

Download
Clear

Date & Time	Machine	Level	Process	Message
Mar 18 06:10:39	vdf_nwl220	user.notice	ssh.cgi	finishing command... succ ["bruteforce_list"]
Mar 18 06:10:39	vdf_nwl220	user.notice	ssh.cgi	starting command... [cmd='bruteforce_list',opt1='']
Mar 18 06:00:54	vdf_nwl220	local0.warn	dnsmasq-dhcp[3765]	Ignoring domain int.lantronix.com for DHCP host name HYDNB-W10-00084
Mar 18 05:55:18	vdf_nwl220	cron.err	crond[679]	time disparity of 13785474 minutes detected
Mar 18 05:55:16	vdf_nwl220	user.notice	cns_profile	PDP command processed - [wwan.0.profile.cmd.command]=write
Mar 18 05:55:15	vdf_nwl220	local5.err	connection_mgr[506]	is_profile_to_connect(2598): data call is blocked in roaming area
Mar 18 05:55:14	vdf_nwl220	user.notice	cns_profile	PREFIP : "0.0.0.0" ==> wwan.0.profile.cmd.param.ipv4_addr_pref"
Mar 18 05:55:14	vdf_nwl220	user.notice	cns_profile	DATA_COMP : "" ==> wwan.0.profile.cmd.param.data_compression"
Mar 18 05:55:14	vdf_nwl220	user.notice	cns_profile	HEADER_COMP : "" ==> wwan.0.profile.cmd.param.header_compression"

Figure 175 – System log file

Log file

Use the Display level drop-down list to select a message level to be displayed. The message levels are described in the table below.

To download the System log for offline viewing, right-click the Download button and choose Save as.. to save the file. To clear the System log, click the Clear button. The downloaded log file is in Linux text format with carriage return (CR) only at the end of a line, therefore in order to be displayed correctly with new lines shown, it is recommended to use a text file viewer which displays this format correctly (e.g. Notepad++).

Diagnostic log

The router may be configured to enable the collection of diagnostic logs for the purpose of troubleshooting problems. These log files are intended for use by Vodafone technicians. By default, this feature is disabled and should only be enabled if you are trying to find out the cause of a problem and are instructed to enable this by Vodafone technical support staff.

Diagnostic Log Configuration

Periodic log collection ☐ 0

Log capture interval one-off ▼

Maximum periodic log size (KB) 100-10000

Maximum kernel panic data size (KB) 1-1000

Log Capture Information

Number of captured periodic logs 9

Captured kernel panic data (KB) 0

Clear all captured periodic logs Clear

Download all captured logs Download

Refresh Save


Figure 176 – Diagnostic log

Item	Description
Diagnostic log configuration	
Periodic log collection	Turn on this toggle key to enable diagnostic log collection.
Log capture interval	Specifies the interval at which the router should collect diagnostic log data.
Maximum periodic log size (KB)	Specifies the maximum size of the log file in kilobytes.
Maximum kernel panic data size (KB)	Specifies the maximum size of the kernel panic data file in kilobytes.
Log capture information	
Number of captured periodic logs	Displays the number of captured periodic logs.
Captured kernel panic data (KB)	Displays the total size of captured kernel panic data in kilobytes.
Clear all captured periodic logs	Press the “Clear” button to clear all captured periodic logs.
Download all captured logs	Press the “Download” button to download all captured logs.

Table 64 – Diagnostic log

IPSec log

The IPSec log section provides the ability for you to download the log for the IPSec VPN function. This can assist in troubleshooting any problems you may have with the IPSec VPN. To access the IPSec log page, click on the System menu item then select the Log menu on the left and finally select IPSec log beneath it.

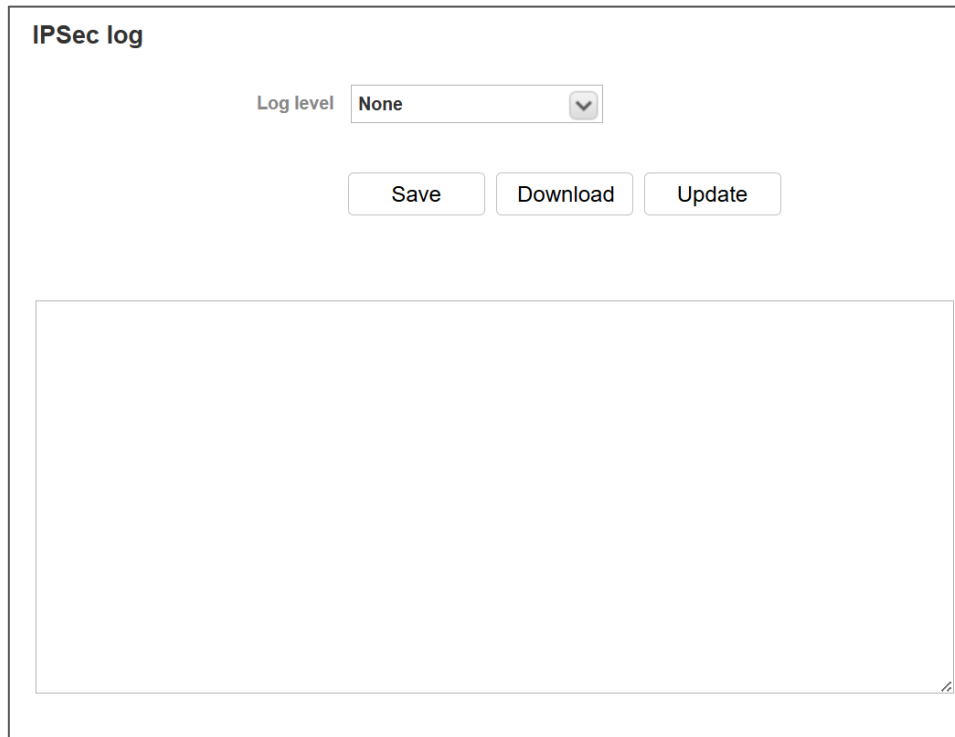

The screenshot shows a web interface titled "IPSec log". It features a "Log level" dropdown menu currently set to "None". Below the dropdown are three buttons: "Save", "Download", and "Update". A large, empty rectangular box occupies the lower half of the page, intended for displaying log entries. A small cursor icon is visible in the bottom right corner of this box.

Figure 177 – IPSec log

Use the Log level drop down list to specify the type of detail you want to capture in the log and then click the Save button. When you change the logging level, any active IPSec VPN tunnels will be disconnected as a change in logging level requires the IPSec service to be restarted. The Update button forces a refresh of the display to show any entries since the display was last loaded. To download the IPSec log, click the Download button and you will be prompted to save the file.

Event notification log

The Event notification log section provides the ability for you to download the log for the Event notification function. This can assist in troubleshooting any problems you may have with the Event notification feature. To access the Event notification log page, click on the System menu item then select the Log menu on the left and finally select Event notification log beneath it.

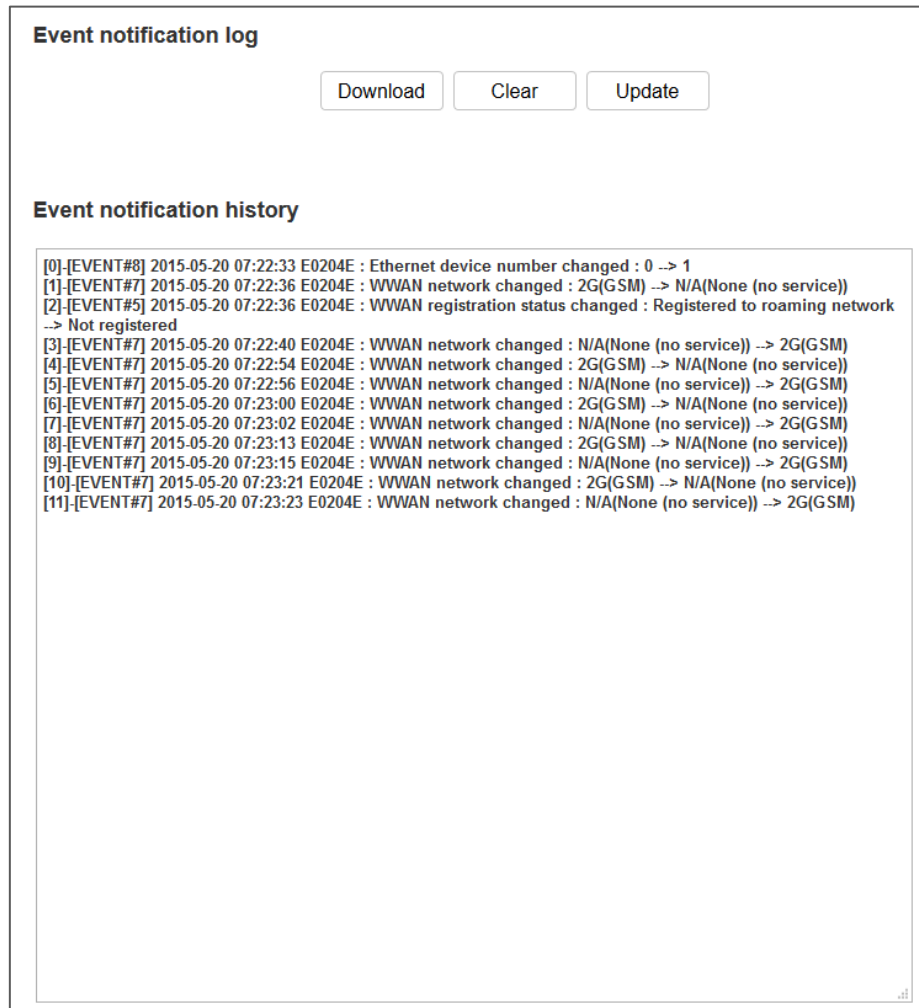


Figure 178 – Event notification log


Use the Download button to download the log file. The Update button forces a refresh of the log display.

System log settings

To access the System log settings page, click on the System menu item then select the Log menu on the left and finally select System log settings beneath it.

Log data is stored in RAM and therefore, when the unit loses power or is rebooted, it will lose any log information stored in RAM. To ensure that log information is accessible between reboots of the router there are two options:

- Enable the Log to non-volatile memory option
- Use a Remote syslog server

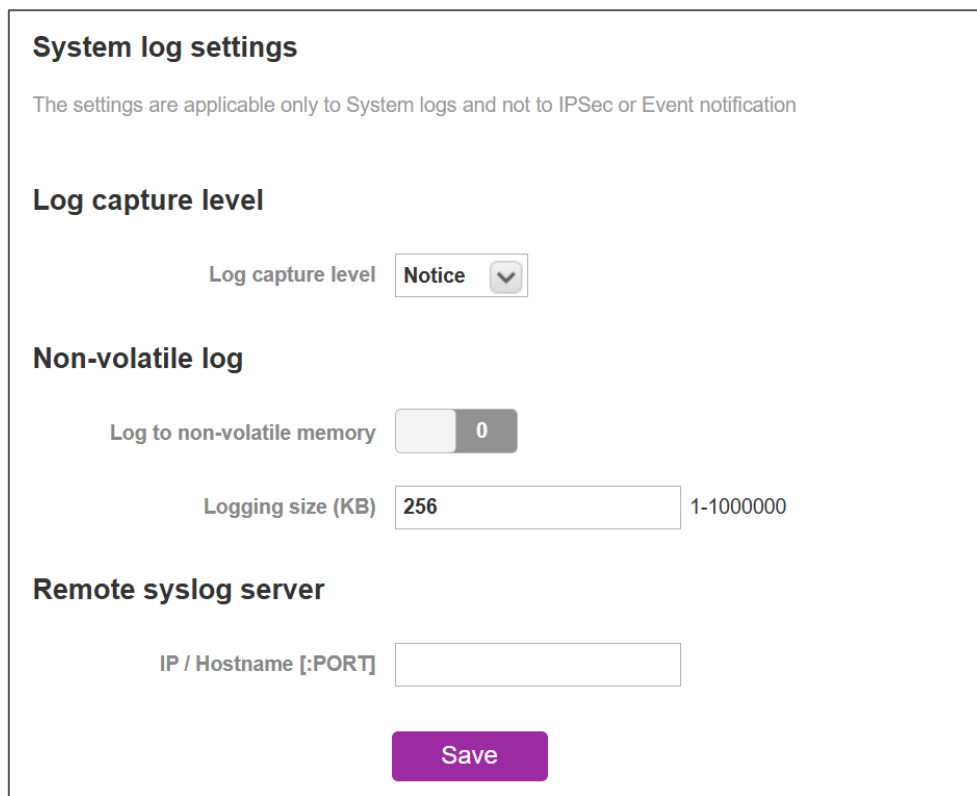

The screenshot shows the 'System log settings' page. At the top, it states: 'The settings are applicable only to System logs and not to IPSec or Event notification'. Below this, there are three sections: 'Log capture level' with a dropdown menu set to 'Notice'; 'Non-volatile log' with a toggle switch for 'Log to non-volatile memory' set to '0' and a text input for 'Logging size (KB)' set to '256' with a range of '1-1000000'; and 'Remote syslog server' with a text input for 'IP / Hostname [:PORT]'. A purple 'Save' button is at the bottom.

Figure 179 – System log settings

Log capture level

The log capture level defines the amount of detail that the system log stores. This setting also affects the Display level setting on the System log page, for example, if this is set to a low level, such as “Error”, the System log will not be able to display higher log levels.

Non-volatile log

When the router is configured to log to non-volatile memory, the log data is stored in flash memory, making it accessible after a reboot of the router. Up to 512kb of log data will be stored before it is overwritten by new log data. Flash memory has a finite number of program-erase operations that it may perform to the blocks of memory. While this number of program-erase operations is quite large, we recommend that you do not enable this option for anything other than debugging to avoid excessive wear on the memory.

Remote syslog server

The router can be configured to output log data to a remote syslog server. This is an application running on a remote computer which accepts and displays the log data. Most syslog servers can also save the log data to a file on the computer on which it is running allowing you to ensure that no log data is lost between reboots.

To configure the Vodafone MachineLink 4G Lite router to output log data to a remote syslog server:

- 1 Click on the System menu from the top menu bar. The System log item is displayed.
- 2 Under the Remote syslog server section, enter the IP address or hostname of the syslog server in the IP / Hostname [PORT] field. You can also specify the port number after the IP or hostname by entering a semi-colon and then the port number e.g. 192.168.1.102:514. If you do not specify a port number, the router will use the default UDP port 514.
- 3 Click the Save button to save the configuration.

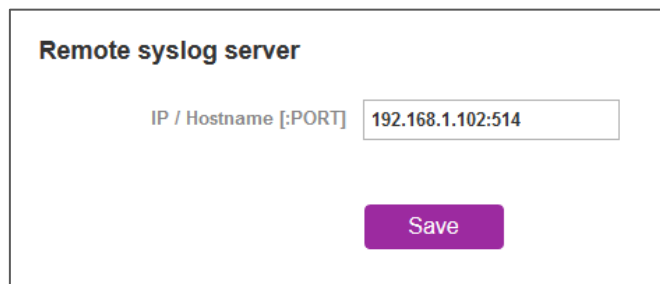


Figure 180 – Remote syslog server configuration

Item	Definition
Debug	Show extended system log messages with full debugging level details.
Info	Show informational messages only.
Notice	Show normal system logging information.
Warning	Show warning messages only.
Error	Show error condition messages only.

Table 65 – System log detail levels

Ping watchdog

The Ping watchdog page is used to configure the behaviour of the Periodic Ping monitor function.

When configured, the Ping watchdog feature transmits controlled ping packets to 1 or 2 user specific IP addresses. Should the watchdog not receive responses to the pings, it will reboot the device in a last resort attempt to restore connectivity.

Please be very careful when considering using this feature in situations where the device is intentionally offline for a particular reason (e.g. user configured PDP session disconnect, or the Connect on demand feature enabled). This is because the ping watchdog feature expects to be able to access the internet at all times and will always eventually reboot the router if access isn't restored by the time the various timers and retries expire.

It is due to the nature of the ping watchdog being a last resort standalone backup mechanism that it will continue to do its job and reboot the device even when the Connect on demand session is idle, or the PDP context is disabled by the user. Therefore, it is recommended to disable this feature if Connect on demand is configured, or if the PDP context will be intentionally disconnected on the occasion.

The feature operates as follows:

- a After every "Periodic Ping timer" configured interval, the router sends 3 consecutive pings to the "First destination address".
- b If all 3 pings fail the router sends 3 consecutive pings to the "Second address".
- c The router then sends 3 consecutive pings to the "Destination address" and 3 consecutive pings to the "Second address" every "Retry timer" configured interval.
- d If all retry pings in step C above fail then number of time configured in "Fail count", the router reboots.
- e If any ping succeeds, the router returns to step A and does not reboot.



Note – The "Periodic Ping timer" should not be set to a value of less than 300 seconds to allow the router time to reconnect to the cellular network following a reboot.

To disable the Ping watchdog, set Fail count to 0.

First destination address		
Second destination address		
Periodic Ping timer	0	(0=disable, 300-65535) secs
Retry timer	0	(0=disable, 60-65535) secs
Fail count	0	(0=disable, 1-65535) times
Periodic reboot		
Force reboot every	0	(0=disable, 5-65535) mins
Randomize reboot time	1 minute	v
Save		

Figure 181 – Ping watchdog settings

Configuring Periodic Ping settings

The Periodic Ping settings configure the router to transmit controlled ping packets to 2 specified IP addresses. If the router does not receive responses to the pings, the router will reboot.

To configure the ping watchdog:

- 1 In the First destination address field, enter a website address or IP address to which the router will send the first round of ping requests.
- 2 In the Second destination address field, enter a website address or IP address to which the router will send the second round of ping requests.
- 3 In the Periodic Ping timer field, enter an integer between 300 and 65535 for the number of seconds the router should wait between ping attempts. Setting this to 0 disables the ping watchdog function.
- 4 In the Retry timer field, enter an integer between 60 and 65535 for the number of seconds the router should wait between retry ping attempts, i.e. pings to the second destination address. Setting this to 0 disables the ping watchdog function.
- 5 In the Fail count field, enter an integer between 1 and 65535 for the number of times an accelerated ping should fail before the router reboots. Setting this to 0 disables the ping watchdog function.

Disabling the Ping watchdog function

To disable the Ping watchdog function, set Fail Count to 0.



Note – The traffic generated by the periodic ping feature is usually counted as chargeable data usage. Please keep this in mind when selecting how often to ping.

Configuring a Periodic reboot

The router can be configured to automatically reboot after a period of time specified in minutes. While this is not necessary, it does ensure that in the case of remote installations, the router will reboot if some anomaly occurs.

- 1 In the Force reboot every field, enter the time in minutes between forced reboots. The default value is 0 which disables the Periodic reboot function. The minimum period between reboots is 5 minutes while the maximum value is 65535 minutes.
- 2 If you have configured a forced reboot time, you can use the Randomise reboot time drop down list to select a random reboot timer. Randomising the reboot time is useful for preventing a large number of devices from rebooting simultaneously and flooding the network with connection attempts. When configured, the router waits for the configured Force reboot every time and then randomly selects a time that is less than or equal to the Randomise reboot time setting. After that randomly selected time has elapsed, the router reboots.
- 3 Click the Save button to save the settings.




Note – The randomise reboot time is not persistent across reboots; each time the router is due to reboot, it randomly selects a time less than or equal to the Randomise reboot time

System configuration

Settings backup and restore

The settings backup and restore page is used to backup or restore the router's configuration or to reset it to factory defaults. In order to view the settings page, you must be logged into the web user interface as root using the password admin. The backup / restore functions can be used to easily configure a large number of Vodafone MachineLink 4G Lite routers by configuring one router with your desired settings, backing them up to a file and then restoring that file to multiple Vodafone MachineLink 4G Lite routers.

To access the Settings backup and restore page, click on the System menu item then select the System configuration menu on the left and finally select Settings backup and restore beneath it.

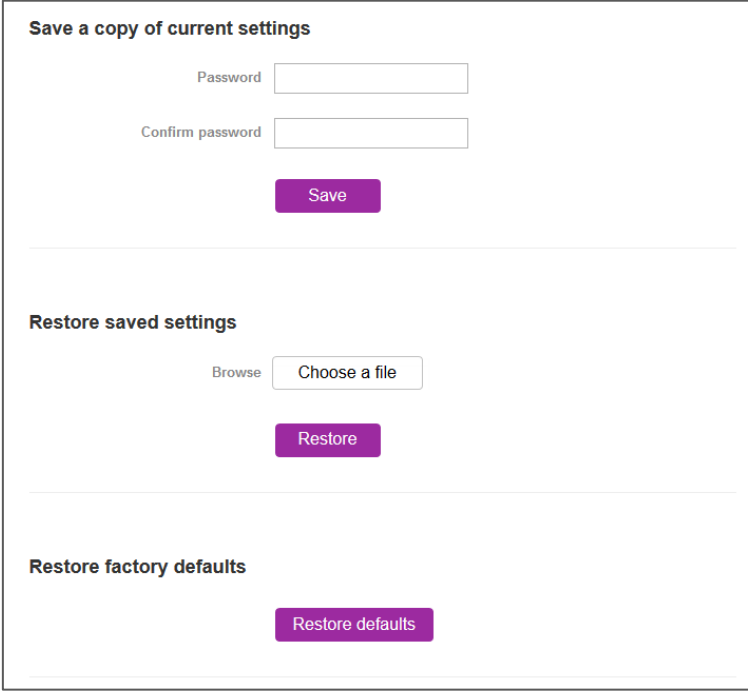

The screenshot shows a web interface for 'Settings backup and restore'. It is divided into three sections: 1. 'Save a copy of current settings' with 'Password' and 'Confirm password' text boxes, followed by a purple 'Save' button. 2. 'Restore saved settings' with a 'Browse' label, a 'Choose a file' button, and a purple 'Restore' button. 3. 'Restore factory defaults' with a purple 'Restore defaults' button. Horizontal lines separate the sections.

Figure 182 – Settings backup and restore

Back up your router's configuration

- 1 Log in to the web configuration interface, click on the System menu and select Settings backup and restore.
- 2 If you want to password protect your backup configuration files, enter your password in the fields under Save a copy of current settings and click on Save. If you don't want to password protect your files, just click on Save. The router will then prompt you to select a location to save the settings file.

Note – The following conditions apply:



It is NOT possible to edit the contents of the downloaded file; if you modify the contents of the configuration file in any way you will not be able to restore it later.

You may change the name of the file if you wish but the filename extension must remain as ".cfg"

Restore your backup configuration

- 1 In the web configuration interface click on the System menu and select Settings backup and restore.
- 2 From the Restore saved settings section, click on Browse or Choose a file and select the backup configuration file on your computer.
- 3 Click Restore to copy the settings to the new Vodafone MachineLink 4G Lite router. The router will apply these settings and inform you it will reboot - click on OK.

Restoring the router's factory default configuration

Click the Restore defaults button to restore the factory default configuration. The router asks you to confirm that you wish to restore factory default settings. If you wish to continue with the restoring of factory defaults, click OK.



Note: All current settings on the router will be lost when performing a restore of factory default settings. The device IP address will change to 192.168.1.1 and the default username root and default password user will be configured.

Upload

To access the Upload page, click on the System menu, then System Configuration and then Upload.

The Upload page allows you to upload firmware files, HTTPS certificates or user created application packages to the Vodafone MachineLink 4G Lite router. When firmware files have been uploaded, they can also be installed from this page. PDF files, such as this user guide may also be uploaded for access on the router's help page.

For more information on application development, contact Lantronix Technical Support about our Software Development Kit.

File uploads

Uploaded files (Free space: 126.1 M)

File name	Date	Size	Action
-----------	------	------	--------

Figure 183 – Upload page

Updating the Firmware

The firmware update process involves first updating the recovery image firmware and then updating the main firmware image.



Note – In order to perform an update, you must be logged into the router with the root manager account (see the Advanced configuration section for more details).

To update the Vodafone MachineLink 4G Lite router's firmware:

- 1 Power on the router as described in the Installing the router section.

- 2 Log in to the router with the root user account (See the Advanced configuration section for details)
- 3 Select the System item from the top menu bar, select the System configuration item from the menu on the left and then select the Upload menu item.
- 4 Under the File uploads section, click the Choose a file button. Locate the firmware image file on your computer and click Open. The firmware image is named vdf_nwl22_x.xx.xx.x.cdi where the 'x' characters represent the version number.
- 5 Click the Upload button. The firmware image is uploaded to the storage on the router.

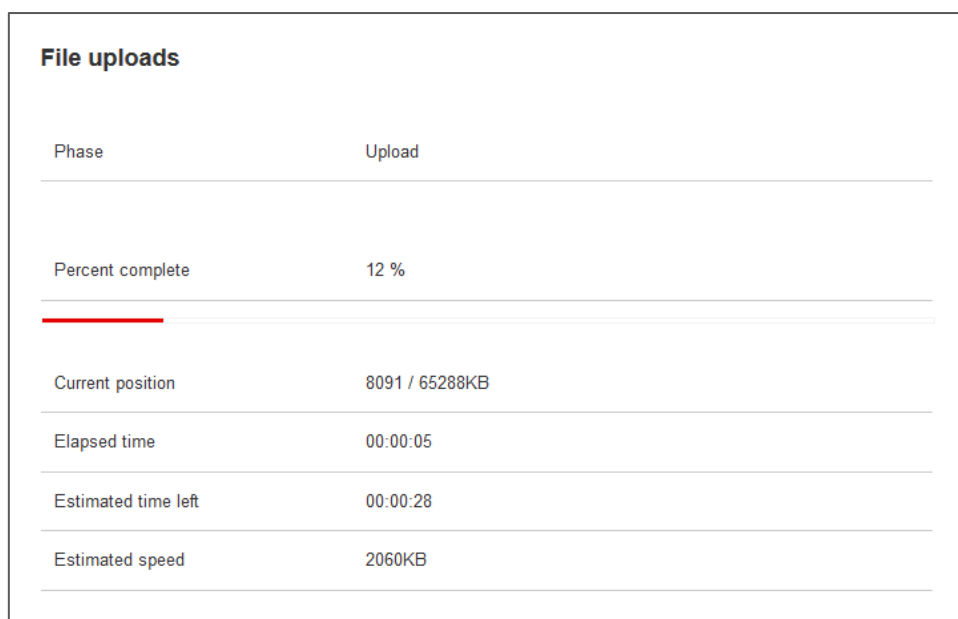


Figure 184 – File upload

- 6 The uploaded firmware is listed in the Uploaded files section. Click the Install link next to the file to begin installing the firmware and then click OK on the confirmation window that appears.

File name	Date	Size	Action	
vdf_nwl220.cdi	Jun 19 2018	63.8M	Install	Delete

Figure 185 – Uploaded files

- 7 The firmware is flashed and when it is complete, the router displays “The firmware update was successful” and returns to the main Upload screen.

```
Erasing 128 Kibyte @ 480000 -- 90 % complete
Erasing 128 Kibyte @ 4a0000 -- 92 % complete
Erasing 128 Kibyte @ 4c0000 -- 95 % complete
Erasing 128 Kibyte @ 4e0000 -- 97 % complete
Erasing 128 Kibyte @ 4e0000 -- 100 % complete
Flashing ulmage to "kernel" (/dev/mtd3)
Estimated time remaining: 109 seconds
Writing data to block 18 at offset 0x240000
Writing data to block 19 at offset 0x260000
Writing data to block 20 at offset 0x280000
Writing data to block 21 at offset 0x2a0000
Writing data to block 22 at offset 0x2c0000
Done
Done
Skipping install scripts, nothing to do
Skipping post-install, nothing to do
Done
The firmware update was successful Reboot to main system...
Estimated time remaining: 104 seconds
Estimated time remaining: 99 seconds
```

[Close](#)

Figure 186 – Firmware flash process complete



Note – Do not remove the power when the router's LEDs are flashing as this is when the firmware update is in process.

The installation is complete when the countdown reaches zero. The router attempts to redirect you to the Status page.

```
Estimated time remaining: 94 seconds
Estimated time remaining: 89 seconds
Estimated time remaining: 84 seconds
Estimated time remaining: 79 seconds
Estimated time remaining: 74 seconds
Estimated time remaining: 69 seconds
Estimated time remaining: 64 seconds
Estimated time remaining: 59 seconds
Estimated time remaining: 54 seconds
Estimated time remaining: 49 seconds
Estimated time remaining: 44 seconds
Estimated time remaining: 39 seconds
Estimated time remaining: 34 seconds
Estimated time remaining: 29 seconds
Estimated time remaining: 24 seconds
Estimated time remaining: 19 seconds
Estimated time remaining: 14 seconds
Estimated time remaining: 9 seconds
Estimated time remaining: 4 seconds
Redirecting you to the Status page
```

[Close](#)

Figure 187 – Installation process complete

- 8 Hold down the reset button on the router for 15-20 seconds to reboot and restore the factory default settings of the router. See the Restoring factory default settings section for more information.

Software applications manager

The Software application manager page is used to provide details of any user installed packages on the router and allow them to be uninstalled.

For more information on application development, contact your sales representative about the Software Development Kit.

Software applications manager					
Application name	Version	Architecture	Time installed	Package details	Uninstall
libpcap	1.2.1	vdf_nwl200	1/1/1970, 10:01:43 AM	Package details	Uninstall
nas	1.0	vdf_nwl200	1/1/1970, 10:02:12 AM	Package details	Uninstall
ntfs-3g	1.0.0	vdf_nwl200	1/1/1970, 10:01:46 AM	Package details	Uninstall
oss-disclaimer	trunk.82572	vdf_nwl200	1/1/1970, 10:01:45 AM	Package details	Uninstall
python3	3.4.5	vdf_nwl200	1/1/1970, 10:02:24 AM	Package details	Uninstall
samba	3.5.6	vdf_nwl200	1/1/1970, 10:02:11 AM	Package details	Uninstall
speedtest-cli-master	1.0	vdf_nwl200	1/1/1970, 10:02:24 AM	Package details	Uninstall
talloc	2.0.7	vdf_nwl200	1/1/1970, 10:01:45 AM	Package details	Uninstall
tcpdump	4.2.1	vdf_nwl200	1/1/1970, 10:01:45 AM	Package details	Uninstall
uguide	trunk.82572	vdf_nwl200	1/1/1970, 10:01:43 AM	Package details	Uninstall

Figure 188 – Software applications manager

The Application name, Version number of the application, the architecture type and time of installation are all displayed. Clicking the Package details link will display a pop-up window with further details of the package.

To uninstall any software applications, click the Uninstall link. The NWL-22 User Guide PDF (this document) and the Open Source Software Disclaimer are installed as packages and may be uninstalled to recover some storage space if required.

Signature public keys

The Signature public keys page displays the Public key list which contains the public keys used to validate firmware signatures. To access this page, navigate to **System > System configuration > Signature public keys**.

Public key list

File name
vdf_nwl220_public.pem

Note:
Please see user guide for firmware and ipk signing instructions

Figure 189 – Firmware signature

Administration

Administration settings

To access the Administration Settings page, click on the System menu then the Administration menu on the left and then click on Administration settings.

The Administration settings page is used to enable or disable protocols used for remote access and configure the passwords for the user accounts used to log in to the router.

The page is divided into four sections:

- Remote router access control
- Local router access control
- Web User Interface account
- SSH/FTP account

Remote router access control

Enable HTTPS

0

Enable SSH

0

Enable FTP

0

Enable FTPS

0

Enable ping

0

Local router access control

Enable HTTPS

1

Enable local SSH

1

Enable local FTP

0

Enable local FTPS

1

Web User Interface account

Username

root

Password

(8-128 characters in length)

Confirm password

(8-128 characters in length)

Password strength

Login attempt limit

3

(3-5)

Login lock duration

1

(1-10 minutes)

Session timeout

3600

(300-3600 seconds)

SSH/FTP account

Username

root

Password

(8-128 characters in length)

Confirm password

(8-128 characters in length)

Password strength

SSH login attempt limit

3

(3-5)

SSH login lock duration


1

(1-10 minutes)

SSH Blocked IPs

IP	lastAccessedTime
----	------------------

Figure 190 – Administration settings page

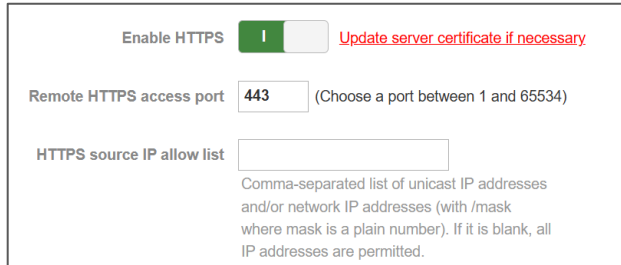Option	Definition
Remote router access control	
Note that all remote router access control settings are disabled by default. 	
Enable HTTPS	Enable or disable remote HTTPS access to the router using a secure connection.
Remote HTTPS access port	When HTTPS is enabled (see previous) you can set the HTTPS remote access port.  Enter a port number between 1 and 65534 to use when accessing the router remotely over a secure HTTPS connection.
HTTPS source IP allow list	When HTTPS is enabled (see Enable HTTPS above) you can enter an 'allow list' of IP addresses that will be permitted to access the router. Enter a list of comma-separated unicast IP addresses. You may also enter IP addresses in CIDR notation, however, no spaces are permitted. Note that if this field is left blank, all IP addresses will be permitted to access the router.
Enable SSH	Enable or disable Secure Shell on the router.
Remote SSH Access Port	When SSH is enabled (see previous) you can set the remote SSH access port.  Enter the port number for remote SSH access. The port number must be between 1 and 65534.
Enable FTP	Enable or disable the File Transfer Protocol on the router for remote connections.
Enable FTPS	Enable or disable the Secure File Transfer Protocol on the router for remote connections.
Enable Ping	Enable or disable remote ping responses on the WWAN connection.
Local router access control	
Enable HTTPS	Enable or disable local secure HTTP access (https). The default setting is enabled.
Enable local SSH	Enable or disable local Secure Shell on the router. The default setting is enabled.
Enable local FTP	Enable or disable the File Transfer Protocol on the router for local connections.
Enable local FTPS	Enable or disable the Secure File Transfer Protocol on the router for local connections.
Web User Interface account	
Username	Use the drop-down list to select the root or user account to change its web interface password.

Option	Definition
Password	Enter the desired web interface password. When logged in with the root account the password will display in clear text, otherwise the password is masked. Only the root account can view and change passwords.
Password strength	The Vodafone MachineLink 4G Lite router includes algorithms to ensure that the password you enter is strong. Any password configured on the router must now meet the following criteria: Be a minimum of eight characters and no more than 128 characters in length. Contain at least one upper case, one lower case character and one number. Contain at least one special character, such as: `~!@#\$%^&*()-_+=[]{} ;:'",<.>/?. Additionally, the password must also satisfy an algorithm which analyses the characters as you type them, searching for commonly used patterns, passwords, names and surnames according to US census data, popular English words from Wikipedia and US television and movies and other common patterns such as dates, repeated characters (aaa), sequences (abcd), keyboard patterns (qwertyuiop) and substitution of numbers for letters.
Login attempt limit	Set the number of unsuccessful login attempts that are allowed before the login lock applies (see next item). You can choose 3, 4 or 5 login attempts. The default is 3.
Login lock duration	Set the time users must wait before they can attempt to login after reaching the login attempt limit, see previous item above. The duration can be set from one minute to ten minutes. The default is one minute.
Session timeout	Set the time in seconds that the system must remain idle before it automatically logs out. 1800 seconds (30 minutes) is the default. You can choose a time between 300 seconds (5 minutes) and 3600 seconds (one hour).
SSH/FTP account	
Username	Displays the SSH/FTP username. This may not be changed.
Password	Enter the desired SSH/FTP password.
Confirm password	Re-enter the desired SSH/FTP password.
SSH login attempt limit	Set the number of unsuccessful login attempts that are allowed before the login lock applies.
SSH login lock duration	Set the time users must wait before they can attempt to log in after reaching the login attempt limit.
SSH Blocked IPs	
IP	The host IP address for which SSH access has been blocked.
lastAccessedTime	The duration in seconds for which SSH access has been blocked. Once it reaches the value configured for SSH login lock duration , the SSH access is unblocked.

Table 66 – Administration configuration options

To access the router's configuration pages remotely:

- 1 Open a new browser window and navigate to the WAN IP address and assigned port number of the router, for example
`https://123.209.130.249:8080`



Note – You can find the router's WAN IP address by clicking on the "Status" menu. The WWAN IP field in the WWAN Connection Status section shows the router's WAN IP address.

- 2 Enter the username and password to login to the router and click Log in.



Note – To perform functions like Firmware upgrade, device configuration backup and to restore and reset the router to factory defaults, you must be logged in with the root manager account.

Server certificate

What is HTTP Secure?

HTTP Secure or HTTPS is the use of the HTTP protocol over an SSL/TLS protocol. It is used primarily to protect against eavesdropping of communication between a web browser and the web site to which it is connected. This is especially important when you wish to have a secure connection over a public network such as the internet. HTTPS connections are secured through the use of certificates issued by trusted certificate authorities such as VeriSign. When a web browser makes a connection attempt to a secured web site, a digital certificate is sent to the browser so that it can verify the authenticity of the site using a built-in list of trusted certificate authorities.

There are two main differences between how HTTPS and HTTP connections work:

- HTTPS uses port 443 while HTTP uses port 80 by default.
- Over an HTTPS connection, all data sent and received is encrypted with SSL while over an HTTP connection, all data is sent unencrypted.

The encryption is achieved through the use of a pair of public and private keys on both sides of the connection. In cryptography, a key refers to a numerical value used by an algorithm to alter information (encrypt it), making the information secure and visible only to those who have the corresponding key to recover (decrypt) the information. The public key is used to encrypt information and can be distributed freely. The private key is used to decrypt information and must be secret by its owner.

Each Vodafone MachineLink 4G Lite router contains a self-signed digital certificate which is identical on all Vodafone MachineLink 4G Lite routers. For a greater level of security, the router also supports generating your own unique key. Additionally, you may use third party software to generate your own self-signed digital certificate or purchase a signed certificate from a trusted certificate authority and then upload those certificates to the router.

Generating your own self-signed certificate

To generate your own self-signed certificate:

- 1 Click the System item from the top menu bar, then Administration from the side menu bar and then Server certificate.
- 2 Select a Server key size. A larger key size takes longer to generate but provides better security.
- 3 Click the Generate button to begin generating Diffie-Hellman parameters.
- 4 Enter the certificate details using the appropriate fields. All fields must be completed to generate a certificate.

Generate server certificate

Server key size ☒ 1024 ☐ 2048 ☐ 4096

Diffie-Hellman parameters

Certificate serial number

Not before N/A

Not after N/A

Country

State

City

Organisation

Email

Figure 191 – Generate server certificate



Note – The Country field must contain a code for the desired country from the list below.

Code	Country	Code	Country	Code	Country	Code	Country
AX	Åland Islands	ER	Eritrea	LS	Lesotho	SA	Saudi Arabia
AD	Andorra	ES	Spain	LT	Lithuania	SB	Solomon Islands
AE	United Arab Emirates	ET	Ethiopia	LU	Luxembourg	SC	Seychelles
AF	Afghanistan	FI	Finland	LV	Latvia	SE	Sweden
AG	Antigua and Barbuda	FJ	Fiji	LY	Libya	SG	Singapore
AI	Anguilla	FK	Falkland Islands (Malvinas)	MA	Morocco	SH	St. Helena
AL	Albania	FM	Micronesia	MC	Monaco	SI	Slovenia
AM	Armenia	FO	Faroe Islands	MD	Moldova	SJ	Svalbard and Jan Mayen Islands
AN	Netherlands Antilles	FR	France	ME	Montenegro	SK	Slovak Republic
AO	Angola	FX	France, Metropolitan	MG	Madagascar	SL	Sierra Leone
AQ	Antarctica	GA	Gabon	MH	Marshall Islands	SM	San Marino
AR	Argentina	GB	Great Britain (UK)	MK	Macedonia	SN	Senegal
AS	American Samoa	GD	Grenada	ML	Mali	SR	Suriname
AT	Austria	GE	Georgia	MM	Myanmar	ST	Sao Tome and Principe

Code	Country	Code	Country	Code	Country	Code	Country
AU	Australia	GF	French Guiana	MN	Mongolia	SU	USSR (former)
AW	Aruba	GG	Guernsey	MO	Macau	SV	El Salvador
AZ	Azerbaijan	GH	Ghana	MP	Northern Mariana Islands	SZ	Swaziland
BA	Bosnia and Herzegovina	GI	Gibraltar	MQ	Martinique	TC	Turks and Caicos Islands
BB	Barbados	GL	Greenland	MR	Mauritania	TD	Chad
BD	Bangladesh	GM	Gambia	MS	Montserrat	TF	French Southern Territories
BE	Belgium	GN	Guinea	MT	Malta	TG	Togo
BF	Burkina Faso	GP	Guadeloupe	MU	Mauritius	TH	Thailand
BG	Bulgaria	GQ	Equatorial Guinea	MV	Maldives	TJ	Tajikistan
BH	Bahrain	GR	Greece	MW	Malawi	TK	Tokelau
BI	Burundi	GS	S. Georgia and S. Sandwich Isls.	MX	Mexico	TM	Turkmenistan
BJ	Benin	GT	Guatemala	MY	Malaysia	TN	Tunisia
BM	Bermuda	GU	Guam	MZ	Mozambique	TO	Tonga
BN	Brunei Darussalam	GW	Guinea-Bissau	NA	Namibia	TP	East Timor
BO	Bolivia	GY	Guyana	NC	New Caledonia	TR	Turkey
BR	Brazil	HK	Hong Kong	NE	Niger	TT	Trinidad and Tobago
BS	Bahamas	HM	Heard and McDonald Islands	NF	Norfolk Island	TV	Tuvalu
BT	Bhutan	HN	Honduras	NG	Nigeria	TW	Taiwan
BV	Bouvet Island	HR	Croatia (Hrvatska)	NI	Nicaragua	TZ	Tanzania
BW	Botswana	HT	Haiti	NL	Netherlands	UA	Ukraine
BZ	Belize	HU	Hungary	NO	Norway	UG	Uganda
CA	Canada	ID	Indonesia	NP	Nepal	UM	US Minor Outlying Islands
CC	Cocos (Keeling) Islands	IE	Ireland	NR	Nauru	US	United States
CF	Central African Republic	IL	Israel	NT	Neutral Zone	UY	Uruguay
CH	Switzerland	IM	Isle of Man	NU	Niue	UZ	Uzbekistan
CI	Cote D'Ivoire (Ivory Coast)	IN	India	NZ	New Zealand (Aotearoa)	VA	Vatican City State (Holy See)
CK	Cook Islands	IO	British Indian Ocean Territory	OM	Oman	VC	Saint Vincent and the Grenadines
CL	Chile	IS	Iceland	PA	Panama	VE	Venezuela
CM	Cameroon	IT	Italy	PE	Peru	VG	Virgin Islands (British)
CN	China	JE	Jersey	PF	French Polynesia	VI	Virgin Islands (U.S.)
CO	Colombia	JM	Jamaica	PG	Papua New Guinea	VN	Viet Nam
CR	Costa Rica	JO	Jordan	PH	Philippines	VU	Vanuatu
CS	Czechoslovakia (former)	JP	Japan	PK	Pakistan	WF	Wallis and Futuna Islands
CV	Cape Verde	KE	Kenya	PL	Poland	WS	Samoa
CX	Christmas Island	KG	Kyrgyzstan	PM	St. Pierre and Miquelon	YE	Yemen
CY	Cyprus	KH	Cambodia	PN	Pitcairn	YT	Mayotte
CZ	Czech Republic	KI	Kiribati	PR	Puerto Rico	ZA	South Africa

Code	Country	Code	Country	Code	Country	Code	Country
DE	Germany	KM	Comoros	PS	Palestinian Territory	ZM	Zambia
DJ	Djibouti	KN	Saint Kitts and Nevis	PT	Portugal	COM	US Commercial
DK	Denmark	KR	Korea (South)	PW	Palau	EDU	US Educational
DM	Dominica	KW	Kuwait	PY	Paraguay	GOV	US Government
DO	Dominican Republic	KY	Cayman Islands	QA	Qatar	INT	International
DZ	Algeria	KZ	Kazakhstan	RE	Reunion	MIL	US Military
EC	Ecuador	LA	Laos	RO	Romania	NET	Network
EE	Estonia	LC	Saint Lucia	RS	Serbia	ORG	Non-Profit Organization
EG	Egypt	LI	Liechtenstein	RU	Russian Federation	ARPA	Old style Arpanet
EH	Western Sahara	LK	Sri Lanka	RW	Rwanda		

Table 67 – Country codes

- 5 When you have entered all the required details, press the Generate button. The certificate takes several minutes to generate. When the certificate has been generated, you are informed that it has been successfully generated and installed. The web server on the router restarts and you are logged out of the router. Click OK to be taken back to the login screen.

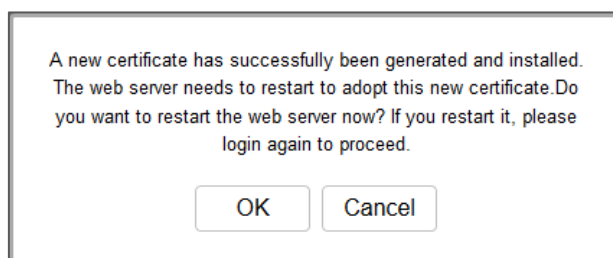


Figure 192 – New certificate successfully generated message

SSH key management

Secure Shell (SSH) is UNIX-based command interface and network protocol used to gain secure access to a remote computer, execute commands on a remote machine or to transfer files between machines. It was designed as a replacement for Telnet and other insecure remote shell protocols which send information, including passwords, as plain text.

SSH uses RSA public key cryptography for both connection and authentication. Two common ways of using SSH are:

- Use automatically generated public-private key pairs to encrypt the network connection and then use password authentication to log on.
- Use a manually generated public-private key pair to perform the authentication and allow users or programs to log in without using a password.

To access the SSH key management page, click on the System menu then the Administration menu on the left and then click on SSH key management.

SSH server configuration

SSH protocol Protocol 2

Enable password authentication ☒

Enable key authentication ☒

Save

Host key management

Key type	Date
ssh_host_key	2015-05-21 01:56:53
ssh_host_dsa_key	2015-05-21 01:57:15
ssh_host_rsa_key	2015-05-21 01:57:34
ssh_host_ecdsa_key	2015-05-21 01:57:34

Generate keysGet keysGet public keysUpload keys

Client key management

Username	Hostname	Key type
----------	----------	----------

ClearUpload

Figure 193 – SSH Server Configuration

SSH Server Configuration

To configure the SSH server settings:

- 1 Use the SSH Protocol drop down list to select the protocol that you want to use. Protocol 2 is more recent and is considered more secure.
- 2 Select the types of authentication you want to use by clicking the Enable password authentication and Enable key authentication toggle keys on or off. Note that you may have both authentication methods on but you may not turn them both off.
- 3 Click the Save button to confirm your settings.

Host key management

SSH keys provide a means of identification using public key cryptography and challenge response authentication. This means that a secure connection can be established without transmitting a password, thereby greatly reducing the threat of someone eavesdropping and guessing the correct credentials.

SSH Keys always come in pairs with one being a public key and the other a private key. The public key may be shared with any server to which you want to connect. When a connection request is made, the server uses the public key to encrypt a challenge (a coded message) to which the correct response must be given. Only the private key can decrypt this challenge and produce the correct response. For this reason, the private key should not be shared with those who you do not wish to give authorization.

The Host key management section displays the current public keys on the router and their date and timestamp. These public keys are provided in different formats, including DSA, RSA and ECDSA. Each format has advantages and disadvantages in terms of signature generation speed, validation speed and encryption/decryption speed. There are also compatibility concerns to consider with older clients when using ECDSA, for example.

Host key management	
Key type	Date
ssh_host_key	2015-05-21 01:56:53
ssh_host_dsa_key	2015-05-21 01:57:15
ssh_host_rsa_key	2015-05-21 01:57:34
ssh_host_ecdsa_key	2015-05-21 01:57:34
Generate keys Get keys Get public keys Upload keys	

Generating new keys

The complete set of keys can be re-generated by selecting the Generate keys button. This key generation process takes approximately 30 seconds to complete.

Downloading keys

The Get keys button allows you to download the complete set of public and private keys while the Get public keys button will download only the set of public keys.

Uploading your own key files


You can generate your own SSH keys and upload them to the router. To generate keys on a Linux-based machine, use the following commands:

```
mkdir keys
cd keys
ssh-keygen -t rsa1 -f ssh_host_key -N ""
ssh-keygen -t dsa -f ssh_host_dsa_key -N ""
ssh-keygen -t rsa -f ssh_host_rsa_key -N ""
ssh-keygen -t ecdsa -f ssh_host_ecdsa_key -N ""
zip -e -P "PASSWORDHERE" -j keys.zip *
```

Click the Upload keys button then locate the generated keys to upload them to the router.

Client key management

The Client Key Management section is used for uploading the public key file of clients. To upload a client public key, click the Upload button, browse to the file and click Open.

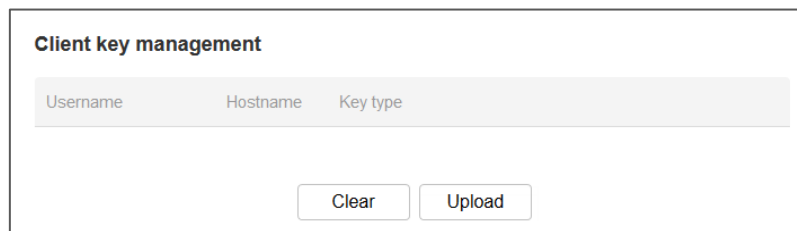


The interface shows a table with columns for Username, Hostname, and Key type. Below the table are two buttons: Clear and Upload.

Username	Hostname	Key type
----------	----------	----------

When the file is uploaded, it is examined for validity. If the key file is not a valid public key, it will not be uploaded.

LED operation mode

The eight LED indicators may be turned off after a timeout period for aesthetic or power saving reasons. To access the LED Operation Mode page, click the System menu, then Administration on the left and finally select LED Operation Mode.

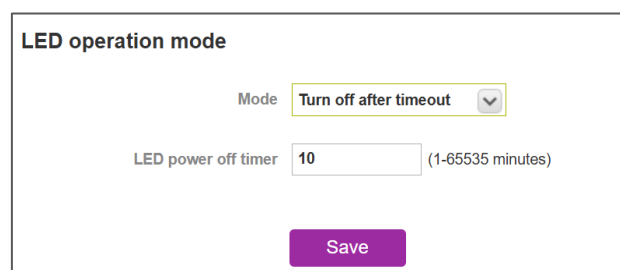

The interface shows a Mode dropdown menu set to 'Turn off after timeout' and an LED power off timer input field set to 10 minutes. A Save button is at the bottom.

Mode: Turn off after timeout

LED power off timer: (1-65535 minutes)

Figure 194 – LED Operation Mode


The Mode drop down list sets the operation mode of the LEDs on the front panel of the router. To set the lights to operate at all times, set this to Always on. To set the lights to turn off after a specified period, select Turn off after timeout. When configured to

turn off after timeout, use the LED power off timer field to specify the time in minutes to wait before turning off the LED indicators. The LED Power Off Timer must be an integer between 1 and 65535.

The wait period begins from the time the Save button is clicked. When the wait period expires, the LEDs will turn off. If the router is rebooted, the LED power off timer is reset. The router will boot up and wait for the configured time before turning off again.


Site settings

The Site settings feature allows you to add a name that appears on the Status page in the System information section. This can be useful for identifying the particular device you are using when you have a fleet of them in various locations.

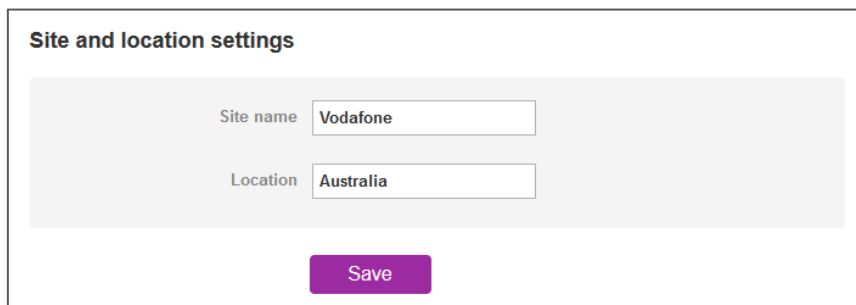

The screenshot shows a web form titled "Site and location settings". It contains two input fields: "Site name" with the value "Vodafone" and "Location" with the value "Australia". Below these fields is a purple "Save" button.

Figure 195 – Site and location settings

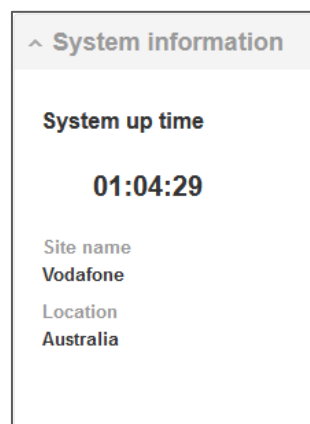

The screenshot shows the "System information" section of a web interface. It features a header "System information" with a caret icon. Below the header, it displays "System up time" as "01:04:29". At the bottom, it shows the "Site name" as "Vodafone" and "Location" as "Australia".

Figure 196 – System information section displaying Site name and Location.

LDAP Settings

Lightweight Directory Access Protocol (LDAP) enables the router to authenticate users against a centralized directory service. OpenLDAP directory service has been implemented on the NTC-220 Series routers.

LDAP settings allows you to enable and configure LDAP service on the device. To access the LDAP settings page, navigate to **System > Administration > LDAP Settings**.

LDAP Mode

Status ☒

Mode **LDAP** ▼

LDAP Config

Base DN DC=xxx[,DC=yyy,...]

Bind DN CN=xxx[,DC=yyy,...]

Bind User CN=xxx[,DC=yyy,...]

Bind Password

LDAP Servers

IP/Hostname1 [:PORT]

IP/Hostname2 [:PORT]

IP/Hostname3 [:PORT]

IP/Hostname4 [:PORT]

LDAPS Certificate

Browse Not uploaded

Figure 197 – LDAP settings

Item	Description
LDAP Mode	
Status	Set to ON to enable
Mode	Select the Mode. Options are: • LDAP – Standard LDAP • LDAPS – LDAP over SSL/TLS. Requires server certificate
LDAP Config	
Base DN	The starting point in the directory tree from which an LDAP search begins (e.g., DC=SERVER,DC=LOCAL).
Bind DN	The full distinguished name of the account used to authenticate and perform administrative or directory read/write operations (e.g., CN=Users).

Item	Description
Bind User	A privileged LDAP account (specified by its Bind DN) used to authenticate and perform administrative or directory read/write operations. (e.g., CN=Administrator,CN=Users,DC=SERVER,DC=LOCAL).
Bind Password	Password for the Bind User account
LDAP Servers	
IP/Hostname1 [:PORT]	IP address or Domain name of the LDAP server 1 and Port
IP/Hostname2 [:PORT]	IP address or Domain name of the LDAP server 1 and Port
IP/Hostname3 [:PORT]	IP address or Domain name of the LDAP server 1 and Port
IP/Hostname4 [:PORT]	IP address or Domain name of the LDAP server 1 and Port
LDAPS Certificate (Upload certificate when mode is set to LDAPS)	
Browse	Click Choose a file, browse and select the certificate (.pem file). The certificate is uploaded.

Hardware reset settings

To prevent unauthorised reset via the physical reset button, go to System -> Administration -> Hardware reset settings and select Disable reset button:

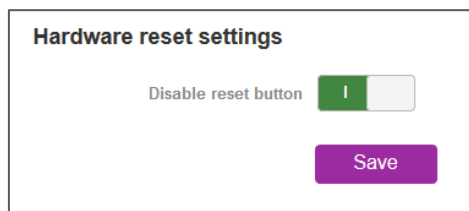


Figure 198 – Hardware reset settings.



Warning – Before disabling the reset button, be sure that you remember your root account password. If you disable the reset button and you forget your root account password, you will effectively be locked out of your device. Disabling the reset button prevents you from rebooting the router, accessing the recovery partition and factory resetting the device, therefore preventing you from resetting the root account password.

A notification can be sent each time this button setting changes. To configure notification settings, go to Services -> Event notification -> Notification configuration and configure a notification type and destination for event 21

USB-OTG

The USB port can be enabled or disabled on the USB OTG configuration page (System -> USB OTG). By default the port is enabled.

When the port is enabled, the USB-OTG page displays the current status of the USB port, i.e. whether it is in Device mode or Host mode.

By default, Automatic mode is set to ON, allowing the router to intelligently choose the correct mode. If you wish to manually override this selection, turn off Automatic mode and manually select either Host or Device mode.

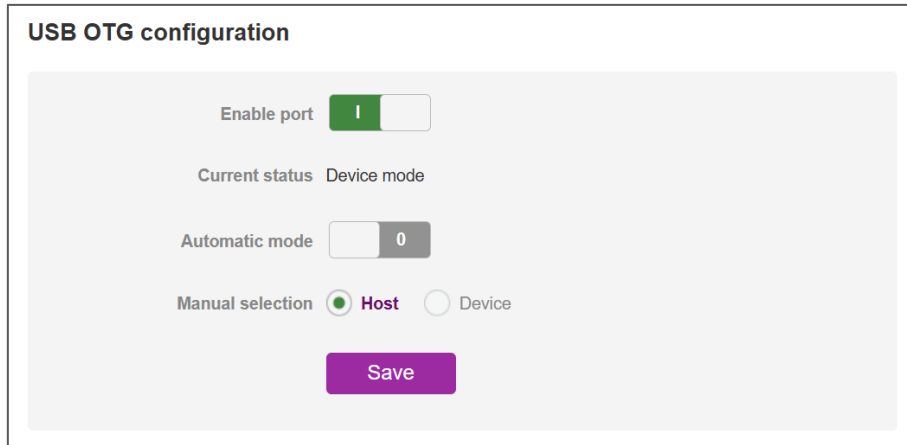


Figure 199 – USB-OTG configuration

A notification can be sent each time a change to these settings is saved. To configure notification settings, go to Services -> Event notification -> Notification configuration and select a notification type and destination for event 23.

Storage

The Storage page provides configuration options with relation to USB and SD storage devices. To access the Storage page, click the System menu item, then select the Storage menu item on the left.

Storage device list

The Storage devices list displays any connected storage devices and summarises the type, file system, size, used and available space on each device. Additionally, an eject button is provided to unmount the storage device so you can safely remove it.

Storage device list

#	Name	Description	File-system	Size	Used	Available	Used (%)
No media found							

Network samba storage settings

Storage access ☒

Verbose logging ☐ 0

Authenticated access

Username

Password

Verify password

Show password ☐

Read-only ☐ 0

Guest access

Guest access ☒

Read-only ☐ 0

Save

Figure 200 – Storage

Network Samba storage settings

Storage devices connected to the router can be shared using the Samba protocol. The table below describes the configuration options for the Network Samba storage settings.

Item	Definition
Storage access	Turns the Samba sharing function on or off.
Verbose logging	When turned on, this provides additional logging data in the system log. This should generally only be used when debugging to avoid generating excessively long logs.
Authenticated access	
Username	The username to be used for authenticated access to the storage device. This is configured as 'smbuser' and cannot be changed.
Password	The password to be used for authenticated access to the storage device.
Verify password	The password to be used for authenticated access to the storage device.
Show password	Displays the passwords in the authenticated access fields.
Read-only	When turned on, this provides read-only access to the files on the connected storage device(s). When read-only access for authenticated accounts is turned on, the guest access read-only option is hidden and guests are permitted read-only access also.
Guest access	
Guest access	Enables or disables guest access to the storage device.
Read-only	When turned on, this provides read-only access to the files on the connected storage device(s) for guest users. If the authenticated account has Read-only enabled then this option is not available and read-only access is automatically granted to guest users.

Table 68 – Network Samba storage settings

Reboot

The reboot option in the System section performs a soft reboot of the router. This can be useful if you have made configuration changes you want to implement.

To reboot the router:

- 1 Click the System menu item from the top menu bar.
- 2 Click the Reboot button from the menu on the left side of the screen.

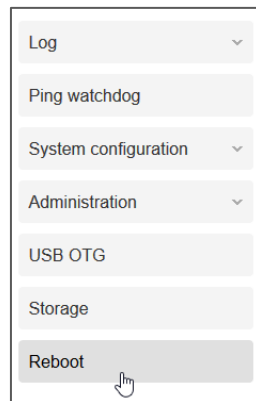


Figure 201 – Reboot menu option

- 3 The router displays a warning that you are about to perform a reboot. If you wish to proceed, click the Reboot button then click OK on the confirmation window which appears.

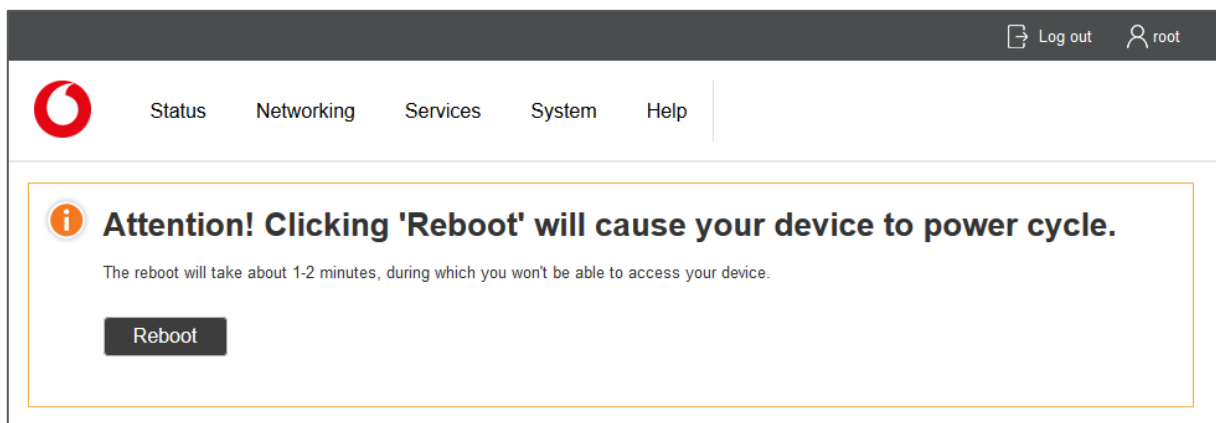


Figure 202 – Reboot confirmation




Note – It can take up to 2 minutes for the router to reboot.

Logging out

To log out of the router, click the  icon at the top right corner of the web user interface.

Help

The Help page displays a link to this document. The document is stored locally on the device as a PDF so that it is available even when the device does not have internet access.

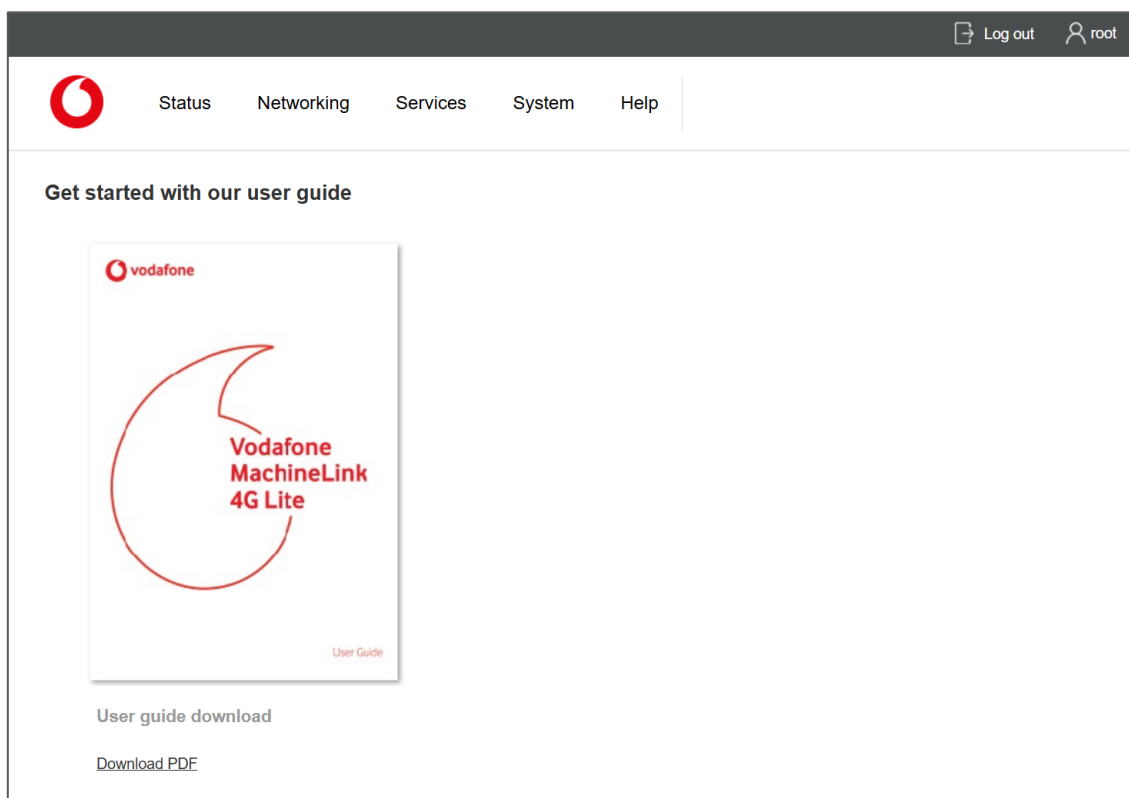

Appendix A: Tables

Table 1 – Device Dimensions	11
Table 2 – LED Indicators.....	12
Table 3 – Signal strength LED descriptions	13
Table 4 – Signal strength LED descriptions	13
Table 5 – Signal strength LED descriptions	13
Table 6 – Ethernet port LED indicators description	14
Table 7 – Interfaces	14
Table 8 – Locking power block pin outs	22
Table 9 – Average power consumption figures	22
Table 10 – Status page item details	33
Table 11 – Data connection item details	34
Table 12 – Roaming settings options	48
Table 13 – Switch from External SIM on no network.....	51
Table 14 – Switch from External SIM on network denied.....	51
Table 15 – Switch from External SIM on roaming.....	52
Table 16 – Switch from External SIM on weak signal.....	53
Table 17 – Switch from External SIM on data connection fail	53
Table 18 – Switch from External SIM on SMS limit reached	54
Table 19 – Switch from External SIM on data usage limit reached.....	55
Table 20 – Switch from Internal SIM on no network	56
Table 21 – Switch from Internal SIM on network denied	56
Table 22 – Switch from Internal SIM on roaming	57
Table 23 – Switch from External SIM on weak signal.....	58
Table 24 – Switch from Internal SIM on data connection fail.....	58
Table 25 – Switch from Internal SIM on SMS limit reached.....	59
Table 26 – Switch from Internal SIM on data usage limit reached	60
Table 27 – Connect on demand – Connect and disconnect timers descriptions	67
Table 28 – DHCP configuration descriptions.....	72
Table 29 – Interface assignment page items	74
Table 30 – Ethernet WAN configuration options.....	75
Table 31 – IP-subnet base VLAN	77
Table 32 – Failover configuration – Hardware link monitoring	80
Table 33 – Failover configuration – Ping monitoring.....	86
Table 34 – IPS firewall configuration options	97
Table 35 – Current MAC / IP / Port filtering rules in effect.....	100
Table 36 – IPSec Configuration Items	104
Table 37 – Distinguished Name field descriptions	119
Table 38 – Modem emulator endpoint options.....	130
Table 39 – PPP server endpoint options	131
Table 40 – IP modem endpoint configuration	131
Table 41 – IP modem endpoint options.....	132
Table 42 – TCP connect-on-demand endpoint options	133
Table 43 – SNMP v3 Configuration	137
Table 44 – PADD Configuration	142
Table 45 – Mobile Station Based Assisted GPS configuration options.....	151
Table 46 – Odometer configuration options.....	152
Table 47 – Geofence user interface.....	153
Table 48 – Add Geofence options.....	155
Table 49 – IO configuration options	158
Table 50 – Pulse settings configuration	158

Table 51 – Event notification configuration options.....	164
Table 52 – Event notification – event types.....	165
Table 53 – Email client settings.....	168
Table 54 – SMS Setup Settings.....	170
Table 55 – Inbox/Outbox icons.....	172
Table 56 – SMS Diagnostic Command Syntax.....	178
Table 57 – List of basic SMS diagnostic commands.....	180
Table 58 – List of get/set commands.....	183
Table 59 – List of basic SMS diagnostics RDB variables.....	184
Table 60 – Network types returned by get plmnscan SMS command.....	185
Table 61 – Operator status codes returned by get plmnscan SMS command.....	185
Table 62 – SMS diagnostics example commands.....	188
Table 63 – Network quality test result details.....	190
Table 64 – Diagnostic log.....	192
Table 65 – System log detail levels.....	196
Table 66 – Administration configuration options.....	208
Table 67 – Country codes.....	213
Table 68 – Network Samba storage settings.....	222
Table 69 – LAN Management Default Settings.....	227
Table 70 – RJ-45 connector pin outs.....	236
Table 71 – RS-232 Wiring.....	237
Table 72 – RS-485 Half Duplex Wiring.....	237
Table 73 – RS-485 (RS-422) Full Duplex Wiring.....	238

Appendix B: Default Settings

The following tables list the default settings for the Vodafone MachineLink 4G Lite router.

LAN (management)	
Static IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1

Table 69 – LAN Management Default Settings

Default root and admin passwords are printed on the label on the bottom of the router and on the back of the Quick Start Guide which came in the box with your device.

Restoring factory default settings

Restoring factory defaults will reset the Vodafone MachineLink 4G Lite router to its factory default configuration. You may encounter a situation where you need to restore the factory defaults on your Vodafone MachineLink 4G Lite router such as:

- You have lost your username and password and are unable to login to the web configuration page;
- You are asked to perform a factory reset by support staff.

There are two methods you can use to restore factory default settings on your Vodafone MachineLink 4G Lite router:

- Using the web-based user interface
- Using the reset button on the interface panel of the router (if the button is enabled)

Using the web-based user interface

To restore your router to its factory default settings, please follow these steps:

- 1 Open a browser window and navigate to the IP address of the router (default address is <https://192.168.1.1>). Login to the router using root as the User Name and admin as the password.
- 2 Click the System item from the top menu bar, then System configuration on the left menu and then click Settings backup and restore.
- 3 Under the Restore factory defaults section, click the Restore defaults button. The router asks you to confirm that you wish to restore factory defaults. Click OK to continue. The router sets all settings to default. Click OK again to reboot the router.
- 4 When the Power light returns to a steady red, the reset is complete. The default settings are now restored.

Using the reset button on the interface panel of the router

If the reset button is enabled, use a pen to depress the Reset button on the device for 15-20 seconds. The router will restore the factory default settings and reboot.

When you have reset your Vodafone MachineLink 4G Lite router to its default settings you will be able to access the device's configuration web interface using <https://192.168.1.1> with username user or root and password admin.

Appendix C: Recovery mode

The Vodafone MachineLink 4G Lite router features two independent operating systems, each with its own file systems. These two systems are referred to as 'Main' and 'Recovery'. It is always possible to use one in order to restore the other in the event that one system becomes damaged or corrupted (such as during a firmware upgrade failure). The recovery console provides limited functionality and is typically used to restore the main firmware image in the case of a problem.

Accessing recovery mode

Both systems have web interfaces that can be used to manipulate the other inactive system. The Vodafone MachineLink 4G Lite router starts up by default in the Main system mode, however the router may be triggered to start in recovery mode if desired.

To start the router in recovery mode:

- 1 If the reset button is enabled, press and hold the physical reset button on the interface panel of the router for 5 to 15 seconds. When the LEDs on the front panel change to amber and countdown in a sequence, release the reset button. The router then boots into recovery mode.
- 2 In your browser, navigate to <http://192.168.1.1>. The router's recovery mode is hardcoded to use this address regardless of the IP address that was configured in the main system. The router's recovery console is displayed.

NetComm Cellular Router Recovery Console	
Status	Log
Application Installer	Settings
Reboot	
Status	
System Information	
System Up time	00:11:24
Router Version	Hardware: B Software: V.X.X.X
Serial Number	172799154800019
Trigger	button
LAN	
IP	192.168.1.1 / 255.255.255.0
MAC Address	18:F1:45:37:12:E0
Ethernet Port Status	
LAN	WAN/LAN
Up / 1000 Mbps / FDX	Down

Figure 203 – Recovery console

Status

The status page provides basic information such as the system up time, hardware and software router versions, the router's serial number, the method used to trigger the recovery mode, the IP and MAC address of the router and the status of the Ethernet port.

NetComm Cellular Router Recovery Console	
Status	Log
Application Installer	Settings
Reboot	
Status	
System Information	
System Up time	00:11:24
Router Version	Hardware: B Software: VXXX
Serial Number	172799154800019
Trigger	button
LAN	
IP	192.168.1.1 / 255.255.255.0
MAC Address	18:F1:45:37:12:E0
Ethernet Port Status	
LAN	WAN/LAN
Up / 1000 Mbps / FDX	Down

Figure 204 – Recovery mode – Status

Log

The log page displays the system log which is useful in troubleshooting problems which may have led to the router booting up in recovery mode. The only functionality provided here is the ability to clear the system log, filter by log level and downloading of the log file.

NetComm Cellular Router Recovery Console

Status
Log
Application Installer
Settings
Reboot

Log File
Display Level: Debug
Page 1 of 14
Clear Log File

Date & Time	Machine	Level	Process	Message
Jan 1 00:00:47	vdf_nwi22	user.info	dispd[489]	[disp] boot period time-out - sec=40 sec
Jan 1 00:00:18	vdf_nwi22	user.debug	kernel	[18.060180] eth0: no IPv6 routers present
Jan 1 00:00:10	vdf_nwi22	user.info	kernel	[10.571563] PHY: 0:01 - Link is Up - 1000/Full
Jan 1 00:00:07	vdf_nwi22	user.info	kernel	[7.574188] PHY: 0:01 - Link is Down
Jan 1 00:00:07	vdf_nwi22	user.info	kernel	[7.559967] ADDRCONF(NETDEV_CHANGE): eth0: link becomes ready
Jan 1 00:00:07	vdf_nwi22	user.info	kernel	[7.555389] PHY: 0:01 - Link is Up - 0/Half
Jan 1 00:00:07	vdf_nwi22	user.info	kernel	[7.551544] PHY: 0:00 - Link is Down
Jan 1 00:00:07	vdf_nwi22	user.info	dispd[489]	force to redraw all LEDs
Jan 1 00:00:07	vdf_nwi22	user.info	dispd[489]	[led-off] resetting dim timer (sec) - current timer=0
Jan 1 00:00:07	vdf_nwi22	user.info	dispd[489]	[led-off] set dim timer - timer=0 sec
Jan 1 00:00:07	vdf_nwi22	user.info	dispd[489]	reset all LEDs to solid off
Jan 1 00:00:07	vdf_nwi22	user.err	dispd[489]	set priority (prior=-20)
Jan 1 00:00:07	vdf_nwi22	user.info	dispd[489]	syslog LOG_INFO
Jan 1 00:00:07	vdf_nwi22	user.err	dispd[489]	syslog LOG_ERR
Jan 1 00:00:07	vdf_nwi22	user.err	dispd[489]	=====
Jan 1 00:00:07	vdf_nwi22	user.err	dispd[489]	loglevel check
Jan 1 00:00:07	vdf_nwi22	user.err	dispd[489]	=====
Jan 1 00:00:06	vdf_nwi22	user.info	appweb	HTTP services are ready with 4 pool threads
Jan 1 00:00:06	vdf_nwi22	user.info	appweb	Switching to background operation
Jan 1 00:00:06	vdf_nwi22	user.info	appweb	Listening for HTTP on *:80
Jan 1 00:00:06	vdf_nwi22	user.info	appweb	Starting host named: "888.80"
Jan 1 00:00:06	vdf_nwi22	user.info	appweb	Activating module (Loadable) capi
Jan 1 00:00:06	vdf_nwi22	user.info	appweb	Add copyHandler

[Download Log File](#)


Figure 205 – Recovery mode – Log

Application installer

The Application installer is designed to upload and install main firmware images, upload recovery firmware images, custom applications and HTTPS certificates. Use the Browse button to select a file to be uploaded to the router. When it has been selected, press the Upload button. The file is sent to the router and when the transfer is complete, the file appears in the Uploaded files list. From the Uploaded files list, you are able to either Install or Delete a file.



Note: The Application Installer page may exhibit incorrect behaviour on Google Chrome™ and Mozilla Firefox when the web interface was previously rendered via HTTPS and has switched to HTTP. This is usually the case when you have rebooted from the Main image into Recovery mode. To work around this issue, clear the router cookies and refresh the page.

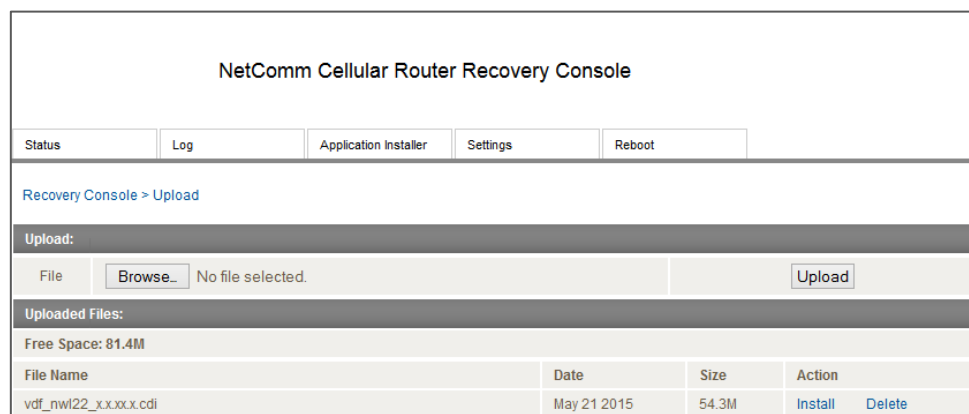

File Name	Date	Size	Action
vdf_nwl22_x.x.x.x.cdi	May 21 2015	54.3M	Install Delete

Figure 206 – Recovery mode – Application Installer

Settings

The settings page provides the option of restoring the router to factory default settings. Click the Restore button to set the router back to the original factory settings.


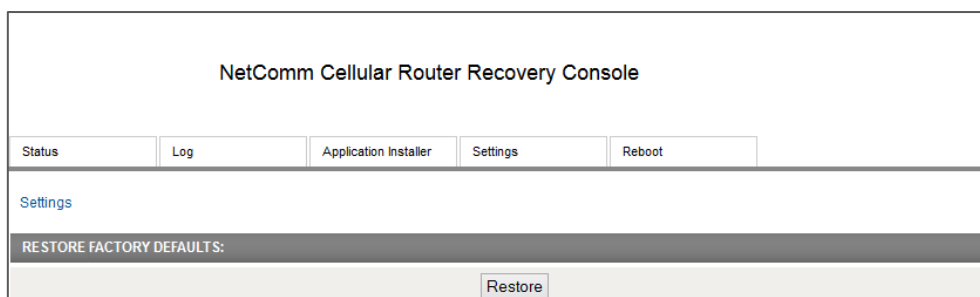


Figure 207 – Recovery mode – Settings

Reboot

The reboot page allows you to reboot the router when you have finished using recovery mode. When rebooting the router from recovery mode, the router boots into the main firmware image unless there is some fault preventing it from doing so, in which case the recovery console will be loaded.

Click the Reboot button to reboot the router to the main firmware image.

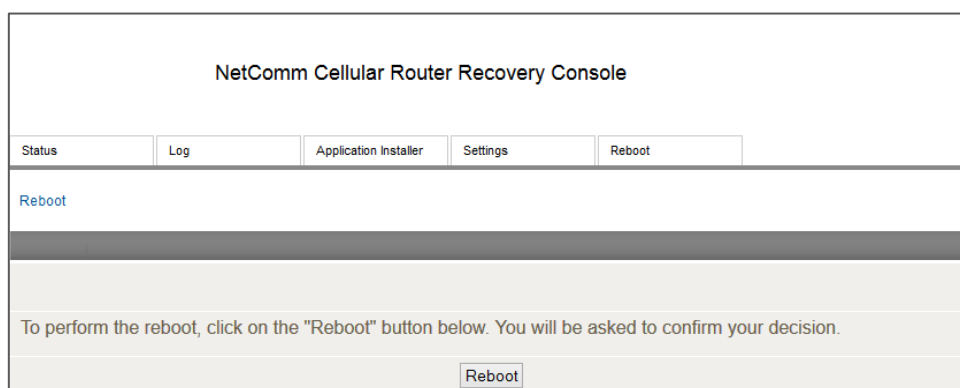

The screenshot shows the 'NetComm Cellular Router Recovery Console' interface. At the top, there is a navigation bar with five tabs: 'Status', 'Log', 'Application Installer', 'Settings', and 'Reboot'. The 'Reboot' tab is currently selected. Below the navigation bar, the word 'Reboot' is displayed in blue text. A dark grey horizontal bar separates the header from the main content area. The main content area has a light beige background and contains the text: 'To perform the reboot, click on the "Reboot" button below. You will be asked to confirm your decision.' At the bottom of this area, there is a button labeled 'Reboot'.

Figure 208 – Recovery mode – Reboot

Appendix D: HTTPS - Uploading a self-signed certificate

If you have your own self-signed certificate or one purchased elsewhere and signed by a Certificate Authority, you can upload it to the Vodafone MachineLink 4G Lite router using the Upload page.



Note – Your key and certificate files must be named server.key and server.crt respectively otherwise they will not work.

To upload your certificate:

- 1 Click on the System item from the top menu bar. From the side menu bar, select System Configuration and then Upload. The file upload screen is displayed.



Figure 209 – Upload page

- 2 Click the Choose a File button and locate your server certificate file and click Open.

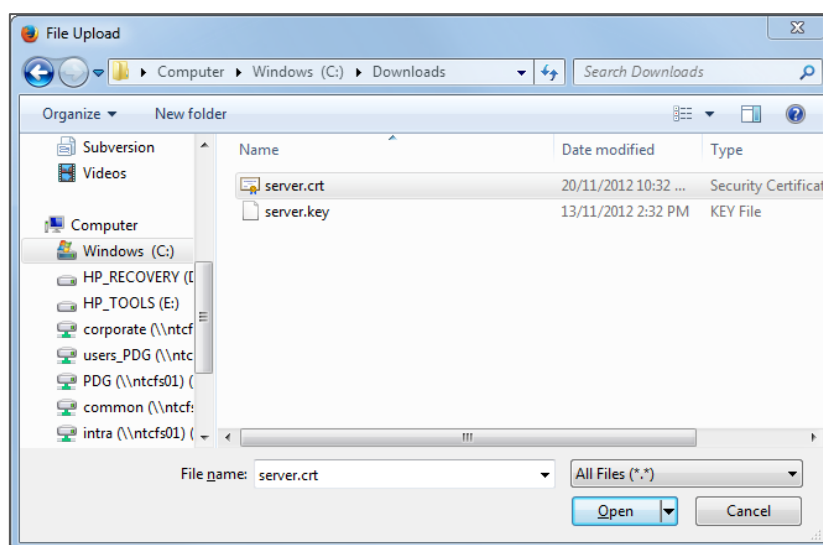


Figure 210 – Browse for server.crt

- 3 Click the Upload button to begin uploading it to the router. The file appears in the list of files stored on the router.

File uploads

Choose a file

Upload

Uploaded files (Free space: 126.7 M)

File name	Date	Size	Action	
server.crt	May 21 2015	875	Install	Delete

Figure 211 – Server certificate file uploaded

- 4 Repeat steps 2 and 3 for the server key file.
- 5 Click the Install link next to the server.crt file then click OK on the prompt that is displayed. The certificate file is installed. Repeat this for the key file. When each file is installed it is removed from the list of stored files.

File uploads

Choose a file

Upload

Uploaded files (Free space: 126.7 M)

File name	Date	Size	Action	
server.crt	May 21 2015	875	Install	Delete
server.key	May 21 2015	951	Install	Delete

Figure 212 – Installing the server.crt file

Appendix E: RJ45 connectors

The RJ45 connectors provide an interface for a data connection and for device input power using the pin layout shown below.



Pin 8 Pin

Figure 213 -The RJ-45 connector

Pin	Colour	Signal (10/100)	Signal (1000)
1	White/Orange stripe	Rx + DC +	+BI_DA
2	Orange Solid	Rx – DC +	–BI_DA
3	White/Green stripe	Tx + DC -	+BI_DB
4	Blue solid	unused	+BI_DC
5	White/Blue stripe	unused	–BI_DC
6	Green solid	Tx – DC -	–BI_DB
7	White/Brown stripe	unused	+BI_DD
8	Brown solid	unused	–BI_DD

Table 70 – RJ-45 connector pin outs

Appendix F: Serial port wiring



Figure 214 – DE9 connector (Pin side view)

The NTC-220 Series router has a serial interface and acts as the data communications equipment (DCE). The wiring tables below indicate the DCE and DTE devices as well as the signal direction.

Shielding cable can optionally be soldered to the chassis and connected to ground.

DTE Device (Computer)			Signal Direction	DCE Device (NTC-220 Router)		
PIN	Name	Description		Description	NAME	PIN
1	DCD	Data carrier detect	←	Data carrier detect	DCD	1
2	RXD	Receive Data	←	Receive Data	RXD	2
3	TXD	Transmit Data	→	Transmit Data	TXD	3
4	DTR	Data Terminal Ready	→	Data Terminal Ready	DTR	4
5	GND	Ground	■	Ground	GND	5
6	DSR	Data Set Ready	←	Data Set Ready	DSR	6
7	RTS	Request to Send	→	Request to Send	RTS	7
8	CTS	Clear to Send	←	Clear to Send	CTS	8
9	RI	Ring Indicator	←	Ring Indicator	RI	9
-	FGND	Shield (Soldered to D9 metal shield)	■	Shield (Soldered to D9 metal shield)	FGND	-

Table 71 – RS-232 Wiring

RS-485 Half Duplex Wiring			
PIN	Signal	Name	Description
1	—	A	Differential pair A
2	+	B	Differential pair B
5		GND	Ground

Table 72 – RS-485 Half Duplex Wiring

RS-485 (RS-422) Full Duplex Wiring			
PIN	Signal	Name	Description
1	—	RXA	Receive (Differential pair A)
2	+	RXB	Receive (Differential pair B)
3	+	TXB	Transmit (Differential pair B)
4	—	TXA	Transmit (Differential pair A)
5		GND	Ground

Table 73 – RS-485 (RS-422) Full Duplex Wiring

Appendix G: Using USB devices

The Vodafone MachineLink 4G Lite Series router features a Micro USB 2.0 OTG port capable of supplying 0.5A to connected devices. The Micro USB port supports both USB storage devices as well as certain USB accessories, including USB-to-Ethernet adapters and USB-to-Serial cables.

Accessing USB storage devices

When a USB storage device is inserted, the router automatically mounts the storage. To access storage devices:

Windows

- 1 Open Windows Explorer.
- 2 In the address bar, type in the network address of the router (\\my.router or \\192.168.1.1 by default), and press Enter. The storage devices are labelled Disk A, Disk B or Disk C.

Mac OS

- 1 In Mac OS, open a Finder window.
- 2 Select Go > Connect to Server.
- 3 Enter the server address smb://my.router or smb://192.168.1.1
- 4 Select the volumes you want to mount. Storage devices are labelled Disk A, Disk B or Disk C.

Linux / Smartphones

You can use any Samba client on Linux and Smartphones to access the connected storage devices by navigating to “my.router” or “192.168.1.1” in your chosen Samba client.

Host and Device mode

The USB port automatically detects whether to run in host or device mode. When in host mode, the router automatically mounts USB storage, USB-to-serial and USB-to-Ethernet devices. When in device mode, the router supports Ethernet and serial over USB. It is also possible to configure the USB Ethernet port as a WAN port.

Appendix H: Inputs/Outputs


Overview

The MachineLink 4G Lite is equipped with a 6-way terminal block connector providing 3 identical multipurpose inputs and outputs as well as a dedicated ignition input. These inputs and outputs may be independently configured for various functions, including:

- NAMUR (EN 60947-5-6 / IEC 60947-5-6) compatible sensor input
- Proximity sensor input for use with contact closure (open/closed) type of sensors (PIR sensors, door/window sensors for security applications) with the input tamper detection possible (four states detected: open, closed, short and break) by the use of external resistors
- Analogue 0V to 30V input
- Digital input (the I/O voltage measured by the Analogue input and the software making a decision about the input state) with the threshold levels configurable in software
- Open collector output.

Hardware Interface

The interface of the 3 multipurpose inputs/outputs are based on the circuit diagram below

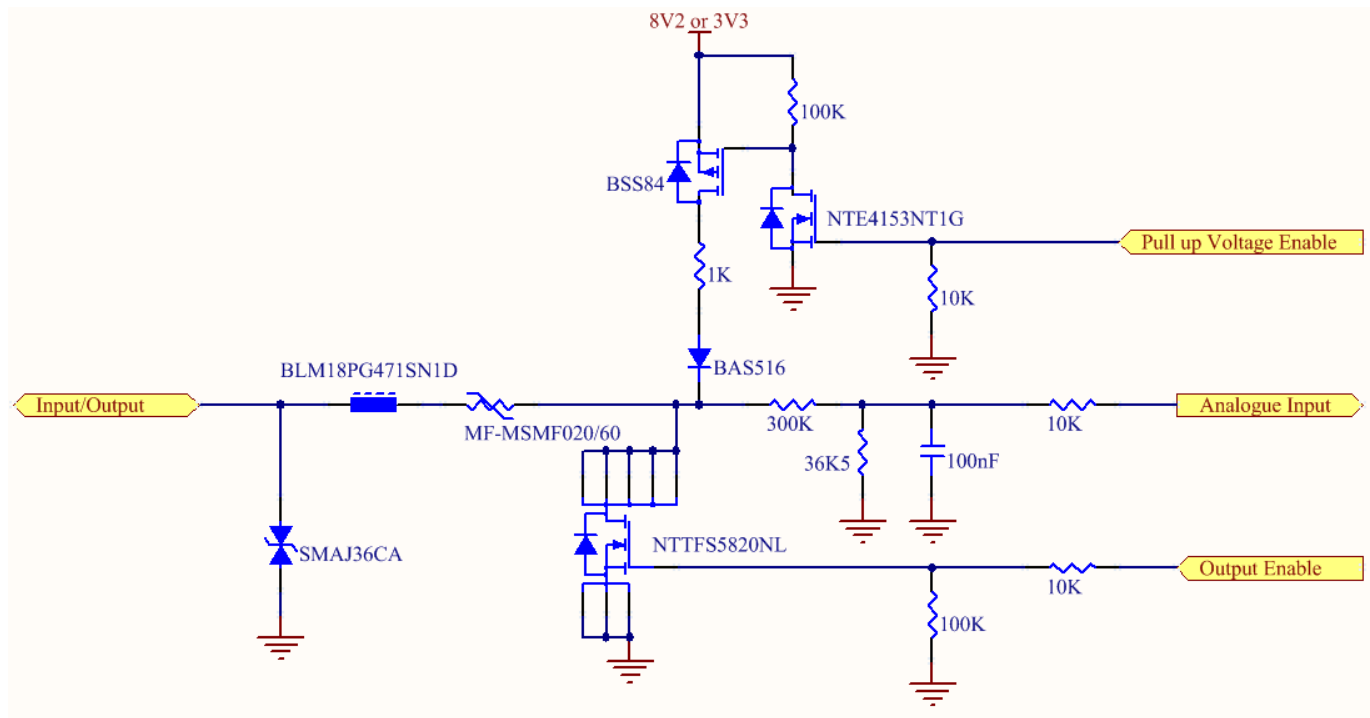

The Input/Output label is the physical connection to the outside world. There are protection devices and resistor dividers to condition the signal prior to it going into the processor. The three labels to the right are the interface to the processor. Output Enable activates the Transistor which provides an open collector (ground) output and can sink 200mA at 230C. It is protected by a

resettable fuse and transient protection diode. If used with the pull up resistor, which can be activated by the Pull up Voltage Enable pin, then you can have a High or Low output rather than open drain. The resistor can be pulled up to 3V3 for Cmos compatible output or 8.2V by software. The Analogue Input pin can read values from 0V to 30V. It is divided by a resistor network to read appropriate levels in the processor. Depending on the sensor type used, the pull up resistor can be switched on or off. If using the NAMUR sensor configuration, the pull up will be activated to 8V2 by default.

Wiring Examples


The following examples are shown as a guide as to what can be achieved by the I/O features. It is up to the system integrator to have enough knowledge about the interface to be able to achieve the required results.



Important –Lantronix and Vodafone do not offer any further advice on the external wiring requirements or wiring to particular sensors, and will not be responsible for any damage to the unit or any other device used in conjunction with it. Using outputs to control high voltage equipment can be dangerous. The integrator must be a qualified electrician if dealing with mains voltages controlled by this unit.


Open Collector Output driving a relay

Any output can be configured to control a relay. This is an example where the transistor will supply the ground terminal of the solenoid. External voltage is supplied to the other side of the solenoid.

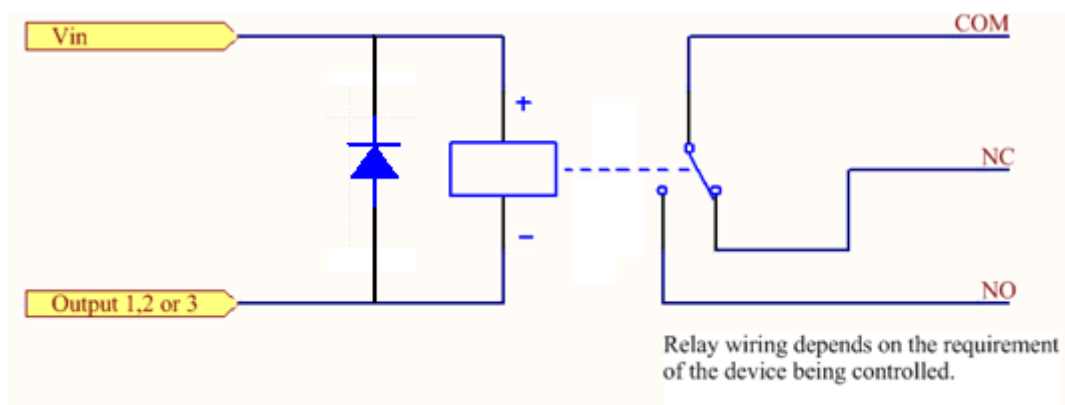


Logic level Output

An output can be used with the pull up resistor to provide a logic level output which would be suitable to control an external digital device.

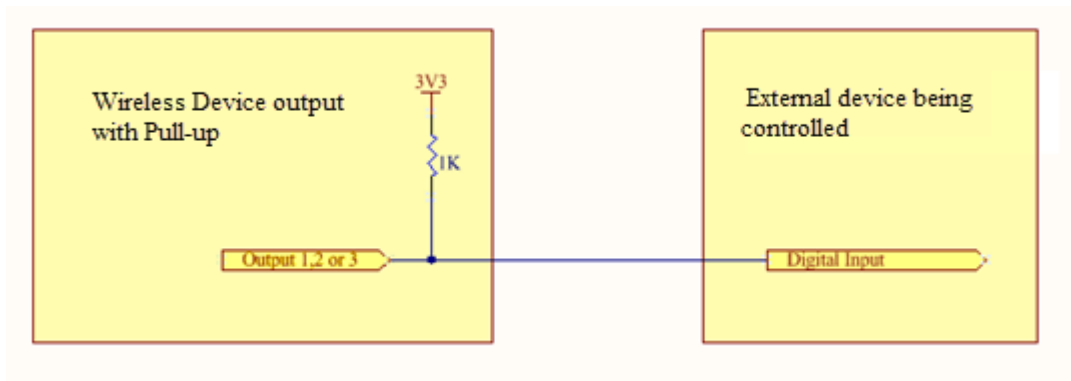

LED Output


An LED can be controlled by simply providing an open collector ground to an externally powered LED Resistor value and Voltage will need to suit the LED type used. Alternatively, an LED can be powered using 8V2 via 1K resistor. The suitability of the LED will need to be investigated.

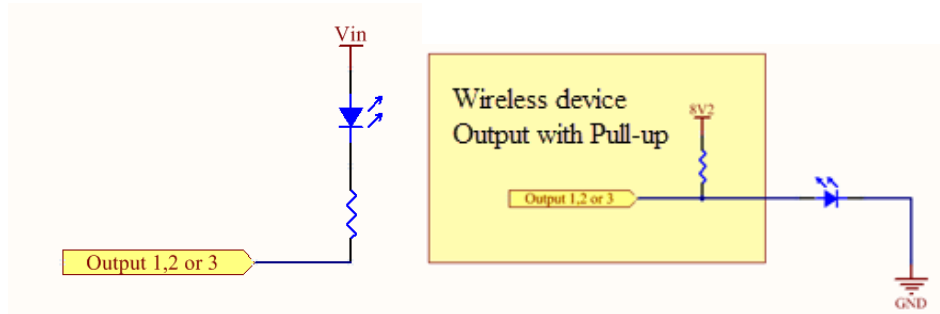


Digital inputs


There are several ways to connect a digital input. A digital input can be anything from a simple switch to a digital waveform or pulses. The unit will read the voltage in as an analogue input and the software will decode it in a certain way depending on your configuration.

Below is a contact closure type input, which is detecting an Earth. Pull up is activated for this to work.

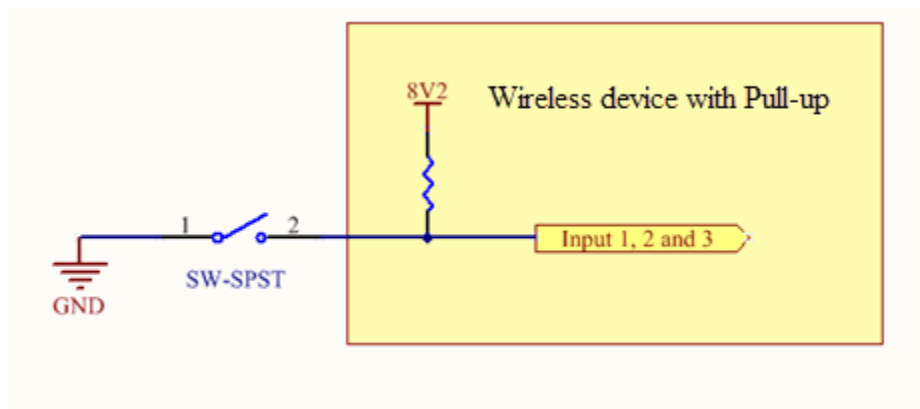


The following input detects an input going high. The turn on/off threshold can be set in the software.

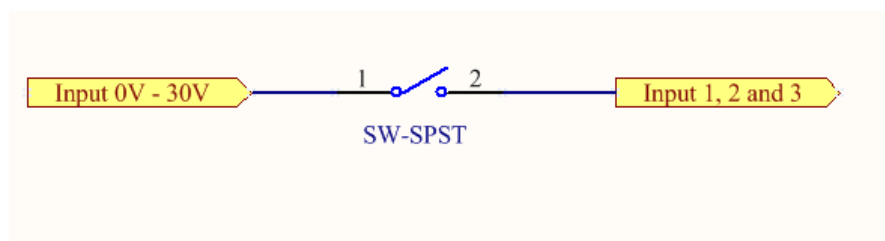

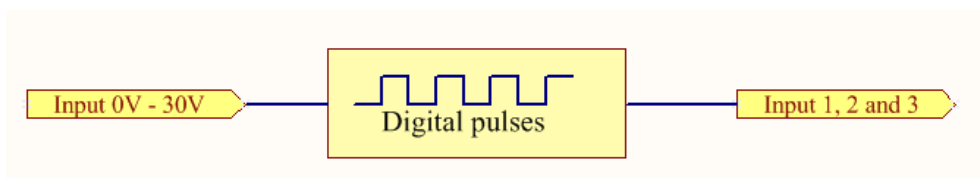


NAMUR Sensor

A NAMUR sensor is a range of sensors which conform to the EN 60947-5-6 / IEC 60947-5-6 standards. They basically have two states which are reflected by the amount of current running through a sense resistor.

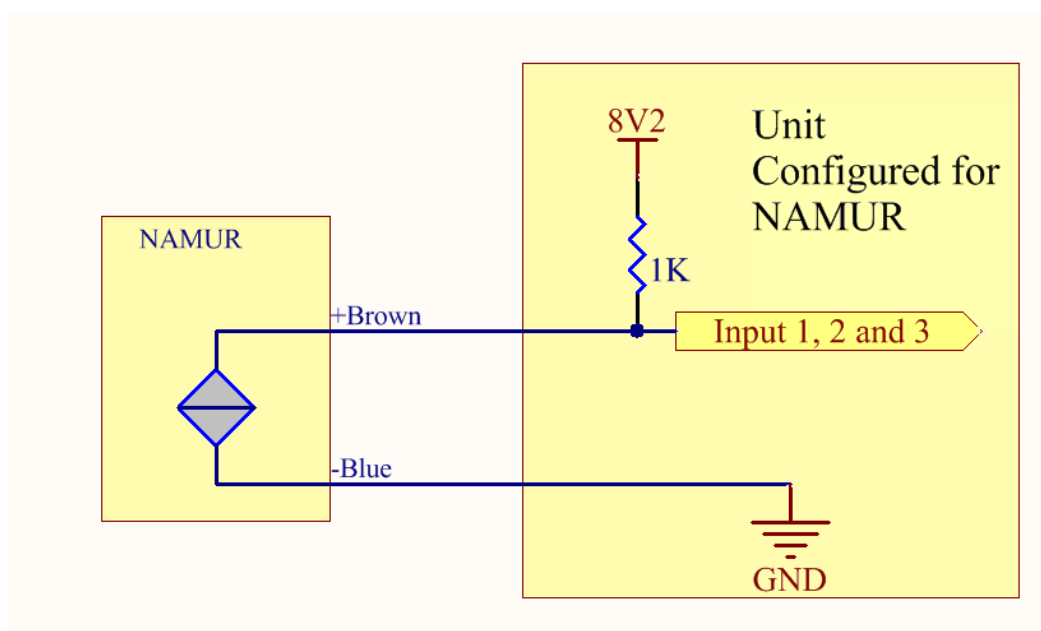


Analogue Sensor with Voltage output

There are various analogue sensors that connect directly to the unit which can provide a voltage output. These would require an external power source which may or may not be the same as the unit itself. The voltage range they provide can be between 0V and 30V. Some common sensor output ranges include 0V to 10V. These would work on the unit, The pull up resistor is not activated in this case.

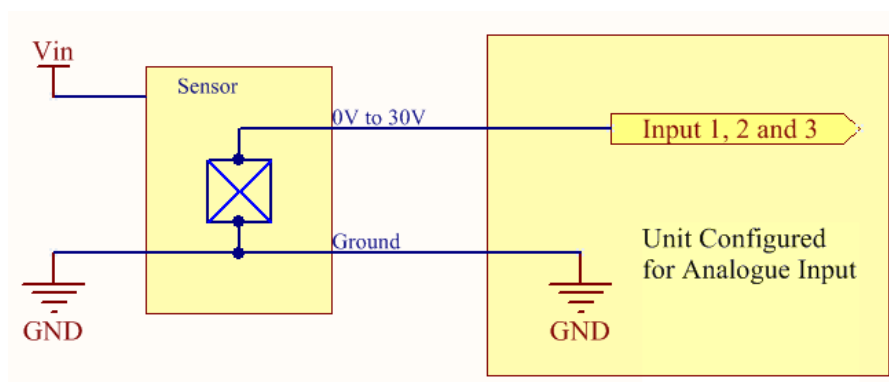


Analogue Sensor with 4 to 20mA output

Another common type of sensor type is the 4-20mA current loop sensor. It provides a known current through a fixed resistor, usually 250 ohms thus producing a voltage of 0v to 5V at the input. The sensor would require an external power source which may or may not be the same as the unit itself. It will also require an external resistor. The internal pull up resistor is not activated.

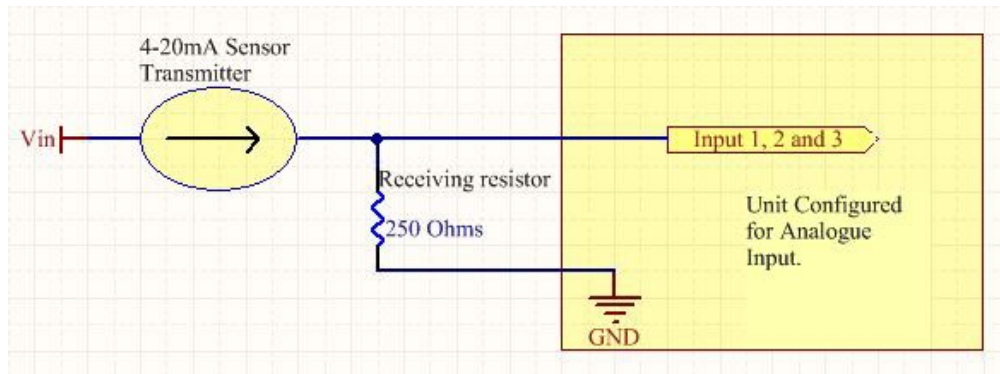


Analogue Sensor with Thermistor

Some sensors work by changing resistance due to a change, such as temperature, light etc. These may be wired up to an external or internal power source and the resistance can be read into the analogue signal. This will require some software calibration like scaling or offset to map the voltage received to the sensor resistor value. An example below shows the internal pull-up voltage and 1K resistor activated. The voltage received depends on the combination of resistors and the value of the resistance of the sensor itself.

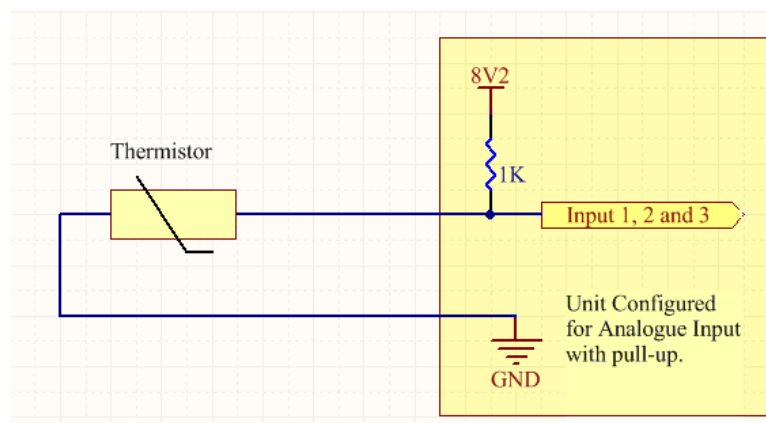


System Example –Solar powered Router with battery backup

The previous examples of wiring can be used to come up with a system. The following test case is an example of how the I/O's can be used to enhance a simple router setup.

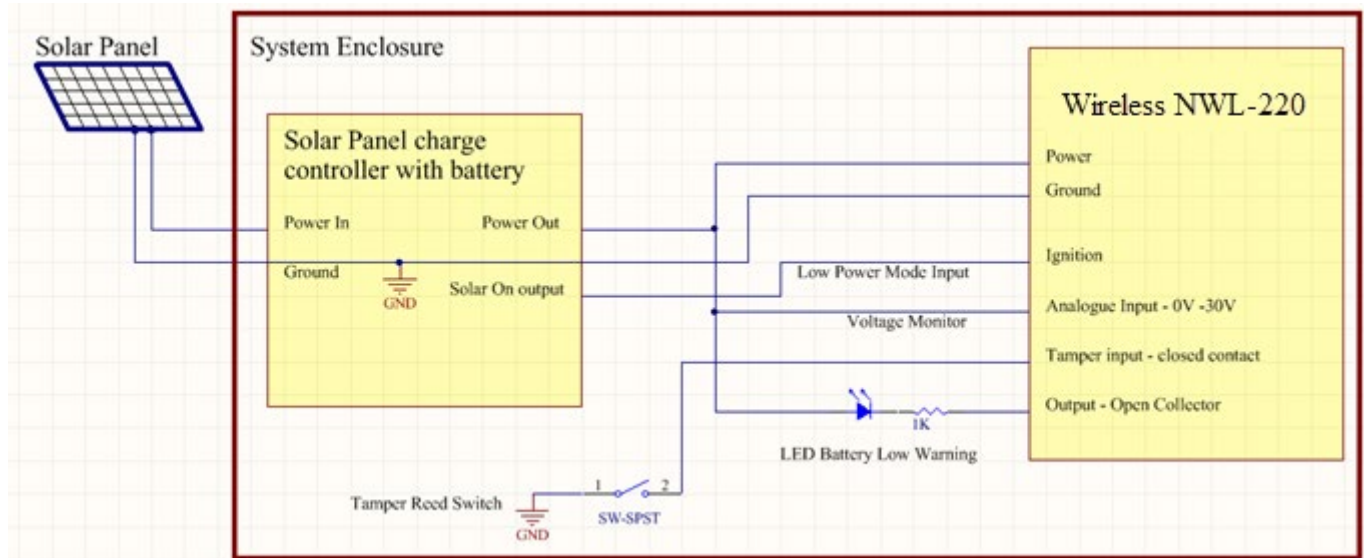

Power detection (Ignition) input

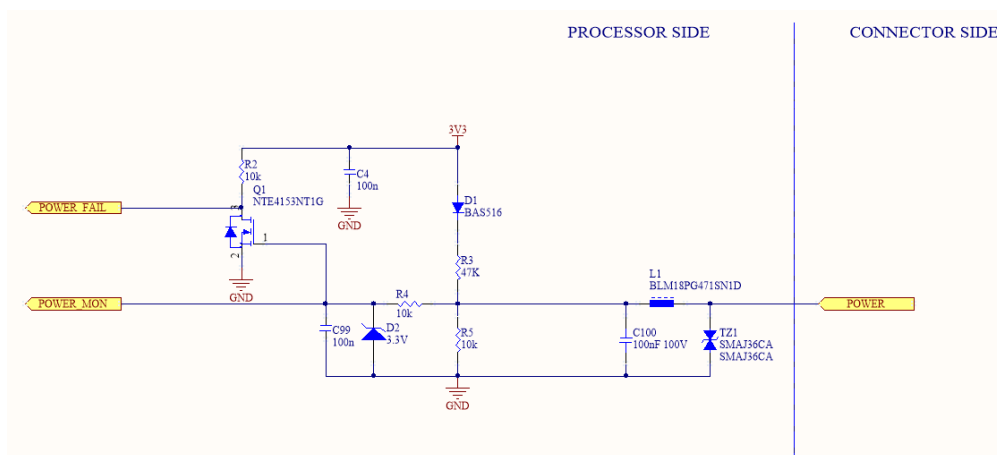

The Power detection or Ignition input will detect the presence of three states from the connector side (outside world). It will detect three states, those being High, Low and Unconnected (floating).

The detection uses both analogue and digital inputs to the microprocessor.

This is the “LOW” state:

- If input voltage at POWER port is less than 0.5V the transistor Q1 is shut, POWER FAIL is asserted high advising micro that no Backup Power is present on POWER port.

This is the “Floating” state:

- If voltage at POWER port is 0.5-3V POWER FAIL signal de-asserts but POWER MON signal can be measured by ADC of micro and advise the system that there is little or no connection to the unit.

This is the “HIGH” state:

- If voltage at POWER port is higher than 3.3V (which normally is an indication of presence of decent power source), the POWER FAIL is still de-asserted, the POWER MON will measure from 3.3V up to whatever voltage is detected. The maximum detection voltage is 30V and clamps to anything above 36V.

The states can be adjusted in software to fine tune the transition points between the states.

Open Source Disclaimer

This product contains Open Source software that has been released by the developers of that software under specific licensing requirements such as the “General Public License” (GPL) Version 2 or 3, the “Lesser General Public License” (LGPL), the “Apache License” or similar licenses. For detailed information on the Open Source software, the copyright, the respective licensing requirements and ways of obtaining the source code, please contact Technical Support by going to www.lantronix.com/technical-support/.

Safety and product care

Electrical safety

Accessories

Only use approved accessories.

Do not connect with incompatible products or accessories.

Connection to a car

Seek professional advice when connecting a device interface to the vehicle electrical system.

Distraction

Operating machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using the device in a vehicle can cause distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of mobile communication devices while driving.

Product handling

You alone are responsible for how you use your device and any consequences of its use.

You must always switch off your device wherever the use of a mobile phone is prohibited. Do not use the device without the clip-on covers attached, and do not remove or change the covers while using the device. Use of your device is subject to safety measures designed to protect users and their environment.

Always treat your device and its accessories with care and keep it in a clean and dust-free place.

Do not expose your device or its accessories to open flames or lit tobacco products.

Do not expose your device or its accessories to liquid, moisture or high humidity.

Do not drop, throw or try to bend your device or its accessories.

Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.

Do not paint your device or its accessories.

Do not attempt to disassemble your device or its accessories, only authorised personnel must do so.

Do not expose your device or its accessories to extreme temperatures. Ensure that the device is installed in an area where the temperature is within the supported operating temperature range:

- Class A: -30°C to +70°C
- Class B: -40°C to +85°C (with possible performance deviation)

Do not use your device in an enclosed environment or where heat dissipation is poor. Prolonged use in such space may cause excessive heat and raise ambient temperature, which will lead to automatic shutdown of your device or the disconnection of the mobile network connection for your safety. To use your device normally again after such shutdown, cool it in a well-ventilated place before turning it on.

Please check local regulations for disposal of electronic products.

Do not operate the device where ventilation is restricted

Installation and configuration should be performed by trained personnel only.

Do not use or install this product near water to avoid fire or shock hazard. Avoid exposing the equipment to rain or damp areas.

Arrange power and Ethernet cables in a manner such that they are not likely to be stepped on or have items placed on them.

Ensure that the voltage and rated current of the power source match the requirements of the device. Do not connect the device to an inappropriate power source.

Small children

Do not leave your device and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the device.

Your device contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

Demagnetisation

To avoid the risk of demagnetisation, do not allow electronic devices or magnetic media close to your device for a long time.

Avoid other magnetic sources as these may cause the internal magnetometer or other sensors to malfunction and provide incorrect data.

Electrostatic discharge (ESD)

Do not touch the SIM card's metal connectors.

Air Bags

Do not place the device in the area near or over an air bag or in the air bag deployment area

Mount the device safely before driving your vehicle.

Emergency & other situations requiring continuous connectivity

This device, like any wireless device, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless device for emergency communications or otherwise use the device in situations where the interruption of data connectivity could lead to death, personal injury, property damage, data loss, or other loss.

Device heating

Your device may become warm during normal use.

Faulty and Damaged Products

Do not attempt to disassemble the device or its accessory.

Only qualified personnel should service or repair the device or its accessory.

If your device or its accessory has been submerged in water or other liquid, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorised service centre

Interference

Care must be taken when using the device in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a device and a pacemaker to avoid potential interference with the pacemaker.

Hearing aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical devices

Please consult your doctor and the device manufacturer to determine if operation of your device may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft, if your device offers a 'flight mode' this must be enabled prior to boarding an aircraft.

Interference in cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of devices in their vehicles unless an external antenna is included in the installation.

Explosive environments

Petrol stations and explosive atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your device or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting caps and areas

Turn off your device or wireless device when in a blasting area or in areas posted turn off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.