



vSLM/SLM - MIGRATION PROCEDURE TO vSLM 4.x.x.x

Restoring your current vSLM configuration on the new vSLM 4.x.x.x (Note: Restoring configuration to vSLM 4.x.x.x is only supported for vSLM versions 3.4 and above)


1. Install vSLM 4.x.x.x following the **vSLM Installation Guide** based on your platform.
2. Follow the **vSLM Perpetual License Activation Guide** to convert the trial version to the full version.
3. Remove any SLC 8000 or SLB 882/8824 if they had previously been added.
4. Save the configuration file (vSLM/SLM 3.4 and above) to an external drive of your choice by selecting **To Client** under **Services** → **Maintenance**.

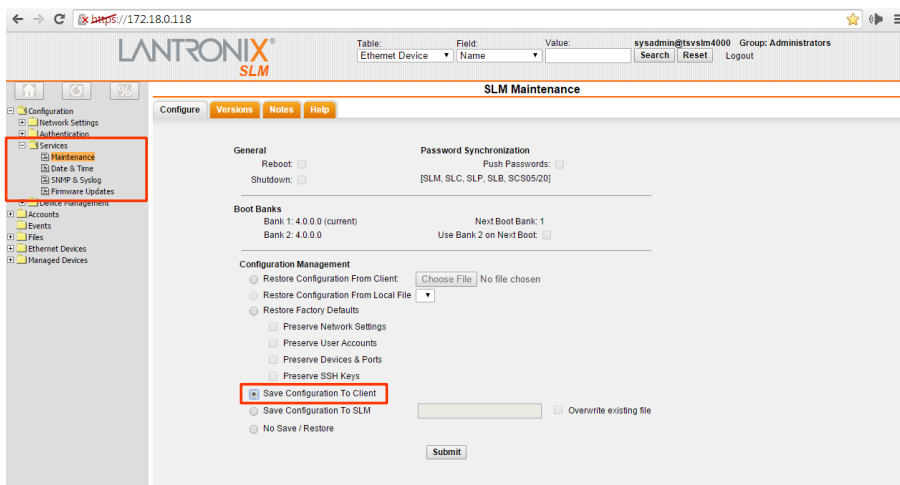

5. Shut down the previous version of vSLM.

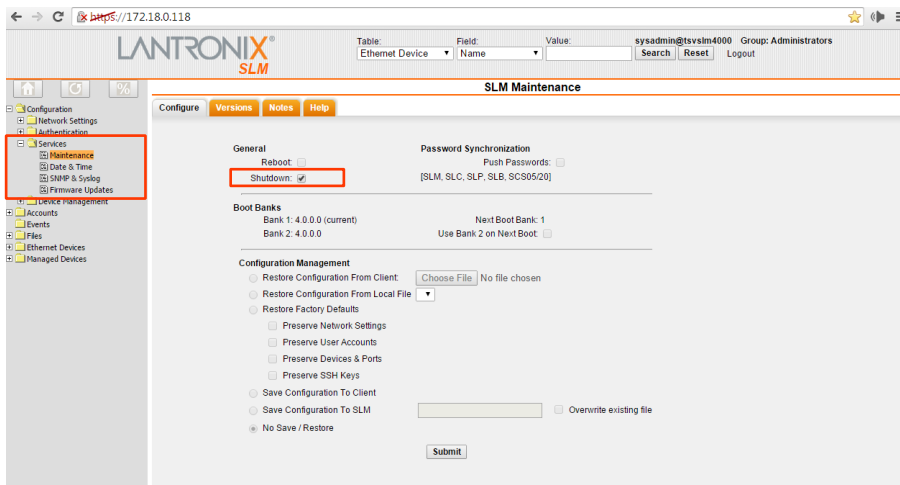

6. Power on vSLM 4.x.x.x and **Restore Configuration From Client** under **Services** → **Maintenance**.

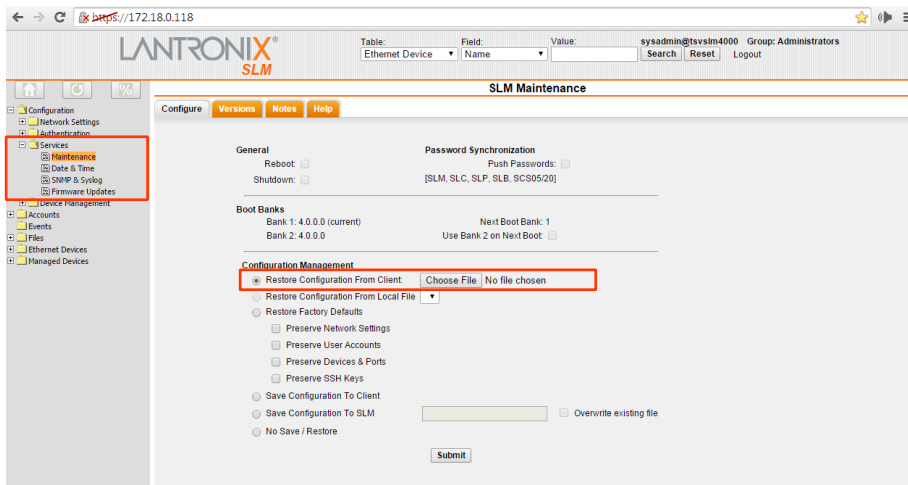

7. Establish a Secure Channel session to each SLC 8000 and SLB 882/8824 by clicking **Secure Channel** for each unit. Rediscover and detect all SLC 8000 and SLB 882/8824 units.



8. vSLM 4.x.x.x is now ready to use. For further instructions please refer to the **vSLM User Guide**.